

# INSTALLATION INSTRUCTIONS FOR # 1737-1

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.  
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.**

## Assembling The Fixture (See Fig.1)

1. Carefully unpack your new fixture and put all the parts on a clear area. Make sure not to misplace any parts which are necessary for installation.
2. Shut off the power supply at the fuse box or circuit breaker box. Remove the old fixture from the wall, including the old Crossbar.
3. Thread the stem with hex nut (F) into the coupling (I) and lock it in place tightly by hex nut;
4. Slide the tube (G), cap (E), tube (C) over the stem (F) into order, then secure with knurled nut (B);
5. Thread the fixture loop (A) onto stem (F) into tightly;
6. Assemble the glass diffuser (L), rubber washer (Z) onto the screw (K) and secure with ball nut (D);
7. Install the bottom end of rod (H) through the holes on the bracket (M) a little and attach the top end of rod (H) onto the cap (E) and secure with ball nut (D);
8. Thread the nipple with hex nut (O) into the coupling (N) and lock it in place with hex nut tightly;
9. Insert the center tube (P), check ring (Q), cushion ring (R), rubber washer (S), glass shade (T), and steel washer (U) onto the nipple (O) in order, then secure with hex nut (V);
10. Insert the cap (X) onto the nipple (O) and secure with finial (Y);

## MOUNTING THE FIXTURE (See Fig.2)

1. Thread Nipple into Loop until snug.
2. Thread other end of Nipple with Loop attached into crossbar until snug.
3. Place Lock Washer over end of Nipple protruding through crossbar and thread Hex Nut onto nipple until tight.
4. Take the crossbar assembly and mount to ceiling junction box with junction box screws. Tighten screws securely with screwdriver.
5. By measuring determine correct number of links needed for proper hanging height.
6. Attach one end of the chain to the chain link. Slip Lock Collar and Canopy over the chain.
7. Open the other end link of the chain and lift the fixture to attach to the ceiling loop, close the chain link.
8. Lace the fixture's wires through the chain links and pull until taut. Feed the fixture wires through the Loop and Nipple and pull until tight.

## CONNECTING THE WIRES (Fig. 3)

14. At this point, connect the electrical wire as shown in figure 3, making sure that all wire connectors are secured. Wrap the fixture ground wire around the ground screw of the crossbar and then tighten the screw. Connect the remaining fixture ground wire to the supply ground wire using a wire nut. Otherwise, connect the fixture Ground Wire directly to the crossbar using the Green Screw provided.
15. Tuck these wire connections neatly into the ceiling junction box and then raise the canopy all the way to the ceiling. Raise the Lock Collar and thread onto ceiling Loop protruding through canopy.
16. Install the lamp on per the fixture's specification. **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!) (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).** Your installation is now complete. Return power to the outlet box and test the fixture.

Fig.2

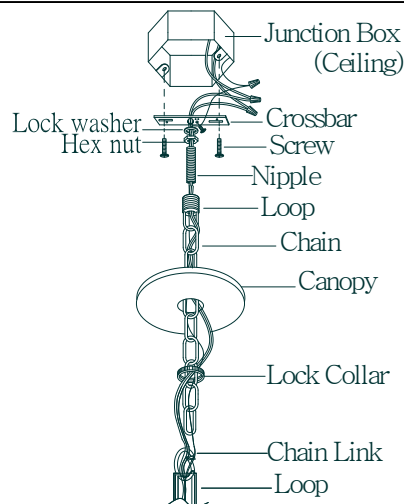


Fig.1


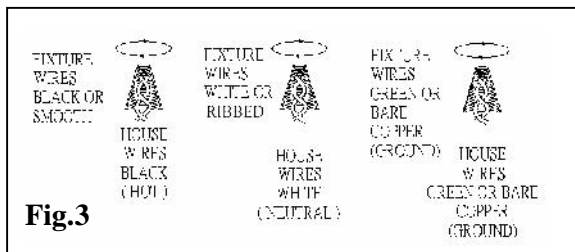


Fig.3

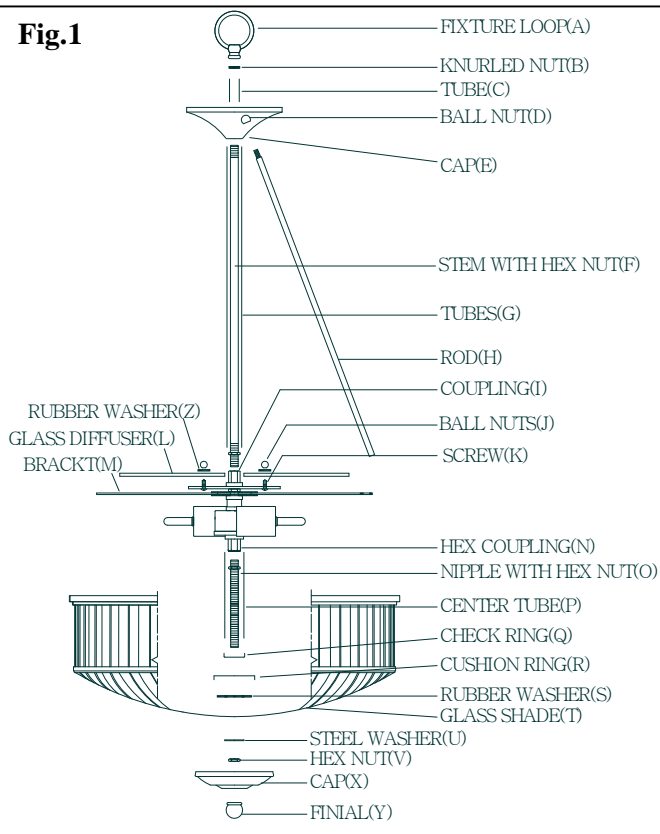

Notice: It is important to use proper chain pliers (not included) to OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.