

# ASSEMBLY

## PACKAGE CONTENTS

- 1 x Seat back
- 1 x Seat cushion
- 1 x Lumbar pillow / neck pillow
- 1 x Tilt Mechanism
- 2 x Seat back hinge covers
- 2 x Hinge cover rubber plug
- 1 x Gas Lift
- 1 x Chair base
- 5 x Caster Wheels
- 1 x M8 Allen / Philip screwdriver key
- 2 x Hinge Cover Sores
- 2 x Mounting Screws (provided as extras)

**1** Insert the chair wheels into the holes on the bottom of chair base. Make sure all the wheels are firmly inserted.



**2** Turn the wheelbase the right side up and install the gas lift with larger end of gas lift into the top central hole of the chair base.



**3** Slide the gas lift cover over the gas lift with larger end of gas lift cover facing down. **If you are assembling an HERO or LEGEND, proceed to Step 4a. For other models, skip to Step 4b.**




**4a** Remove the four screws from the seat cushion bottom using the M8 Allen key. Attach the basic-tilt mechanism to the bottom of the seat cushion using these four M8 screws. Ensure the mechanism is in the correct direction. Skip to Step 5.



# USAGE INFORMATION



**1D ARMRESTS**  
Press and hold the lever on the outside of the armrest to adjust height.

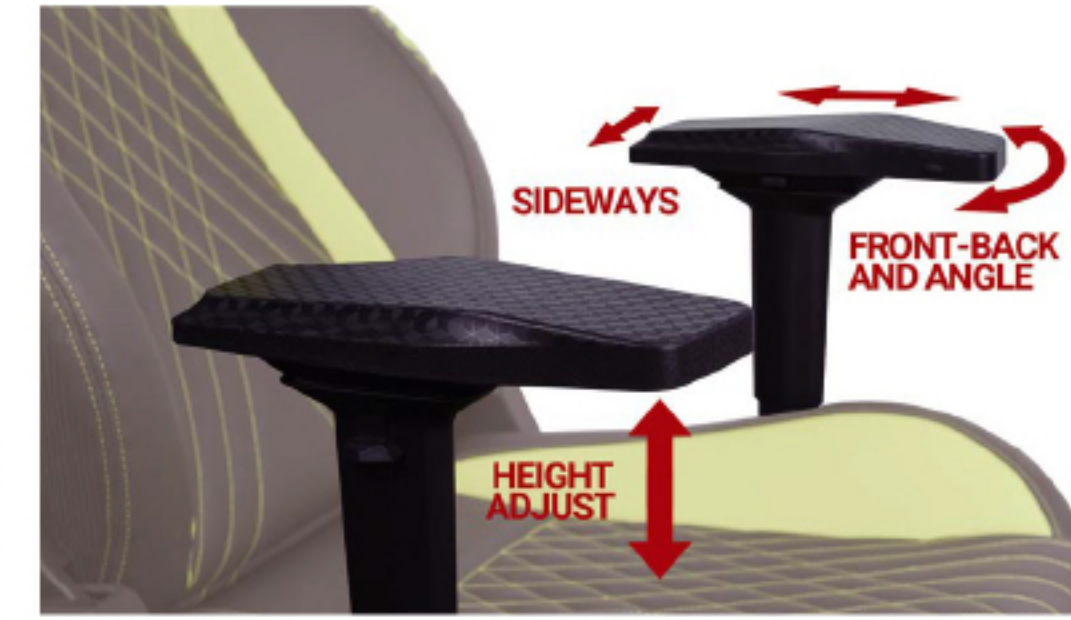

**4D ARMRESTS**  
Press and hold the 1) front button to adjust front, back, and angle, 2) inner side button to adjust sideways, and 3) lever on the outside of the armrest to adjust height.



**BASIC-TILT MECHANISM**  
Right lever (while seated): Pull up to adjust height. Push inwards/push outwards to lock/unlock the tilt mechanism.



**MULTI-FUNCTIONAL MECHANISM**  
Right lever (while seated): Push down/pull up to lock/unlock the tilt mechanism. Left lever (while seated): Pull up the adjust height.



**BACKREST RECLINE**  
Pull the lever FULLY and lean back slowly until desired angles is achieved, then slowly return the lever to its starting position. Ensure the lever locks back in place.



**PU Casters**  
Durable PU casters that enable smooth movement in all directions. The PU rubber coating is friendly towards most kinds of surfaces.

## SAFETY INFORMATION

- Sit in the center of the chair, with your back to the backrest.
- Do not sit at the front edge of the chair.
- Do not push down on the backrest when a person is reclined.
- 90°-155° safely angle adjustable backrest
- Do not place all your weight on the backrest only.
- Do not use the chair with more than one person.

The recommended weight load for 90kg (200lbs) for the HERO series, 136 kg (300lbs) for the LEGEND series, and 180 kg (400 lbs) for the GLADIATOR, DEFENDER and COMMANDER series. The chair should only be used normally and in a non-abusive manner. For warranty information, please visit the Warranty Policy on our website.

**4b** Remove the four screws from the seat cushion bottom using the M8 Allen key. Attach the multi-functional mechanism to the bottom of the seat cushion using these four M8 screws. Ensure the mechanism is in the correct direction. Proceed to Step 5.



**5** Place the seat onto the completed chair base by inserting the gas lift, cylinder into the center hole in the seat control unit. Make sure the seat is firmly pressed before using the chair. **CAUTION: Please remove the red cap before you install the gas lift.**



**6** Carefully tilt the chair upwards while holding the wheelbase and position it upright.



**7** Remove the four M8 screws that are pre-installed in the backrest using the Allen key.



**8** Align the backrest with the bracket on the right side of the chair. Attach the backrest using the M8 screws. Tighten all 4 screws fully using the Allen key.



**9** Attach the left and right cover cap onto the recline adjuster with the screws.



**10** Insert the rubber plugs once the covers are fastened.



**11** Attach the neck pillow through the holes in the neck area and fasten the buckle. The bottom strap of the lumbar pillow will go through the opening between seat cushion and seat back, the top strap will go through the holds of the seat back.



**12** Enjoy your seat, we've got your back.

