CAFP3T TV Wall Mount



Tilt Movement

This TV Wall Mount allows you to tilt your TV 0° to 10° up or down and sits 50mm from the wall



Compatible TV Size

This TV Wall Mount fits 32-65" (81-165cm) TV screens



Maximum Mounting Pattern

This TV Wall Mount has a mounting hole pattern up to 400x600mm (HxW)



Maximum TV Weight

This TV Wall Mount supports TVs weighing up to 50kg

A SAFETY FIRST

- 1. Installation of this TV Wall Mount will be easier with two people.
- 2. Some images in this guide may vary slightly from the actual components supplied.
- 3. Ensure this instruction manual is completely read and understood before attempting installation.
- 4. This TV Wall Mount MUST NOT be installed solely in plasterboard, fibre cement and similar surfaces.
- 5. This TV Wall Mount MUST be installed in sound supporting structures such as those made of timber, steel or masonry using appropriate fasteners.
- 6. The supporting structure must be capable of sustaining the combined weight of the TV Wall Mount and the display otherwise the structure must be reinforced.
- 7. The fasteners supplied in this hardware pack allow for fixing into timber and masonry only. If installing into a supporting structure made of steel, appropriate fasteners must be used and sourced from an appropriate supplier.
- 8. Use appropriate tools and safety equipment and ensure adequate ventilation during installation.
- 9. If uncertain about any aspect of installation, contact The Crest Company or an installation professional.
- 10. Please retain these instructions for future reference.

Hardware Kit Contents

ITEM	DESCRIPTION		QTY	ITEM	DESCRIPTION		QTY
Α	Lag Bolt	MINIMIN	6	I	M6 x 15mm Bolt		4
В	Concrete Anchor		6	J	M8 x 30mm Bolt		4
С	Multi-sized Washer	0000	4	K	M8 x 15mm Bolt		4
D	Spacer	0	4	L	Wall Plate		1
Е	D8 Washer		6	М	Left Mounting Arm		1
F	M5 x 30mm Bolt		4	N	Right Mounting Arm		1
G	M5 x 15mm Bolt		4	0	Wall Mount End Caps	Oac D	2
Н	M6 x 30mm Bolt		4				

Tools Required

DRYWALL INSTALLATION (TIMBER SUPPORTS):

- Adjustable spanner/socket set
- Philips head screwdriver
- Power drill
- High speed 6mm drill bit
- Stud finder
- Pencil

MASONRY INSTALLATION:

- Adjustable spanner/socket set
- Philips head screwdriver
- Power drill with hammer function
- 10mm masonry drill bit
- Pencil
- Hammer

Step 1: Attach Wall Plate to Wall

A. INSTALLING IN DRYWALL (TIMBER SUPPORTS)

WARNING: If attaching this TV Wall Mount using this method, you MUST spread the Wall Plate across 2 wall studs. This TV Wall Mount will not fit on a wall if the distance between 2 studs is greater than 450mm. Wall studs can be 450mm or 600mm apart depending upon the position of the wall and the geographical State you live in. The Crest Company will not accept any damages that may occur if only 1 stud is used.


- 1. Locate centre of 2 adjacent timber studs using a stud finder.


 (NOTE: You must use the centre of the stud to avoid cracking or splitting the timber during installation).
- 2. Mark 4 fixing holes over stud centres using the Wall Plate as a guide position 2 at either end of the Wall Plate (see Figure 1). Ensure plate is level using the built-in spirit level.
- 3. Pre-drill holes to a minimum depth of 50mm using a high speed 6mm drill bit. If installing in hardwood, larger diameter and deeper holes may be required.
- 4. Attach the Wall Plate using lag bolts (A) through washers (E). Do not over tighten.


B. INSTALLING IN MASONRY WALL


WARNING: Ensure you have a minimum of 35mm of actual concrete/brick thickness in the hole for the anchors. Do not drill into mortar joints. Installer must verify that the supporting surface will safely support the combined weight of the TV Wall Mount and TV. The Crest Company holds no responsibility for incorrectly installed TV Wall Mounts.


- 1. Mark 6 fixing holes using the Wall Plate as guide 2 at either end of the mount and 2 centrally (see Figure 2). Ensure plate is level using the built-in spirit level.
- 2. Pre-drill holes to a minimum depth of 60mm using a 10mm masonry drill bit. Clean out holes.
- 3. Fully insert the concrete anchors (B) into the drill holes (see Figure 3). Tap in with hammer if required.
- 4. Attach the Wall Plate by inserting the lag bolts (A) through the flat washers (E) into each concrete anchor (B) (see Figure 4). Do not over tighten.
- 5. Insert Wall Mount End Caps on both sides of Wall Plate (see Figure 5).

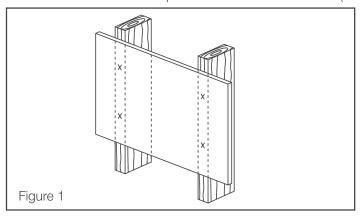

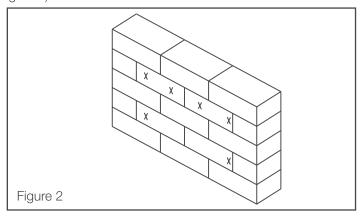

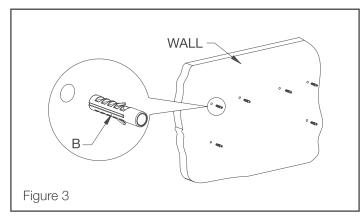


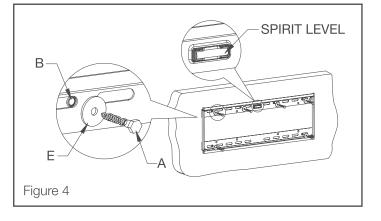

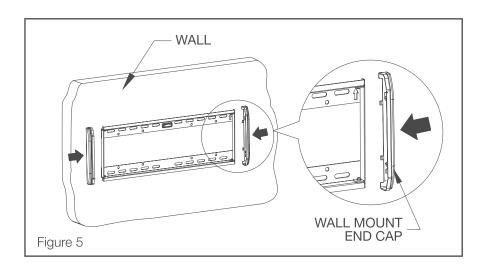

Step 2: Attach Mounting Arms To TV


- 1. Using a second person for assistance, lay your TV face down on something soft so as not to scratch the TV screen.
- 2. Check the back of your TV to find the appropriate mounting pattern.
- 3. Sort through the provided bolts (F to K) until you find the correct size that easily fits into the back of your TV and fits snugly (the bolt must turn at least 3 full turns, do not tighten). If you feel resistance stop immediately and select a smaller bolt. If no bolts fit you will need to go to your local hardware supplier to find the correct bolt size.
- 4. Gently put your mounting arms on the back of the TV so that the mounting pattern holes are showing through the mounting arm holes. If the back of your TV is curved or recessed you will also need to use a spacer (D) depending upon the amount of space you are trying to clear. If using spacers you will need to use longer bolts. Remember that the bolt needs to turn at least 3 full turns.
- 5. Using the correct mounting bolt size and length and multi-size washer (C), insert these to attach the mounting arms to the rear of the TV
 - (see Figure 6). To avoid damaging TV, do not over tighten bolts.
 - The Crest Company is not responsible for any damage caused by screwing the bolt too far into the back of the TV.

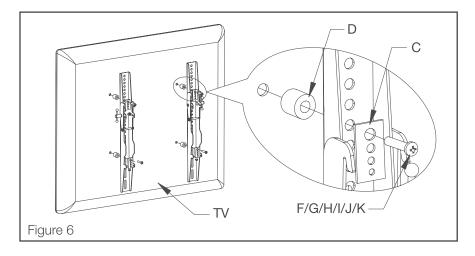


Step 3: Hook Arms over Wall Plate

- 1. Using a second person for assistance, carefully lift TV and hook both arms over the Wall Plate (See Figure 7).
- 2. You may now adjust the angle of your TV for the best viewing angle. Use the tilt adjusting bolts to adjust your TV to the desired angle between vertical and 10° down (see Figure 7).
- 3. Tighten safety bolts under each bracket to fix in place (see Figure 8).

Check your TV Wall Mount is secure and safe to use at regular intervals (at least every three months).

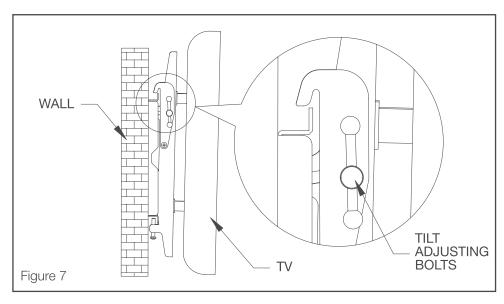

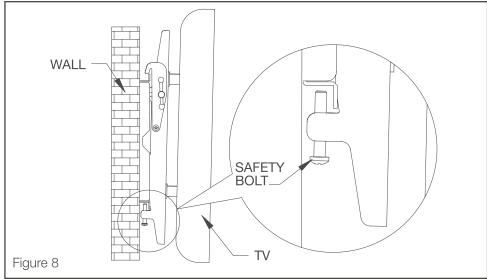

5 YEAR WARRANTY

Olbertz Holdings Pty Ltd ACN 010 003 933 trading as The Crest Company of 165 South Pine Road, Brendale, Queensland, 4500, Ph: 1800 812 261, www.crest.com.au, warrants that if this Crest product purchased by you from The Crest Company or a retail outlet is found by The Crest Company to be defective in workmanship or materials within 5 years of the date of purchase, The Crest Company will (at its election) either repair that product, replace the product, supply an equivalent product or pay the costs of repairing or replacing the product or acquiring an equivalent product.

This limited warranty will not extend to or cover any expenses associated with removing, demounting the original product or installing the repaired, replaced or minimited warrang will not extend to or cover any expenses associated with refronting the original product or installation of this components, you must bear these expenses. It also does not cover damage or loss resulting from intentional or unintentional misuse of, tampering with, alterations to or incorrect installation of this product or use of this product for purposes other than that for which it is designed or in a anner inconsistent with the product's instructions. This limited warranty also does not apply to damage or loss resulting from fair wear and tear or events beyond The Crest Company control including but not limited to natural disasters.

In order to claim under this warranty, you must contact The Crest Company and return to The Crest Company (via our nominated reply paid address) the product and its components and proof of purchase (including the date and location of purchase) so that The Crest Company can verify the defect and your purchase.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given by this warranty are in addition to other rights and remedies which you may have under a law in relation to the goods or services to which the warranty relates.

Proudly brought to you by:



PO Box 5658 Brendale QLD Australia 4500

Customer Support 1800 812 261 www.crest.com.au AUSTRALIAN OWNED 🖺