
DUALTRON

EAGLE

Personal Mobility

PRODUCT MANUAL



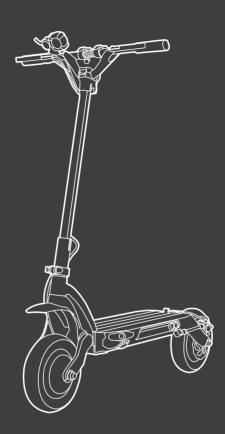

Scan the QR code to download the latest user materials and obtain the latest updates and safety instructions.




The dream of electric technology.


Pictures for reference only, subject to our existing products.



Diagram And Functions

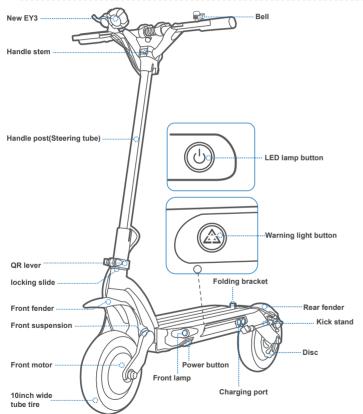

Handlebar Functions



Name	Function	Operation method
Driving mode selection button	Turn on ECO / TURBO mode	Switch modes through pressing the button.
Motor system selection button	Enable SINGLE/ DUAL drive mode	Switch modes through pressing the button.
Power button	Turn on/ off power	Press and hold the Power button to turn on/off the scooter. Press the button to adjust the speed gear.
Set button Settings		1.Press and hold the Set button to enter/exit ECO mode. 2.Press the button to switch battery voltage/ percent indication
Mode button	Mode selection	1.Press and hold the Mode button to enter/exit the mode setting, and automatically return to the main interface after 30s. 2.Press the the Mode button to switch ODO/time indication.(Time defaults)
Accelerator	Speed up	Pull the throttle to accelerate.



	Item	Parameter		
Product	Model	Dualtron eagle	eagle -ltd	
Battery	Battery Capacity	60V14Ah CN	60V24.5Ah LG	
	Range	45km	80km	
	Charging Ambient Temperature	0 to 40°C (Battery temperature exceeds 55°C,BMS start protection program.)		
	Battery Management System	Over-heating, short circuit, over-current, over-discharge and over-charge protection		
Rider	Max. load	120kg		
	Recommended Age	14–60 years old		
Display	Туре	New EY3 display(DUALTRON APP available)		
Motor	Motor Type	BLDC Hub Motor		
	Nominal Power	1000w*2	1100w*2	
Machine	Net Weight	30 kg		
	Max. Slope	Around 43%(23°)		
	Drive System	Single/dual dirve		
	Speed	25km/h		
	Length × Width × Height	1185x600x1200mm		
	Folded: Length × Width × Height	1185x600x505mm		
	Wheelbase	Approx.910mm		
	Ground Clearance	Approx.170mm		
	Traversable Terrain	Asphalt/flat pavement; obstacles < 5 cm; gaps < 5 cm		
	Operating Temperature	-5 to 45°C		
	Storage Temperature	-20 to 50°C		



DI.	Туре	Front and rear disc brake+Electric ABS	
Brake	Electric Brake	ABS&EBS (Indicating the battery temperature exceeds 55°C,BMS start protection program,ABS/EBS fails.)	
Charger	Input Voltage	100-120V/200-240V~	
	Max. Output Voltage	66.4V 1.75A	
Tire	Туре	10inch wide tube tire	
	Tire Pressure	50 psi	
	Material	Rubber	
Suspension	Туре	F&R suspension cartridge (replaceable)	
	Optional	(Default) Softest Medium soft Medium Medium hard Hardest	

*Disclaimer: this is not a legal opinion or legal advice. The information provided herein (including in the App) is for your convenience and information purpose only. It is not intended to cover every piece of law and/or regulation that may be applicable to this product. DUALTRON explicitly hereby disclaims any and all warranty and/or representation, express or implied, related to completeness, accuracy, up-to-date of such information. DUALTRON reserves the right but not obligation to correct, implement and/or update the information. You shall use the information at your own risk. It is your sole responsibility to learn and understand any and all the law and/or regulation, requirements, prohibition, restriction and/or limitation imposed by either law, government authority, court, private party or the others that may apply to your use of this product.

^{*}Theoretical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 25 km/h on average on pavement.

^{*}Typical Range: tested while riding with a full battery, 75 kg load, 25°C, at the speed of 50 km/h on average on pavement. (Some of the factors that affect range include speed, number of starts and stops, ambient temperature, etc.)

^{*}Max.Speed: tested while riding with a full battery,75kg load,25°C,straight road on flat road with no wind. (Some environmental factors can affect max speed,uneven roads, crooked roads, temperature, wind, etc.)





Accessories





Battery charger x1

Manual



Screw Cap x 2



Multitool x 1




screw x 2



Folding Bracket

Bluetooth Connection

APP Download Guide

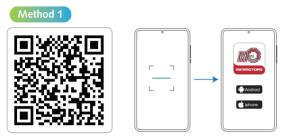

- 1.Scan the QR code to download the APP.
- 2.Choose the mobile phone system that suits you to install, and register / log in.




1.Search "DUALTRON" in the application and download it, and register / log in.

Pair the Bluetooth on the APP



Power on the scooter.

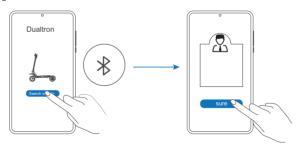


Click "Search vehicle" and pair with your scooter. * The scooter is connected to the Dualtron app when the Bluetooth symbol lights up.


Select "bind as owner".

(No one else can connect, only people authorized by you are allowed to connect. Authorizations are created on the app.)



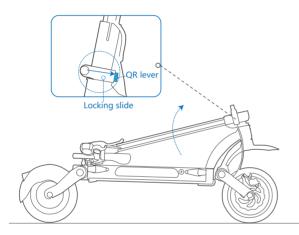


- ① Release the QR lever,raise the locking slide upwards, raise the steering tube, then lower the locking slide downward.
- ② Tighten the finishing screw properly to lock the QR lever so that the locking slide is firmly fixed in any direction, and check for looseness during use.

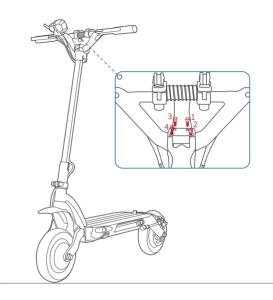

Attach the handlebar body and tighten the 4 screws.(When tightening the screw,the first step screw is 90% tight,you must tighten it diagonally,according to the order 1-4-2-3;The second step all screws are 100% tightened.)



1. Power on the scooter and choose the speed mode. * Please choose the speed mode before riding! Note:Speed mode can be choose via the Dualtron app.

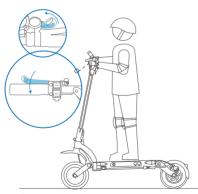

4. Slow down by releasing the throttle and squeezing brake levers.




2. Stand on the footboard with one foot and push off with the other foot to start gliding. *Make sure you have disabled SAFE mode.(SAFE mode setting via Dualtron app.Deactivate safe mode by squeezing brake lever.)



5. To turn, shift your body and turn the handlebar slightly.

* Please watch out for road conditions,

* Please watch out for road conditions, sufficient turning space is required.

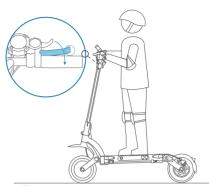

3. Put both feet on the footboard and stand stably. Pull the throttle to speed up.




⚠


When hard braking, serious danger or injury may occur. Maintain a moderate speed and look out for potential hazards.



Loosen the QR lever, push the locking slider inward and fold the handlebars down.

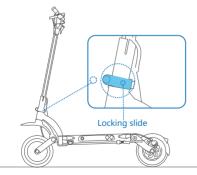


Lay the steering tube down while raising the locking slide.

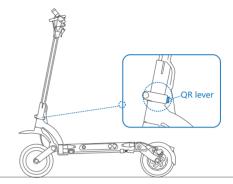

Loosen the QR lever and move the locking slide upward.

You must hold the steering tube with your hand to prevent falling down and hitting.

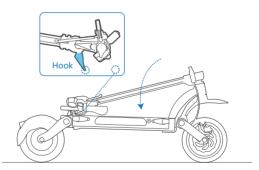

Lock the handlebar hook to the footrest.

_____ Ensure that lock the handlebar when lift scooter.

