

Folding door

with closing bar and magnetic holder

Scope of delivery:

Plastic folding door

1 x closing bar

1 x runner


Fastening screws

2 x handles with spring pins and magnetic holder

Before you begin assembling, check the scope of delivery and read the instructions carefully. The enclosed screws can be used for assembling wooden or plastic frames. If it is to be fixed to masonry or steel frames, corresponding screws and pins must be obtained as required.

1. Cut the height of the folding door


Measure the exact height of the door frame. Open the folding door and fit the runner onto the slider. Mark out the measured door frame height onto the folding door - from the top edge of the runner. The slider has to rest in the track. The folding door must be cut to approx. 5 mm shorter than the frame height, so that it does not touch the floor or carpet. Remove the crosshead screws from the bottom side of the door. The door should only be cut to size when opened and with the use of a back saw. After cutting, the removed screws can now be replaced.

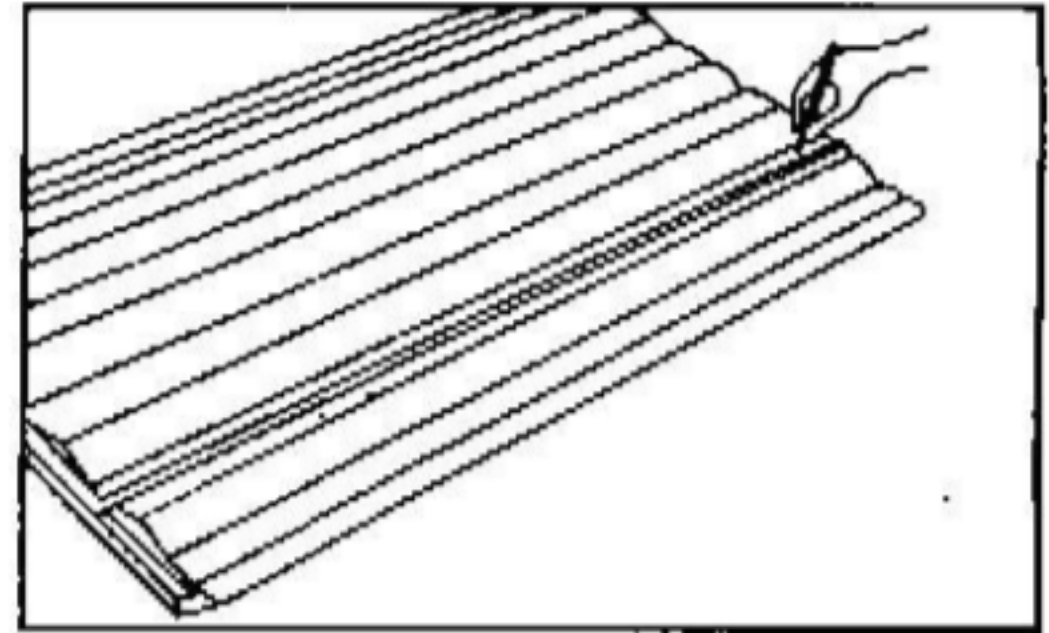

2. Cut and fix the runner

Measure the door frame width above. Cut the runner approx. 2-4 mm less than the measurement taken.

Attach the track to the centre of the upper door frame so that there is a gap of 1-2 mm from the side frames on both sides. Firstly fix the runner in the centre, using only one screw so that it can swivel outwards.

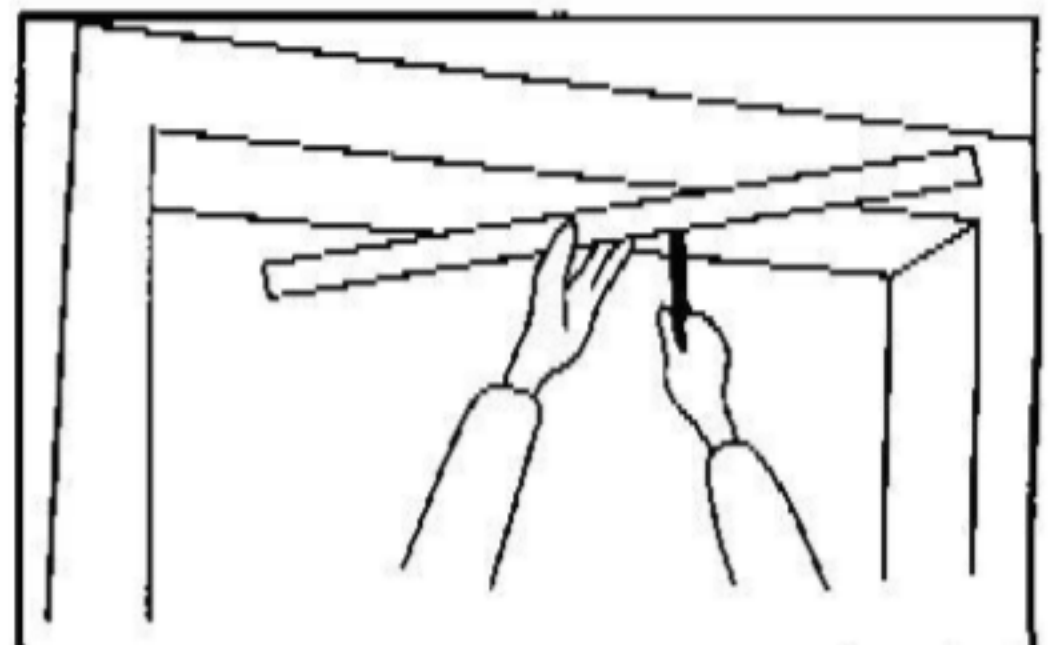


3. Insert the folding door, fix the panel

Make use of the closing bar, which is initially set to possible required lengths. The height measurement - from the lower edge of the runner to the floor - must thus be observed.

Hold the closing bar vertically under the runner and mark out the available holes onto the door frame.

Swivel the runner from the door opening and guide the panels into the track. Swivel the runner back into place and screw in tightly. Now screw the end panel to the door frame.

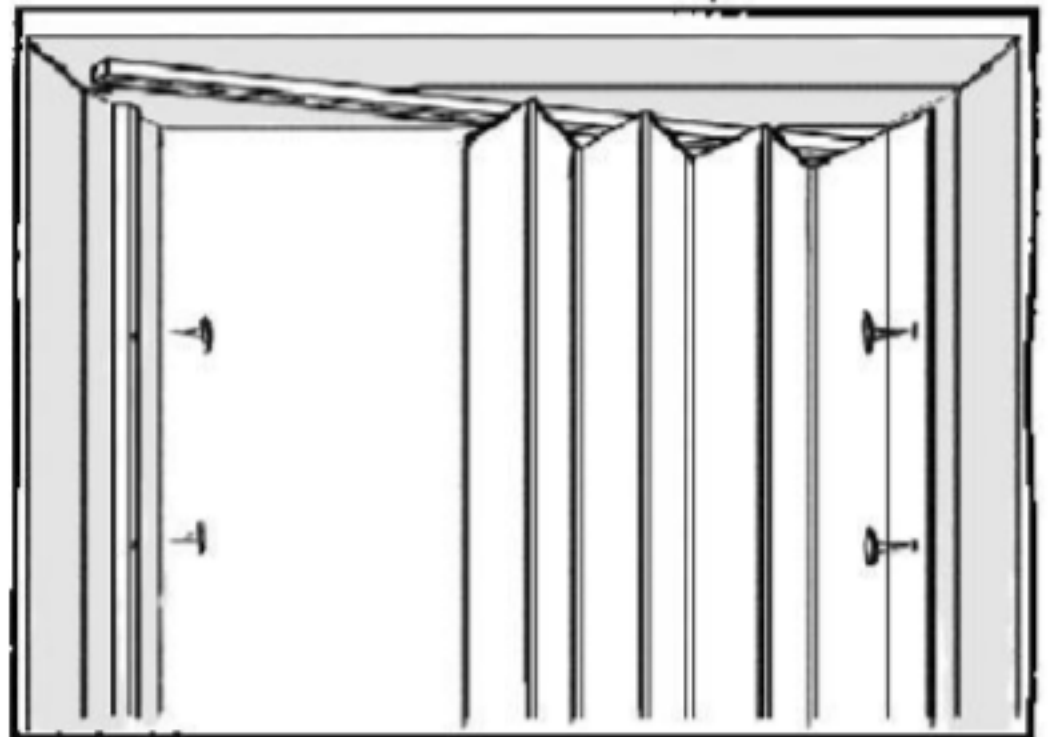


4. Assemble the closing bar, magnetic holder and handles

Screw the closing bar (as described in Position 3) to the door frame on the closing side of the door in a vertical position to the runner. Mark out the height gap of the magnet in the folding door onto the closing bar and fix using the long screws enclosed. Firmly insert the spring pins into the holes on the handles, then push through the available holes in the leading panel and affix the handle counter piece.

Cleaning and care: Occasional dusting with a duster is sufficient. Remove coarser dirt with a damp cloth and mild cleaning agents and then dry.

Do not use any scouring agents or solvent cleaners!

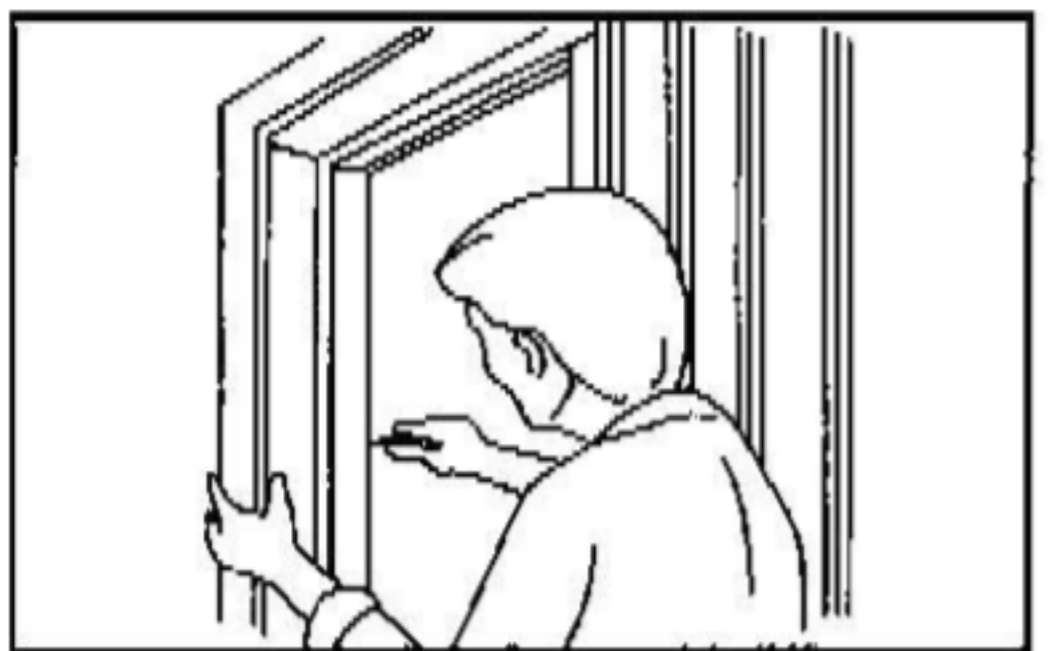

Instructions for the additional panels of the folding door

To attach the additional panels, remove the upper and lower fastening screws from the leading panel (door handle side) of the folding door, pull the panel down out of the guide and insert the additional panels.

Cut potential panels for the whole door (as described in the instructions for folding doors). Fix the panels again in reverse order with the enclosed screws.

PVC folding door

100x200 cm