




Model: AJ-PCN082
Anjou Aroma Diffuser
User Guide

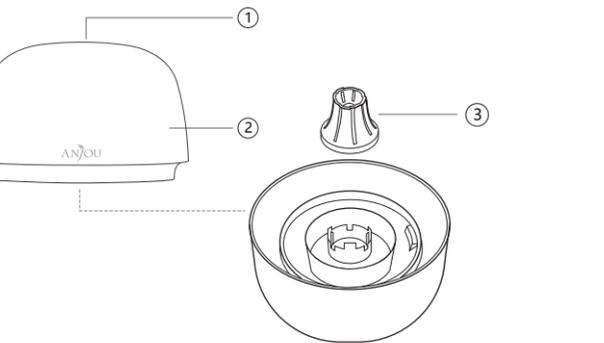


EN

Product Diagram

- ① Nozzle
- ② Tank Cover
- ③ Muting Cover
- ④ Essential Oil Tube
- ⑤ Water Tank
- ⑥ Drain Side

- ⑦ Timer Indicators
- ⑧ Base
- ⑨ Light Button
- ⑩ Timer Button
- ⑪ Power / Mist Button
- ⑫ Power Port

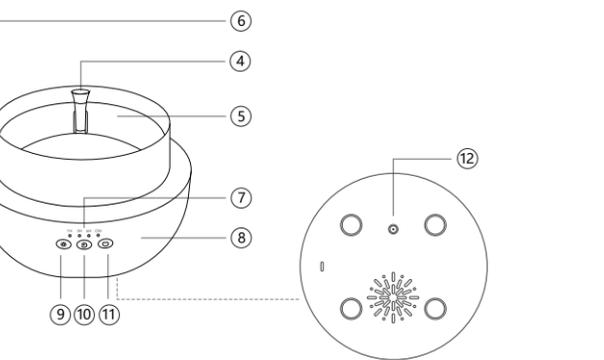

DE

Produktabbildung

- ① Zerstäuberdüse
- ② Tankabdeckung
- ③ Dämpfende Abdeckung
- ④ Röhrchen für ätherische Öle
- ⑤ Max. Wasserfüllstand
- ⑥ Seitenablauf

- ⑦ Timer
- ⑧ Basis
- ⑨ Lichttaste
- ⑩ Timer-Taste
- ⑪ Power- / Nebeltaste
- ⑫ Stromanschluss

EN

Package Contents


- 1 x Aroma Diffuser
- 1 x Power Adapter
- 1 x Cleaning Brush
- 1 x Essential Oil Tube
- 1 x User Guide
- 1 x Thank You Card

Specifications

Model	AJ-PCN082
Power Adapter	Input: 100-240V- 50/60Hz Output: DC 24V \approx 0.5A
Power	<10W
Working Time	>5h (High Mist) >8h (Low Mist)
Mist Output	60 ml / 2.0 fl. oz (High Mist) 30 ml / 1.0 fl. oz (Low Mist)
Water Tank Volume	300 ml / 10.0 fl. oz
Ultrasonic Frequency	2.4MHz

How to Use
Caution

1. Please add water to the tank first, then add essential oils up to the marking on the tube or until dispensing starts. If there's no fragrance, the water-oil balance may be off. Please add enough essential oil as instructed then.

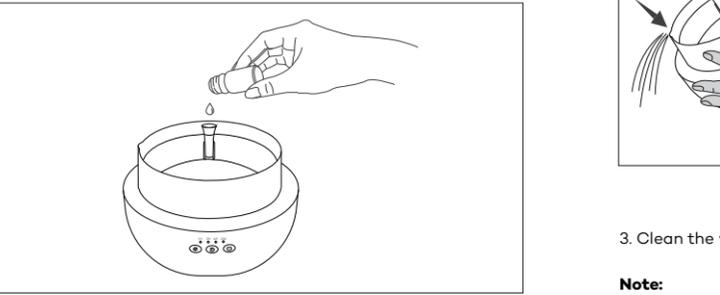


2. It is recommended to use purified or distilled water.

3. Cinnamon essential oil is of higher density and viscosity than that of water. When adding the cinnamon essential oil to the water, it will sink to the bottom. It is recommended that the essential oil be added directly on the water surface to accelerate diffusion.

Add and Drain Water


1. Remove the tank cover, add water into the tank no higher than the max water level. Add a few drops of essential oil into the tube until it spills out slightly. Put the tank cover back on.

2. Drain excess water via the drain side if necessary.

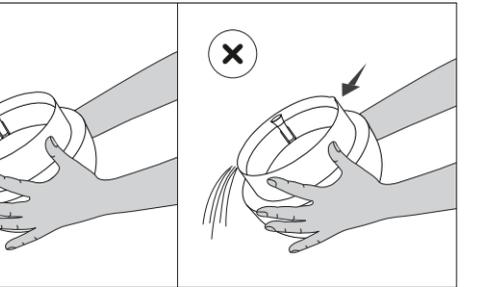

3. Clean the water tank with the included brush when grime builds up.

Note:
Never pour essential oils into the tube when there is no water inside the tank.

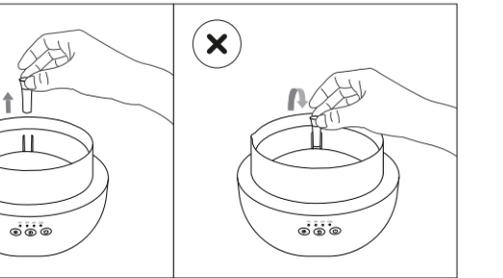

Operations and Functions

Connect to a power source. Once connected, the diffuser will enter standby mode. Please make sure there is enough water inside the tank.

Functions	Operations
Mist ON	High Mist: Press once to enter the default high mist mode. Two beeps will sound and the ON indicator will light up.
	Low Mist: Press again to enter low mist mode with one beep sound.
	Switch between High & Low Mist: Press again to resume High Mist. Switch between the two modes with each press.
Mist OFF	Press and hold for 2 seconds to turn off the mist.
Timer Setting	Timer Setting: When the unit is on, press to set 1 / 3 / 6 hours timer. The corresponding indicator will light up.
	Timer OFF: When the timer is on, press and hold for 2 seconds to turn off the timer at any time.
Light Mode Setting	Automatic Color Changing: Press once to enter automatic color changing mode where 7 colors will be cycled through.
	Select Color: Press again to stay on the current color. Keep pressing to cycle through different colors.

Low Water Protection

The diffuser will turn off automatically when water inside the tank has been depleted. Once water is added back into the tank, the diffuser will resume standby mode.

How to Clean
IMPORTANT!
Please unplug the unit before cleaning!

Regular Cleaning

- 1) Empty the tank from the water outlet.
- 2) Add 3-5g (approx. one teaspoon, based on scale of the residues) baking soda / NaHCO₃ to the tank.
- 3) Fill the tank halfway full with warm water (200-250ml / 6.76-8.45fl oz, 50°C / 122°F), stir it to fully dissolve.
- 4) Soak for 3-5mins, wipe down the tank and tank cover using a small brush or soft cloth with baking soda solution. (For better cleaning, remove the muting cover and wipe it down thoroughly).
- 5) Drain the solution and rinse the tank under tap water.
- 6) Rub the inside and outside dry with a dry towel or clean cloth.
- 7) Wipe off the soda residues if any.

Deep Cleaning

- You are recommended to deep clean your diffuser once a month or when the mist output is low due to grime build-up.
- 1) Empty the tank from the water outlet.
 - 2) Add 2-3 teaspoons of baking soda / NaHCO₃, or 2-3 slices of fresh lemon to the tank.
 - 3) Fill the tank halfway full with warm water (200-250ml / 6.76-8.45fl oz, 50°C / 122°F), stir it to fully dissolve.
 - 4) Soak for about half an hour.

- 5) Thoroughly clean the grime at the bottom and atomizer (slot at the center) of the tank with a small brush.
- 6) Wipe down tank cover using a small brush or soft cloth with baking soda solution. (For better cleaning, remove the muting cover and wipe it down thoroughly).
- 7) Drain the solution and rinse the tank under tap water.
- 8) Wipe off the soda residues if any.
- 9) Rub the inside and outside dry with a dry towel or clean cloth.

Notes:

- 1) You may use dishwashing detergent when baking soda is unavailable. But it works better for oil removing instead of odor and mineral buildup.
- 2) Do not rinse the base directly with water; try to avoid wetting the buttons, light holes, air inlets and underneath to avoid short circuit.
- 3) It is not recommended to clean the unit with white vinegar since its direct and indirect contact with the atomizer will damage it permanently.

Troubleshooting

No.	Problem	Solution
1	The LED light is not turned on when powered on.	Press the Light Button to turn on the light.
2	The unit stops misting with the light flashing red as over-temperature alarm.	<ul style="list-style-type: none"> • Turn off the unit. • Pay attention to the environmental temperature and place the unit in a well-ventilated place to cool down. • Do not add warm water into the tank.
3	The mist output is becoming low.	<ul style="list-style-type: none"> • Keep the water clean or use purified or distilled water. • Clean the atomizer regularly.
4	Mist level is becoming low, and finally stops misting.	Add water if there is not enough water in the water tank.
5	Scales in the water tank and water reservoir	Clean the unit as instructed in the Cleaning and Maintenance section.
6	Strange odor after long idle time	Clean the unit thoroughly before use.

No.	Problem	Solution
7	Previously used essential oil smell remains in the unit.	Clean the unit thoroughly before use.
8	Diffusion not enough	Turn on the High Mist mode.
9	Wet table surface	The mist level is too high for the small space. Please lower the mist level.
10	Fragrance not strong enough	Add the essential oil into the tube until it spills out slightly.
11	No fragrance after adding cinnamon essential oil	Cinnamon essential oil is of higher density and viscosity than that of water. It is recommended that the essential oil be added directly on the water surface to accelerate the diffusion.
12	Failed to select one color	Press the Light Button once to enter automatic color changing mode. Press it again to stay on the current color. Keep pressing to cycle through different colors.

