Laser EasyRig 8:1 Downhaul Rigging Guide




Thank you for purchasing from SoutheastSailboats / ropesforboats. Hopefully these rigging instructions are self explanatory. If you have any problems please contact me at sales@southeastSailboats.co.uk or sales@southeastSailboats.co.uk or sales@southeastSailboats.co.uk or sales@ropesforboats.co.uk or sales@astsailboats.co.uk or sales@astsailboats.co.uk or sales@southeastsailboats.co.uk or sales@southeastsailboats.co.uk or sales@southeastsailboats.co.uk or sales@southeastsa

The EasyRig downhaul avoids extra forces on the kicker fitting and is rigged without having to undo any pins or tie knots.

The system comprises two parts:

- Part 1 Primary line with two Harken 29mm T2 blocks
- Part 2 Lower block assembly with Harken 29mm T2 block, strop and secondary control line

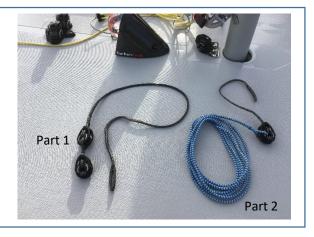


Step by Step Rigging Instructions:

Step 1 – Start by passing the loop on the end of the primary (Part 1) through the sail clew cringle.

Step 2 – Pull the loop on the end of the primary line down to the level of the kicker and thread the loop on the end of the lower block assembly strop through it.



Step 3 – Pass the lower block assembly strop around the mast under the kicker tang

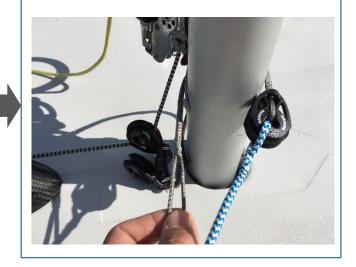

Step 4 – Thread the end of the secondary control line and the block through the loop on the lower block assembly strop.



Step 5 – Route the secondary control line through the three blocks – it should look like the photos below.

