

# Handle Replacement Instructions – Airport TakeOff V2, StreetWalker Rolling Backpack, Essentials Convertible Rolling Backpack



**Featured:** Airport TakeOff V2

**Included with the kit:**

Replacement handle and 3 mm hex wrench.

**Other tools required but not included:**

8 mm socket and ratchet.



**Step 1:**

Start by taking a top-down photo of your divider and gear layout for reference when reassembling your bag. **Remove all dividers and set aside.**



**Step 2:**

Lift the bottom flap then peel back and position the molded, padded insert to gain access to the retractable handle assembly.



**Step 3:**

Flip the bag over, open the backpack strap pocket and peel up the center section of airmesh to expose four hex bolt heads.



**Step 4:**

Tuck the center section of airmesh into the top carry handle so it stays out of your way while removing the hex bolts.

# Handle Replacement Instructions – Airport TakeOff V2, StreetWalker Rolling Backpack, Essentials Convertible Rolling Backpack



## Step 5:

Lift the padded insert out of the way to gain access to the two upper 8 mm nuts inside the bag.



## Step 6:

Using the included 3 mm hex wrench, turn each of the four hex bolts *counterclockwise* while holding each nut on the backside stationary using an 8 mm socket and ratchet (not included).

*Set aside hex bolts, plastic washers, metal washes, and nuts for use during reassembly.*




## Step 7:

Push the button on the handle and partially extend to gain access to the hook-and-loop flap directly underneath the handle cavity. With the hook-and-loop separated, retract the handle and then remove the entire handle assembly from inside of the bag.

## HANDLE USE

Due to the weight of video and photographic equipment, we recommend that you **do not lift the roller off ground or pull up stairs by the aluminum handle system.**

Please use the fabric handle on top of the bag itself.

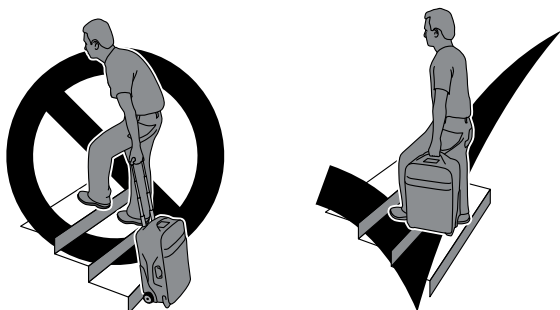

## HANDLE INSTALLATION and REASSEMBLY

Handle installation is the same process you just went through, but in reverse.

Please note you should only lightly tighten each hex bolt to the point where the plastic washer starts to warp. If the washer does warp, turn the bolt counterclockwise until the washer is flat.

## CONTACT US

If you require any assistance, please contact our customer support team via:

[www.thinktankphoto.com/pages/contact-us](http://www.thinktankphoto.com/pages/contact-us)