

How To Use Your

Filter Queen Majestic

Home Sanitation System



#### WELCOME . . .

to the world-wide family of Filter Queen owners who enjoy the benefits of a Total Home Care System.

Having become the proud owner of the most efficient and up-to-date home cleaning equipment available, you are one of the millions who have placed their trust in the Filter Queen name. Your new Filter Queen combines the most advanced engineering, construction, maximum reliability, and trouble free, long-lasting performance with graceful, contemporary design. The Filter Queen is manufactured in modern production facilities using progressive manufacturing methods and techniques, under a rigorous quality control program.

This booklet contains explanations and illustrations of the Filter Queen's many home cleaning features. If and when you need any additional information or service please call

#### 1-800-344-1840

and we will direct you to your nearest Authorized Service Representative. Our courteous, authorized Representatives are specially trained and will provide genuine Filter Queen supplies and service.

HMI Industries, Inc. has been manufacturing quality home sanitation equipment for over a half-century. Our engineers and skilled craftsmen are deservedly proud of the Filter Queen they have produced for you and of the fine reputation the system has earned. We are certain that you, too, will be proud of its lasting beauty and fine performance, and that you will derive many years of satisfaction from its use. Thank you for choosing Filter Queen.

HMI Industries, Inc.

©Copyright 1992 HMI Industries, Inc.

# TABLE OF CONTENTS

Safety	4
Cyclonic Air Cleaning	5
Filter Queen Parts	6-7
Pow-R-Nozzle	8-9
Other Attachments	10
Filter Cone	11
Secondary Filter	
Brushes	14-1
Crevice Tool	14
Optional Accessories	16-17
Air-Scenting Chamber	18
Circuits	
Headlights	
Indicating Light	19
Service and Loss by Fire Policy	20
Registration Card	21
Limited Warranty	23
Maintenance Chart	24
Healthier Living	20
Maintenance Chart	21
Limited Warranty	22
Extended Motor Protection	23
Warranty Summary/Local Distributor	24

#### SAFETY

### **Important Safety Instructions**

When using an electrical appliance, basic precautions should always be followed, including the following:

# READ ALL INSTRUCTIONS BEFORE USING FILTER QUEEN

WARNING — To reduce the risk of fire, electric shock, or injury:

- Do not leave Filter Queen plugged in.
   Unplug from outlet when not in use and before servicing.
- 2. Electric shock could occur if used outdoors or on wet surfaces.
- 3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments and scents.
- Do not use with damaged cord or plug. If Filter Queen is not

working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to an authorized service center.

- 6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run Filter Queen over cord. Keep cord away from heated surfaces.
- 7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or Filter Queen with wet hands.
- 9. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 10. Keep hair, loose clothing, fingers, and all parts of body away from opening and moving parts.
- 11. Do not pick up anything that is burning or smoking, such as

cigarettes, matches or hot ashes.

- 12. Do not use without filters in place.
- 13. Turn off all controls before unplugging.
- 14. Use extra care when cleaning on stairs.
- 15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- 16. The hose contains electrical wires. Do not use if damaged, cut, or punctured. Avoid picking up sharp objects.
- 17. Always turn off this Filter Queen before connecting or disconnecting either hose or motorized nozzle.

# SAVE THESE INSTRUCTIONS


Your Filter Queen is intended for household use only.


#### **CYCLONIC AIR CLEANING**

#### **Cyclonic Air Cleaning Action**

#### ... only Filter Queen has it!

Instead of scattering dirt, Filter Queen literally filters it out of the air, thanks to a scientifically designed Filter Cone so efficient that the tinjest particle — even smoke — cannot penetrate its walls! The Filter Cone is composed of two-ply treated cellulose fibers that block the passage of dust, irritating pollens and other indoor air pollutants. Only filtered air passes through. Filter Queen's famous "Cyclonic Action" assures sustained air flow. The inrushing air and dirt stream is deflected by the unique Inlet Guide, creating a centrifugal force that throws dirt to the sides of the container, away from the Filter Cone. Thus the dirtladen inflow does not have to push its way through accumulated dust and filth, as in the bag-type "vacuum cleaner," but is drawn to the center of a "cyclone" where it filters through the Cone and returns to the room as clean, filtered, air. No wonder Filter Queen has been called one of the Major Advances in Home Sanitation.

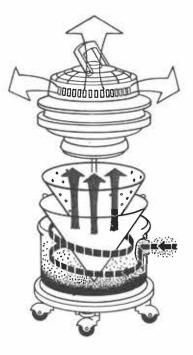

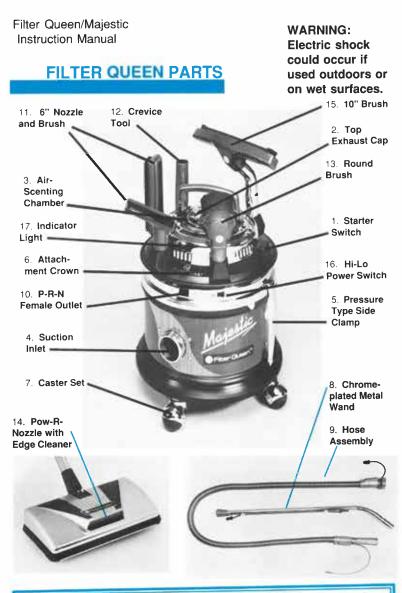

CAUTION: DO NOT LEAVE FILTER QUEEN UNATTENDED WHILE MOTOR IS RUNNING.

If you are interrupted while cleaning with the Filter Queen Pow-R-Nozzle, (e.g. phone calls, unexpected visitors, etc.), be sure to first turn off power by pressing Starter Switch on the Filter Queen. This also automatically turns off the Pow-R-Nozzle. Failure to do so may result in overheating of motors and subsequent damage to the Filter Queen System and/or floor coverings.

#### **FILTER QUEEN PARTS**

- Starter Switch
   Press down to start or stop Filter Queen.
- 2. **Top Exhaust Cap**Opens with a slight twist
  to the left to convert your
  Filter Queen into an
  efficient blower.

# 3. Air-Scenting Chamber

Place Filter Queen scent under exhaust cap.

- 4. Suction Inlet
  Designed to impart
  "Cyclonic Action" to
  incoming air and dust.
- 5. Pressure Type Side Clamp

Opens with a flick of your finger. Keeps Power Unit locked in place.

- 6. Attachment Crown High-impact ABS. Holds five most essential cleaning attachments within easy fingertip reach.
- 7. Caster Set Rubber ball casters roll smoothly on rugs or hard surfaces.

# Use this Suction Inlet for vacuuming and dust removal

\* Available only on certain Filter Queen models.

#### 8. Chrome-plated Metal Wand

Air-tight, lock-tight singlepiece construction.

- 9. Hose Assembly P.V.C.-covered, currentcarrying wire reinforced Hose.
- 10. P-R-N Female Outlet

Receptacle for plugging in Electric Hose.

11. Six-Inch Nozzle and Brush

Removes imbedded dust and dirt from overstuffed furniture, mattresses, drapes, curtains, light drapes, auto upholstery, walls and wood paneling.

- 12. **Crevice Tool** For reaching hard-to-getat places.
- 13. **Round Brush**For all dusting operations; eliminates the dust cloth.



#### 14. Pow-R-Nozzle with Edge Cleaner

For cleaning rugs and carpets. Motor-driven revolving brush. Soft vinyl bumper on three sides protects furniture from accidental bumps, nicks and scratches.

- 15. **Ten-Inch Brush** For cleaning hard-surface floors.
- 16. **Hi-Lo Power Switch**Adjusts suction power to easily clean the daintiest curtains without fear of snagging (Low power) . . . . yet permits use of full power for regular "deep down" cleaning (Hi power).
- 17. Caution Light When lit, this indicates that the motor in the power unit is overheating. Turn the unit off immediately as motor damage may occur. This condition may be attributed to poor air flow. Please check for a blockage in the attachment, hose, or wand. The primary or secondary filters may also need to be replaced if you have checked for the above, and the condition persists, take the unit in for service.

Use this Blower Outlet for air scenting and air circulation

# Filter Queen/Majestic Instruction Manual

# FILTER QUEEN POW-R-NOZZLE®

#### How to Attach Pow-R-Nozzle

Attach end of Wand with rubber sleeve to round swivel neck of Nozzle by pushing Wand over neck until Locking Pin Snaps into retaining slot. Thumb release button on rubber sleeve should be in line with metal locking pin on swivel neck. The Wand swivels slightly more than 90 degrees, allowing it to lie flat on the floor for cleaning under low furniture.

Join male plug end of cord extending from Nozzle with lower end of Wand cord by firmly pushing together. Attach Electric Hose to other end of Wand until locking pin snaps into retaining slot.





Plug short length of cord extending from Hose end into male connector attached to upper end of Wand.

NOTICE: THIS HOSE CONTAINS ELECTRIC WIRES.

Attach other end of hose to Filter Queen Power Unit by lining up white arrow over top pin of Suction Inlet. Lock with slight turn to right.





Plug Cord with round male pins into P-R-N Female Outlet on dome. Operation of Pow-R-Nozzle is controlled by pressing Starter Switch on the Filter Queen Power Unit. Nozzle motor will run only when the Filter Queen is "on" and will stop when the Filter Queen is "off."

Height of Nozzle from rug surface is controlled by rollers protruding through bottom coverplate of Nozzle. Height of rollers is adjusted by knob in back of Nozzle. For short nap rugs, such as "indoor-outdoor," pointer on knob should be set at lo. With higher napped rugs and carpeting advance pointer clockwise to proper Nozzle height.

8


#### POW-R-NOZZLE

#### Clean With the Pow-R-Nozzle

Attach Pow-R-Nozzle to Filter Queen as shown on page 8. Adjust height of Nozzle rollers to type of rug or carpeting you are cleaning ("Lo" for short nap; "HI" for shag or sculptured carpeting.) After you've used your Pow-R-Nozzle a few times, you'll know which adjustment gives the best cleaning results. Vacuum in long, slow strokes. When cleaning your shags, vacuum in a criss-cross pattern to raise the nap and give them a fluffier appearance.

To edge clean: When you come to the edge of wall-to-wall carpeting, turn Nozzle at a 90-degree angle to the wall. This allows powerful air flow from edge of Nozzle to clean right up to base-board.

To clean stairs: Disconnect plug from lower end of Wand to Pow-R-Nozzle. Detach Wand from Hose by pressing down on rubber button and pulling apart. Connect Hose to Pow-R-Nozzle: reconnect male plug from end of Hose into female plug at Nozzle. Pow-R-Nozzle may now be used to clean stairs, carpeting, overstuffed furniture, mattresses, etc. On narrow steps and risers, use Six-Inch Nozzle attached directly to Hose instead of Pow-R-Nozzle.

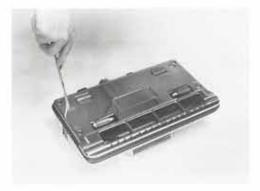

How to care for your Pow-R-Nozzle: Periodically remove top cover and check belt for tension and wear. To remove cover, unfasten four screws marked "To Remove Top." To adjust or replace belt and brush, see instructions on label attached to inside surface of baseplate. To remove baseplate, unfasten two screws marked, "To Remove Bottom Plate" and unhook from lip of Nozzle. Remove any lint, nap or other debris that may have accumulated in motor compartment or behind roller bar by vacuuming with Crevice Tool attached to Hose. Also remove debris buildup on ends of brush. Be sure to re-insert fiber and steel washers. Replace plate by securely hooking under front lip of Nozzle; replace two screws. Replace top cover and four screws.

Storage: Avoid sharp bends in Electric Hose by draping over a clothes hanger — or two closet hooks spaced about 12 inches apart.

#### **OTHER ATTACHMENTS**

#### **Cleaning With Other Attachments**



 Leave Electric Hose attached to Power Unit. Detach Pow-R-Nozzle from end of Wand.
 Unplug cord at hose end from P-R-N female outlet on power unit dome.

You may use the Round Bush, Crevice Tool or the Six-Inch Nozzle and Brush from end of the Wand; or from end of Electric Hose.

2. When using end of Electric Hose, first disconnect plug from top of Wand (just below curved section) and insert into Retainer Clip at end of Hose so it is out of the way. Then disconnect Wand from Hose by pressing down on rubber button and pulling apart. Your Electric Hose is now ready to use with any attachment.





- 3. To attach cleaning tool to Hose, line up metal button on tool with rubber button on Hose and press together until they click in place.
- 4. Press Starter Switch.

#### **FILTER CONE**

#### **How to Change the Filter Cone**

About once a month (or when Dirt Container is full) empty your Filter Queen and insert new Filter Cone. **NOTE: Do not reuse the Filter Cone.** To do this:

- 1. Unplug Power Cord.
- 2. Release Side Clamps and lift off Filter Queen Power Unit.





- 3. Empty Dirt Container contents into a large, open garbage bag. Allow contents of container, including used Cone, to fall. Dirt Container may be washed and dried thoroughly to remove all dust or any odors.
- 4. Open new Filter Queen Filter Cone; Insert point of Cone into Filter Cone Locator at bottom of Dirt Container. Be sure that all edges of Cone are even with rubber collar of Dirt Container.
- 5. Replace Power Unit and lock Side Clamps in place by pressing them against Dirt Container. Be sure all three tabs of Cone show outside of Power Unit.





#### SECONDARY FILTER

#### How to Change the Secondary Filter

1. Unlock the Power Unit and expose the Cone Guard. Remove the Cone Guard by taking out the Retaining Screw in the bottom as shown.






2. After removing the Cone Guard, the Secondary Filter is fully exposed. To remove it, pull back the plastic Retainer Ring with your finger and lift out. The Filter can now be removed.

#### **SECONDARY FILTER**

#### How to Change the Secondary Filter



3. Place the new Filter over the center section of the screen.

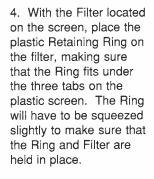



- 5. Replace the Cone Guard as shown in step one of this section. Be sure the outer edge of the Cone is seated in the rubber lip around its circumference as shown.
- 6. Now replace the Retaining Screw and your Filter Queen is ready for another long period of top efficiency.

#### **BRUSHES**

#### **Use the Round Brush for Easy Dusting**

Do all your general dusting with the round brush. Use on highly polished furniture, the most delicate cloth lampshades — or any surface where dust accumulates.

To use Brush: Assemble Filter Queen for cleaning with other Attachments.

For general room dusting: Attach brush directly to Hose. Clean with gentle short strokes; do not press down hard as this will seal the opening and cut off your cleaning power. Use on tables, window sills, ledges, lampshades, statuary, woodwork, books, bookshelves, ashtrays, drawers, radio and TV grills, etc.



To dust mouldings, door jambs, etc.: Use Wand and the Round Brush. To clean top of mouldings, have Brush turned down. For underside of mouldings, Brush should point up.

**To Clean Brush:** Run open end of Hose over bristles of Brush. (You will find this method convenient for keeping all kinds of brushes clean. If you have

been dusting grimy or very sooty surfaces, remove bristle assembly from rubber socket, wash in warm soapy water; let dry before replacing.)

#### **CREVICE TOOL**

#### **Use the Crevice Tool for Hard-to-Reach Places**

Assemble Filter Queen for cleaning with other attachments.

Use Crevice Tool for removing dust and dirt behind cushions in upholstered furniture; mattress tufts and bindings; bed springs; corners of bureau drawers; radiators; any place where other attachments cannot reach.



#### **BRUSHES**

#### Ten-Inch Brush Cleans Hard Floors, Walls

Cleans an entire 10-inch wide area in one stroke. Ideal for hard-surfaced floors such as tile, linoleum, wood and even concrete. Also cleans walls, screens, ceilings, shades, any flat surface. To attach Brush: First unplug Pow-R-Nozzle cord from Wand. Remove Pow-R-Nozzle from Wand by depressing coupling button and pulling apart. Next, insert metal end of Brush into rubber end of Wand and use in same manner as Pow-R-Nozzle.

(NOTE: When cleaning wall surfaces, work in a straight line from the bottom up; overlap each succeeding Brush stroke.)

After each use, remove lint, threads, etc., by rubbing Brush with open end of Hose. If Brush is soiled, rinse in mild soap solution and let dry before using on light-colored walls or ceilings.



#### Six-Inch Nozzle and Brush Cleans Upholstery



Assemble Filter Queen for cleaning and other Attachments. Cleaning overstuffed furniture, mattresses, fabrics: To remove deeply imbedded dirt in heavy fabrics, use the Six-Inch Nozzle without Brush. Use the Brush when fabric is covered with threads, lint, etc. When cleaning mattresses, upholstered furniture, clothing and other off-the-floor objects, attach Nozzle directly to the Hose.

Going over curtains, drapes: Attach Wand to Hose. For heavy drapes, attach Six-Inch Nozzle only directly to Wand. Delicate curtain material should be cleaned with the Six-Inch Nozzle and Brush. The Brush prevents the material from being drawn into the Nozzle. Slide Brush on the Nozzle.

# Filter Queen/Majestic Instruction Manual

#### **OPTIONAL ACCESSORIES**



#### Standard Hose

Non-electric Filter Queen Hose. Nylon and PVC dirt-resistant covering; wire reinforced. 360degree swivel prevents kinking or knotting. Available in 6 1/2, 10 or 15 foot lengths. Choice of tan, dark brown or grey.

#### Rug Nozzle

For cleaning rugs and carpets. Soft neoprene bumper on sides and front of nozzle protects furniture from accidental bumps, nicks and scratches. The adjustable floating brush on the back of the rug nozzle may be raised or lowered by moving the metal tab (just above the brush) back and forth. Use floating brush in lowered position for picking up threads, lint, dog hair,



#### Floor Polishing Felt Pad

For dusting hard-surface floors.

Lay felt pad on the floor. Place rug nozzle over it, with front edge of nozzle against front spring.

it, with front edge of nozzle against front spring cilps of felt pad. Then press rear edge of rug nozzle down to snap rear spring clips in place.

#### **OPTIONAL ACCESSORIES**



Seal-Guard Filter Cone System
The Filter Queen Seal-Guard Cone
System provides efficient, sanitary and
easy dirt disposal. The system
contains a leak-proof plastic retainer
bonded onto the Filter Queen Cone that
eliminates the nuisance and danger of
dirt spillage. Simply snap dirt-filled
Filter Cone Retainer and Cone from Dirt
Container Inlet Guide. Important: The
Filter Cone System cannot be used
unless your Filter Queen is specially
adapted for its use.

#### Fourteen-Inch Bare Floor Brush

A long-bristled brush ideally suited for all hard surface flooring — even concrete! Fourteen-inch width. (Requires adaptor tube. When ordering Brush, also order "Adaptor for Pow-R-Nozzle.")





#### Massager

Removes dandruff and loose hair quickly and easily...gives a tingling, energizing scalp massage in seconds. Also ideal for use on pets to remove shedding hair before it falls to your floor surfaces.

#### AIR-SCENTING CHAMBER

#### **Using the Air-Scenting Chamber**

Note: Disconnect electric hose from Power Unit before using Air-Scenting Chamber.

 Remove Exhaust Cap on top of Filter Queen with slight turn to the left and lift off.






2. Place a few drops of Filter Queen Oil of Pine or Oil of Eucalyptus on grey felt Air-Scent Pad. CAUTION: Do not saturate or use perfume or other liquid not sold by HMI Industries, Inc.! Use of other liquids could cause damage to your motor and void your warranty. (To replace felt Air Scent Pad, twist clamp to the left and lift off; insert new Pad. Replace clamp, lock in position.)

- 3. Close Air-Scenting Chamber by replacing Cap and locking with slight turn to right until it clicks into place.
- 4. Press Starter Switch. Within minutes you will notice the effects of your Filter Queen Air-Scenting Chamber throughout the room.



#### **CIRCUITS**

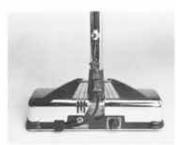

Resettable circuit breaker: Your Pow-R-Nozzle is equipped with a resettable circuit breaker. The circuit breaker will protect your motor from damage if the Pow-R-Nozzle should become clogged or the revolving brush stalls. (This could be caused by picking a long strand of rope or a large object, such as a sock.)

If for any reason the circuit breaker stops the Pow-R-Nozzle, unplug the cord and correct the problem by removing foreign object from brush. Then press red Reset Button located on back of Pow-R-Nozzle and start unit in usual manner.

#### **HEADLIGHTS**

How to replace headlight: Disconnect Filter Queen power cord from electrical outlet and disconnect plug from lower end of Wand to Pow-R-Nozzle. Detach Wand from Pow-R-Nozzle by pressing down on rubber button and pulling apart. Remove top cover by unfastening the four screws which are marked, "To Remove Top." To remove bulb, press inward and twist to the left. Replace with 15 watt bulb (Sylvania 15 T7 DC or equivalent). Push new bulb into socket and lock into position by twisting to the right. Replace top cover and four screws.



#### **INDICATING LIGHT**



**How to replace Indicating Light:** It is recommended that replacement of Indicating Light be done by an authorized dealer.

#### A HEALTHIER LIVING ENVIRONMENT


#### 1. Asthmatics/Allergies

Filter Queen removes dust and pollen from the air for relief to asthma and allergy sufferers.



#### 3. Common Cold Sufferers

Even common cold sufferers may find relief with the use of medication in the **Air Deodorizer**. Allow the medication to circulate in the bedroom before the cold sufferer goes to sleep.

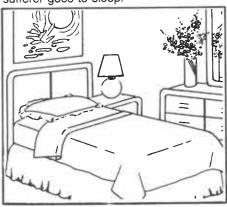


#### 2. Air Deodorizer

Use Filter Queen Air Freshener AS PER INSTRUCTIONS in Air Deodorizer to give your home a fresh, clean scent.



#### 4. Nursery

Filter Queen removes dust from the air at a rate of 70 cubic feet per minute.

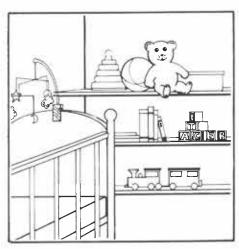

# Do-It-Yourself Service Chart

CORRECTION	<ol> <li>Replace Secondary Filter.</li> <li>See instruction (5) below "POW-R-NOZZLE DOES NOT OPERATE</li> <li>Bun long wire or a straightened-out coat hanger through Wand.</li> <li>Empty and clean Dirt Container. Replace Filter Cone with new one.</li> <li>See instruction (3) below under "POW-R-NOZZLE DOES NOT OPERATE</li> <li>Replace Filter Cone. Also replace Secondary Filter.</li> </ol>	<ol> <li>Insert plug firmly in wall outlet or try another wall outlet.</li> <li>Call factory authorized Filter Queen Service Center.</li> <li>Call factory authorized Filter Queen Service Center.</li> <li>Automatic Cord Rewind: After checking Pigtail Cord* connection—see (2) above—and machine still doesn't operate, plug Pigtail Cord directly into wall outlet. If machine now operates, this may indicate damaged Power Cord Plug.</li> </ol>	<ol> <li>Review instructions on How To Attach the Pow-R-Nozzle, making sure all plugs are firmly connected.</li> <li>Remove baseplate and check belt. Be sure belt is attached to motor shaft. If belt is broken, replace. See instructions on inside of baseplate.</li> <li>Remove baseplate and clean dirt and debris from swivel neck by running wire through opening. At the same time remove any lint, nap or other debris from behind Roller Bar.</li> <li>Run long wire or a straightened-out coat hanger through Wand.</li> <li>Run long wire or a straightened-out coat hanger through Wand.</li> <li>See instructions 2 and 3 on bottom of baseplate.</li> <li>Unplug cord and check for obstruction at brush. After problem is corrected, push red Reset Button on back of Nozzle and start Filter Queen in usual manner. If after checking the above, and your Pow-R-Nozzle still doesn't operate, then probably (a) The Pow-R-Nozzle motor is damaged or (b) There may be a damaged cord on your Electric Hose. In this case, contact your factory-authorized Filter Queen Service Center or HMI Industries, Inc.</li> </ol>
CAUSE	<ol> <li>Clogged Secondary Filter</li> <li>Obstructed Hose</li> <li>Obstructed Wand</li> <li>Obstruction at neck of Pow-R-Nozzle swivel</li> <li>Filter Cone coated with extremely fine dust</li> </ol>	Plug not connected to outlet, or to faulty one     Damaged switch     Damaged motor     Damged Power Cord Plug	1. Hose Plugs not connected 2. Brush not turning 3. Obstruction at neck of swivel 4. Obstructed Wand 5. Obstructed Hose 6. Worn Brush 7. Circuit Breaker Tripped
PROBLEM	RED CAUTION LIGHT/ON LOSS OF SUCTION OR OVERHEATING OF MOTOR UNIT	MACHINE WILL NOT OPERATE	POW-R-NOZZLE DOES NOT OPERATE OR PICK UP

# Filter Queen/Majestic Instruction Manual

#### **LIMITED WARRANTY**

HMI Industries, Inc. warrants the Filter Queen Home Sanitation System and its accessories to be free of defects in materials and workmanship for two years from the date of purchase. This warranty does not cover: (1) use of the Filter Queen for commercial, institutional, professional, rental or other non-household purposes; (2) ordinary wear to the hose, brushes, belts, bearings, seals or floor polishing felt pad; (3) damage occurring through misuse or negligence; (4) damage caused by use on a current or voltage other than stamped on the nameplate; (5) damage resulting from service work performed by other than HMI Industries, Inc. or its authorized Distributors; and (6) cost of transportation, pick-up, delivery, house or service calls.

HMI Industries, Inc. will repair or replace any defect or defective part under this warranty provided the Filter Queen or the defective part is returned, transportation prepaid, with proof of purchase date, to the authorized Distributor from whom it was purchased or to Quality Assurance Department, HMI Industries, Inc., 3631 Perkins Avenue, Cleveland, Ohio 44114, or, with written authorization from HMI Industries, Inc. to any other person authorized to perform warranty service. Information regarding other persons authorized to perform warranty service can be obtained by writing to the Customer Relations Department, HMI Industries, Inc., 3631 Perkins Avenue, Cleveland, Ohio 44114. If the Filter Queen or part is found on inspection to be defective in material or workmanship it will be repaired or replaced at the option of HMI Industries, Inc. and returned to the sender, freight or postage collect. No reimbursement will be made for replacement of defective parts or service performed during the warranty period if done by anyone other than the authorized Distributor from whom the Filter Queen was purchased or by HMI Industries, Inc. without first having obtained written authorization from HMI Industries, Inc.

This warranty is null and void and of no effect unless the Filter Queen was purchased from an authorized Distributor; and the manufacturer's serial number for the Filter Queen has not been changed, defaced or removed.

Any repair or replacement of a defect or defective part under this warranty will be warranted for one year or until the end of the original warranty period, whichever is longer.

There is no other express warranty applicable to your Filter Queen. Implied warranties, including warranties or merchantability and fitness for a particular purpose, are limited in duration to the period of time during which the express warranty given herein is in effect. All consequential or other damages resulting from a breach of this warranty are excluded from coverage under this warranty.

Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Neither HMI Industries, Inc., nor its authorized Distributors, assumes or authorized anyone to assume for any of them any additional liability.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

# **EXTENDED MOTOR PROTECTION**& LOSS BY FIRE

HMI Industries, Inc. agrees to replace the Filter Queen canister motor at any time after expiration of the original warranty period, subject to the terms and conditions set forth below:

- 1. The Filter Queen must be in the possession of the original owner and must have been used only for household purposes. This service policy does not apply to any Filter Queen used for commercial, institutional, professional, rental or other non-household uses.
- 2. The Filter Queen must be returned, transportation prepaid, to the authorized Filter Queen Distributor from whom it was purchased or to the Quality Assurance Department, HMI Industries, Inc., 3631 Perkins Avenue, Cleveland, Ohio 44114. The owner must pay return transportation charges.
- 3. The maximum charge for replacing the motor of the Filter Queen will be \$59.50, which will include the cost of all parts and labor necessary to replace the Filter Queen canister motor. A charge will be made at then-current prices for any parts missing from the Filter Queen at the time it is delivered for motor replacement if such parts are necessary to restore the Filter Queen to correct operating condition and for any parts needed or requested other than the motor of the canister.
- 4. If there is a defect in material or workmanship in the motor, the Filter Queen canister motor will be replaced again at no charge, provided the Filter Queen is returned within one year of the prior rebuilding to HMI Industries or the authorized Distributor who performed the rebuilding, transportation prepaid. Proof of the prior motor replacement must accompany the Filter Queen.
- 5. If the Filter Queen and/or attachments are destroyed or damaged by fire while in the home of the original owner within three years from the date of original purchase, HMI Industries, Inc. will replace, repair or rebuild the Filter Queen for the original owner so as to place the machine in correct operating condition. To take advantage of this fire rebuilding policy, the fire-damaged remains of the Filter Queen must be sent within 90 days of the fire, transportation prepaid, to HMI Industries, Inc., 3631 Perkins Avenue, Cleveland, Ohio 44114 along with a check in the amount of \$100.00 and an affidavit that the Filter Queen was damaged or destroyed by fire while in the home of the original owner.
- 6. This service agreement is void and inapplicable unless all of the following conditions are met:
- a) The Filter Queen was purchased from an authorized Distributor;
- b) The manufacturer's serial number for the Filter Queen has not been changed, defaced or removed;
- c) Damage to the power plant did not occur by reason of misuse, negligence, use on a current or voltage other than that stamped on the nameplate or by use of Other than genuine Filter Queen cones.

## Filter Queen/Majestic Instruction Manual

#### SUMMARY OF LIMITED WARRANTIES

HMI Industries, Inc. (the "Manufacturer") warrants that your Filter Queen canister, Power Nozzle and related accessories have been thoroughly inspected and have met all factory quality requirements. Upon purchase, a Warranty Registration Card is automatically returned to the Manufacturer. When Received, the Manufacturer warrants your Filter Queen equipment, subject to the detailed limited warranties contained elsewhere in this Manual, as follows:

- A. Basic Warranty covering the canister, Power Nozzle and accessories for a period of two (2) years;
- B. Extended Motor Protection covering the canister motor replacement at a fixed price for the lifetime of the original owner;
- C. Loss by Fire protection should the Filter Queen and/or its attachments be damaged by fire while in the home of the original owner for a period of three (3) years.

Should you have any questions about your Filter Queen, or need the name of the Authorized Distributor nearest you, call toll free to our Customer Service Representatives at:

#### 1-800-344-1840



#### Beware of Substitutes!

Use of imitation Filter Cones can cause serious damage to your Filter Queen System! Genuine Filter Queen Cones are imprinted "HMI Industries, Inc." Be sure this trademark is on every Filter cone you use in your Filter Queen.

Your Authorized Filter Queen Distributor is:

Rev. 12/95 Part #96956