

# **INSTRUCTION MANUAL AND WARRANTY**

## **TSAR BOMBA**

**THANK YOU FOR CHOOSING AN TSAR BOMBA TIMEPIECE**

*Our mission is to build a portfolio of customized innovative products and services for international markets, fulfill customer needs by providing them high quality innovative products. Flexibility in sourcing, competitive prices and on-time deliveries sustain our reputation as a reliable, customer-oriented, dynamic player in the market. Achieve profitable growth, operational and organizational excellence without compromising our values and business ethics.*

**MODEL : TB8204Q**

# **QUARTZ, AUTOMATIC, AND MANUAL WIND WATCHES**

## **QUARTZ WATCHES**


A Quartz Watch is battery powered and does not require winding. Eventually the battery will need to be replaced.

## **AUTOMATIC WATCHES**

An Automatic Watch is a mechanical watch that winds itself and does not require a battery. When worn daily, the movement of your wrist causes the mainspring to wind progressively, eliminating the need for additional winding. To start your automatic, you can hand wind it by rotating the crown clockwise a number of turns while in its normal operating position (screw down crowns will need to be unscrewed first), or by swinging it side to side for 30 seconds. We recommend housing an automatic in a watch winder box.

## **MANUAL WIND WATCHES**

A Manual Wind Watch is a mechanical watch that does not require a battery, but can only be wound by hand. To wind it, turn the crown clockwise while it is in its normal operating position until you feel resistance. This type of watch should be wound daily.

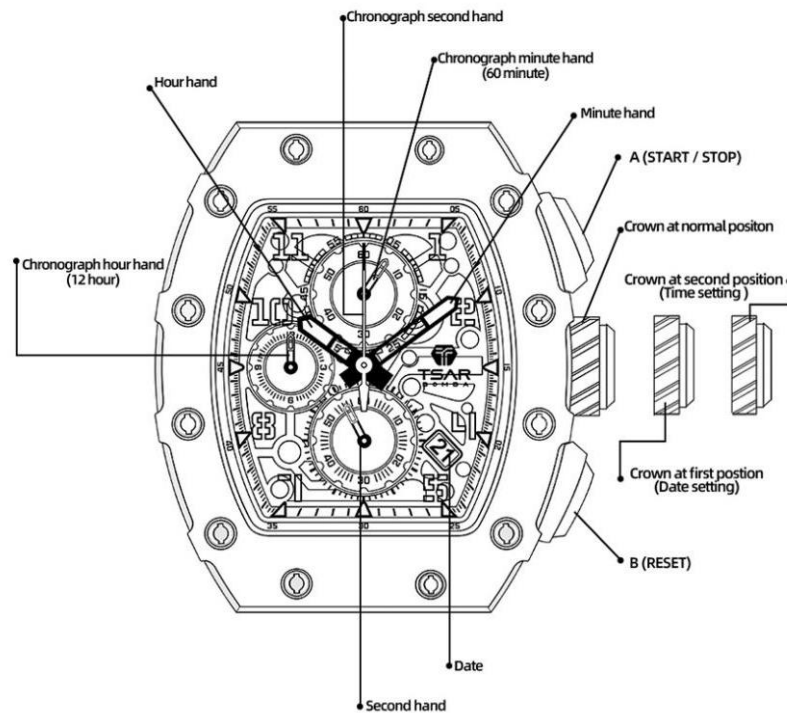

### 1.How to set the time

- 1) Pull out the crown to the second click position.
- 2) Turn the crown to set hour and minute hands.  
(Check that AM / PM is set correctly.)
- 3) Push the crown back into the normal position.

#### [ Note ]

If the crown is pulled to the second position while the chronograph is started, the chronograph hands will continue to move.This is not a malfunction.

### 2.How to set the date

- 1) Pull out the crown to the first click position.
- 2) Turn the crown clockwise for date setting.  
\*Do not set the date between 9:00 P.M. and 3:00 A.M. as this will cause a malfunction.
- 3) Push the crown back into the normal position.

### 3.How to reset (after battery change)

It is possible to reset by the following two methods.

#### Method 1

- 1) Set the crown to the normal position.
- 2) Touch the AC terminal of circuit block and the switch spring with conductive tweezers to reset the circuit.
- 3) The small second hand will move at two-second interval for 10 seconds.

#### Method 2

- 1) Pull out the crown to the second click position.

- 2) Press the button (B) for two seconds and release the button.
  - 3) Push the crown back to the normal position.
  - 4) The small second hand will move at two-second interval for 10 seconds.
- \* If the crown is operated within this 10 seconds, the two-second interval movement will not activate.


**[Note ]**

It is not necessary to set the chronograph hands after the battery is exchanged.  
 If the chronograph hands position are incorrect, following below procedure all the chronograph hands will be reset to "0" position.


## HOW TO USE THE CHRONOGRAPH

**[Standard measurement ]**

Press the buttons in the following order : A → A → B

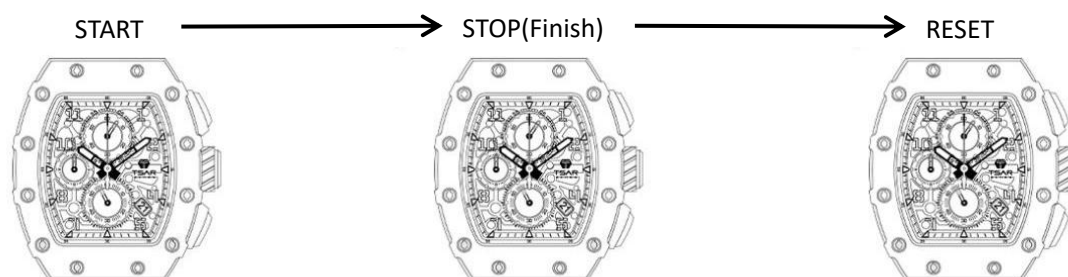

- Press button (A) to start the chronograph.  
The chronograph second hand will start moving.
- ( 6 hour 20 minutes 10 seconds )
- Press button (A) again to stop the chronograph.  
The chronograph hands stop to indicate the elapsed time.
- Press button (B) to reset the chronograph.  
All the chronograph hands will be reset to "0" position.

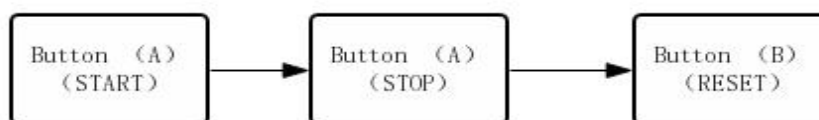

**Note**


The chronograph can measure up to 12 hours.  
 The chronograph stops after a measurement for 12 hours.

\* **Restart by pushing button (A).**

\*During the chronograph operation, button (B) (reset) can be pushed. There is no problem with the function.

**[Accumulated elapsed time measurement ]**

Press the buttons in the following order : A → A/A ... → A → B

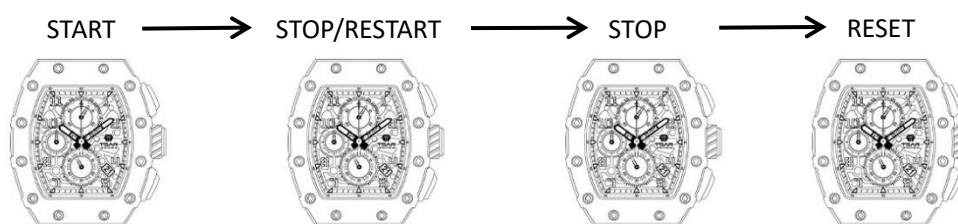

( 1 hour 8 minutes 40 seconds ) ( 6 hour 20 minutes 10 seconds )

\*Restart and stop of the chronograph can be repeated as many times as necessary by pressing button (A)



We invite you to visit [Tsar Bomba.com](http://Tsar Bomba.com), a privileged place to learn more about the functions of your Tsar Bomba watch and about the quality.

Welcome to the world of Tsar Bomba watch.

**\*Tsar Bomba reserves the right to modify the models illustrated**

**in this publication at any time.**