



USER MANUAL




INTRODUCTION

Wings is India's leading gaming audio and accessories brand catering to young India. Wings was recognised as the most Prestigious Rising Brand Of Asia 2021-2022 by BARC Asia in the gaming lifestyle accessories category.

Run by a community of gamers obsessed with technology, streaming and esports, Wings is on a mission to create a gaming brand that the youth is proud to own. Nodwin Gaming, a subsidiary of Nazara Technologies has a strategic investment in Wings with a combined vision to create top notch gaming gear for the Indian gaming community.

Wings is proud to have been associated with **Battleground Masters Series (BGMS)**, a landmark esports event that was telecast, and audio partners with one of India's premier gaming organisations, **GodLike Esports**. Wings is the No.1 gaming brand on Flipkart and Amazon currently and strives to become a globally recognizable brand over the next 3 years.

WHAT'S IN THE BOX



- 2 N Pairs of Extra Ear Tips(S&L)
- 1N User Manual
- 1N Warranty Card
- 1N Type-C Charging Cable

PRODUCT LAYOUT



1. LED Indicator of charging case
2. Type-C Charging Port
3. Touch Control
4. LED Indicator of Earbuds
5. Microphone

HOW TO PAIR

Before queue-ing up with your squad, Pair up with us to ensure maximum victories.

Please make sure that the device is fully powered before using it.

Step 1: Make sure your charging case is charged up. Open the lid of the charging case & take out the earbuds. The earbuds will turn ON and automatically enter the pairing mode. The left earbud LED light will flash in alternate white & ice blue color quickly.

Step 2: Tap "Phantom 315" from the smartphone's Bluetooth menu. There is a ring prompt after a successful connection. This indicates earbuds are successfully connected to your device.

Step 3: Congratulations! You are now connected and can start playing media.

Note: If you do not connect to any device within 180 seconds of entering pairing mode, then both earbuds will automatically turn OFF. Please put the earbuds back into the case and repeat the process to pair them.



TOUCH CONTROLS

For better access and functionality during matches, use our tap controls to save on those crucial moments between games.

BASIC FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Volume Increase		●	Single Tap on the right earbud's touch sensor
Volume Decrease	●		Single Tap on the left earbud's touch sensor
Play/Pause Music	●●		Double Tap on any earbud's touch sensor
Next Track		●●●	Triple Tap on the right earbud's touch sensor
Previous Track	●●●		Triple Tap on the left earbud's touch sensor
Voice Assistant	2sec		Long Press for 2 seconds on the left earbud's touch sensor
Game Mode ON/OFF		2sec	Long Press for 2 seconds on the right earbud's touch sensor

● - Tap — - Long press

CALL CONTROLS

Use our Call control features to make swift decisions in-game and clutch up without breaking your focus.

CALLING FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Answer Incoming Call		●●	Double Tap on any earbud's touch sensor
Hang up calls		●●	While on call, Double Tap on any earbud's touch sensor
Reject calls		2sec	Long Press for 2 seconds on any earbud's touch sensor
Call volume increase		2sec	Long Press for 2 seconds on the right earbud's touch sensor
Call volume decrease	2sec		Long Press for 2 seconds on the left earbud's touch sensor


● - Tap — - Long press

CHARGING THE CASE


Our Charging Speed makes sure to leave your enemies in the dust ! So Charge up and get going !!

CHARGING THE EARBUDS

Low Battery : The charging case's white LED will flash three times in every 30 seconds.

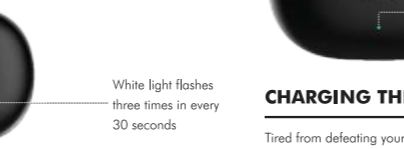


Charging The Case: While Charging the case, the case's ice blue light will blink.

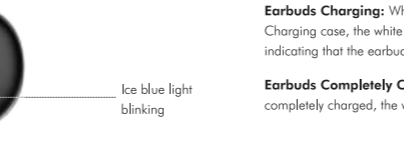

CHARGING THE EARBUDS

Fully Charged : The charging case's ice blue light will be steady on.

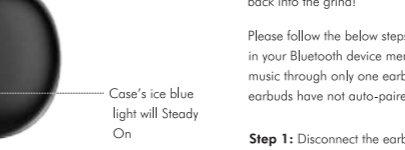

CHARGING THE EARBUDS

Tired from defeating your rivals Well our earbuds need a quick break too before they are back on the field with you.

Earbuds Low Battery : Earbuds give a ringtone.

Earbuds Charging: When earbuds are placed inside the Charging case, the white lights on the earbuds will turn ON indicating that the earbuds are being charged.

Earbuds Completely Charged: When the earbuds are completely charged, the white lights on the earbuds will go OFF.

RESETTING THE DEVICE

On the rare occasion you might need to reset the earbuds, here's a quick guide after which you can get back into the grind!

Please follow the below steps when you see two " Phantom 315" in your Bluetooth device menu on your mobile, or you can hear music through only one earbud. This means the left and right earbuds have not auto-paired with each other:

Step 1: Disconnect the earbuds and remove "Phantom 315" from your mobile list of paired devices.

Step 2: Tap five times quickly to clear the pairing data on either of the earbuds.

Step 3: Put the earbuds back into the charging case, and take out the earbuds, The "Phantom 315" is ready to use and automatically pair again.

The reset process is complete, and you can hear music through both the earbuds.

RESETTING THE DEVICE

• The white LED light on both earbuds will blink three times simultaneously to show that the process is complete.

Both earbuds led blink white 3 times simultaneously to show that process is complete



Step 3: Put the earbuds back into the charging case, and take out the earbuds, The "Phantom 315" is ready to use and automatically pair again.

The reset process is complete, and you can hear music through both the earbuds.

TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version	V5.3
Effective Distance	15m
Impedance	32Ω
Product Weight	36g
Speaker Size	13mm
Total Play Time	Upto 40 Hours
Earbuds Play Time	Upto 10 Hours
Talk Time	Upto 35 Hours
Standby Time	Upto 250 Hours
Complete Charging Time	1.5 Hours
Earbuds Charging Time	1 Hour
Rated Input	5V/1A
Frequency	20Hz--20KHz
Water and Sweat Resistant	IPX5
Charging Port	Type-C

*T&C Apply

SAFETY AND MAINTENANCE

Please read below suggestions in order to help prolong the product lifespan and clearly understand the warranty clauses:

- Gamers need to hydrate after a long match. That is not the case with our earbuds, so, **Keep the product dry, do not put it in humid conditions to avoid a short circuit.**
- We understand you carry the fire of a gamer within you, but please, **Do not expose it to the peak sun or high heat for extended periods of time as this will shorten lifespan of electronic components, damage battery and deform some plastic parts.**
- You may be Captain Cool leader of your squad but our products work best without a cold environment, so, **Do not put it in cold circumstances to avoid damage to the PCB board.**
- We know you are tech geeks and can build your own gaming PC from scratch, but, **Do not attempt to dismantle the product, as it may be unsafe especially for non-professionals.**
- Gamers are tough and our earbuds are tougher, but please **Do not use chemical products, detergent, oily liquids to clean the item.**
- In game, the bullets and knives are the norm however, **Do not scratch the surface with sharp items to avoid damaging the case and appearance.**
- We understand your passion for power, but in this case, **Less is More, so, Do not charge the product for more than 5 hours to avoid loss in battery life.**
- Being immersed in the game is one thing, yet **Avoid hearing music at maximum volume for long periods as this can affect your hearing and is not advisable.**

Note: Any damage to the product that is not a manufacturing defect will render the warranty null and void. Therefore, please take utmost care of your product.