

# WINGS PHANTOM 200 GAMING EARBUDS

## USER MANUAL



### INTRODUCTION

#### BE THE SICKEST IN THE GAME!

It's not just a tagline, it's **who we are**. Esports and Gaming has truly arrived in India and at Wings, we celebrate the modern Indian gamer with products that reflect the same drive and finesse that goes into the sport.

We are a community of passionate of gaming enthusiasts with the highest standards and the ambition to be the best. It is the same passion with which we add style and performance to every Wings product so you can elevate your game and enjoy the rush of that perfect headshot.


But more than anything - **We are PROUD to be gamers. Just like you.**

#### Let's Go!

### WHAT'S IN THE BOX




### PRODUCT LAYOUT

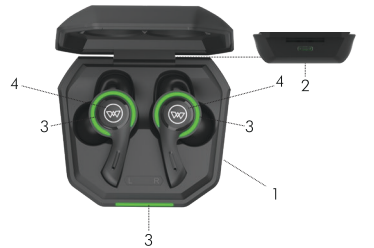

1. Charging Case
2. Type-C Input
3. Case and Earbuds Charging Indicator Light
4. Earbuds Touch Control

### HOW TO PAIR

Before queue-ing up with your squad, Pair up with us to ensure maximum victories.

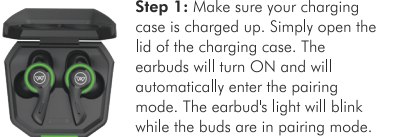

**Step 1:** Make sure your charging case is charged up. Simply open the lid of the charging case. The earbuds will turn ON and will automatically enter the pairing mode. The earbud's light will blink while the buds are in pairing mode.

**Step 2:** Tap "Phantom 200" from the smartphone's Bluetooth menu. There is a voice prompt after successful connection. This indicates earbuds are successfully connected to your device.

**Step 3:** Congratulations! You are now connected and can start playing media.

### TOUCH CONTROL USAGE

For better access and functionality during matches, use our tap controls to save on those crucial moments between games.

**Play/Pause** While playing music **Double Tap** the touch sensor on any one earbud to pause music.

**Double Tap** on any sensor again on any one earbud to resume playing music.

**Changing Songs**  
**Triple Tap** the touch sensor on right earbud to go to next song.  
**Triple Tap** the touch sensor on left earbud to go to previous song.

**Adjusting Volume**  
**Single Tap** the touch sensor on right earbud to increase volume.  
**Single Tap** the touch sensor on left earbud to decrease volume.

### CHARGING THE CASE

Tired from defeating your rivals? Well our earbuds need a quick break too before they are back on the field with you.

**Note:** Please only use a 5V/1A adapter to charge the case as higher voltage adapters can destroy the battery of the case and earbuds.

**Charging the Case:** When charging the case, the charging indicator lights on the case will blink.

**Fully Charged:** When the case is completely charged, the case light will always stay on.

### CHARGING THE EARBUDS

**Note:** Remove the protective layer from earbuds charging point before charging the earbuds

**Earbuds charging:** When earbuds are placed inside the charging case, the lights on the earbuds will turn ON, indicating that the earbuds are being charged successfully.

**Earbuds completely charged:** When the earbuds are fully charged, the lights on the earbuds will go OFF.

### RESETTING THE DEVICE

On the rare occasion you might need to reset the earbuds, here's a quick guide after which you can get back into the grind!

Please follow the below steps when you see two "Phantom 200" in your Bluetooth device menu on your mobile or you can hear music through only one earbud. This means the left and right earbuds have not auto-paired with each other:

**Step 1:** Disconnect the earbuds and remove Phantom 200 from the list of paired devices.

**Step 2:** Tap the touch sensor on either of the earbuds for five times quickly to clear the pairing data, the LED on both earbuds will blink once, and then the earbuds will turn OFF.

**Step 3:** Put them back into charging case, and "Phantom 200" is ready to use on auto ON & auto pairing.

The reset process is now complete, and you can hear music through both earbuds.

### TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version:	V5.2
Effective Distance:	15m
Impedance:	32Ω
Product Weight:	43g
Speaker Size:	13mm
Total Play Time:	About 30 Hours
Play Time In Single Charge:	About 8 Hours
Talk Time:	About 25 Hours
Standby Time:	About 200 Hours
Case Charging Time:	1.5 Hours
Earbuds Charging Time:	1 Hour
Rated Input:	5V/1A
Frequency:	20Hz~20KHz
Sweat and Water Resistant:	IPX5

### SAFETY AND MAINTENANCE

Please read below suggestions to help prolong the product lifespan and clearly understand the warranty clauses:

- Gamers need to hydrate after a long match. That is not the case with our product, so, **Please keep the product dry, do not put it in humid conditions to avoid a short circuit.**
- We understand you carry the fire of a gamer within you, but please, **Do not expose it to the peak sun or high heat for extended periods of time as this will short lifespan of electronic components, damage battery and deform some plastic parts.**
- You may be Captain Cool leader of your squad but our products work best without a cold environment, so, **Do not put it in cold circumstances to avoid damage to the PCB board.**
- We know you are tech geeks and can build your own gaming PC from scratch, but, **Do not attempt to dismantle the product, as it may be unsafe especially for non-professionals.**
- Gamers are tough and our product are tougher, but please **Do not use chemical products, detergent, oily liquids to clean the item.**
- In game, the bullets and knives are the norm however, **Do not scratch the surface with sharp items to avoid damaging the case and appearance.**
- We understand your passion for power, but in this case, **Less is More, so, Do not charge the product for more than 5 hours to avoid loss in battery life.**
- Being immersed in the game is one thing, yet **Avoid hearing music at maximum volume for long periods as this can affect your hearing and is not advisable.**