



POWERPODS True Wireless Earbuds



USER MANUAL

Introduction

Welcome to the Wings True Wireless Generation with the all new Wings PowerPods. We hope you are as excited as us to feel and flaunt your latest soundwear.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual, we are sure you will be all set to.

FEEL IT! FLAUNT IT!

2


What's In The Box

- 2x Bluetooth Earbuds
- 1x Portable Charging Case
- 1x User Manual
- 1x Charging Cable



Overview Of Headset

- Microphone
- Touch Button
- LED Indicator

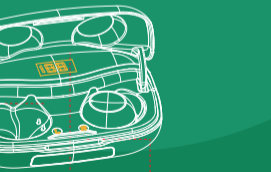

- Charging Pin
- Battery Display
- Input Port / Output Port

3

How To Pair

Step 1: Take out both the earbuds from the charging case. They will automatically power on.

Step 2: Please wait for 3 seconds, the earbuds will automatically pair with each other and you will hear a voice prompt "TWS CONNECTED".

Step 3: Turn on the Bluetooth on your mobile and pair with device name "Wings PowerPods".

Step 4: Congratulations! You are now connected and can start playing media.

Single Earbud Usage

Step 1: Take out any one earbud from the charging case. It will automatically power on.

Step 2: Turn on the Bluetooth on your mobile and pair with device name "Wings PowerPods".

Step 3: Congratulations! You are now connected and can start playing media.

Note: There is no master earbud and any one earbud can be used in Mono mode.

Note: During mono mode usage, at any time, you can take out the other earbud also and it will autoconnect and move to dual mode.

4

Touch Controls Usage

Play/Pause: Single Touch the sensor on any one earbud to pause music. Single Touch on any sensor again to resume playing music.

Changing Songs: Double Touch the sensor on right earbud to go to next song. Double Touch the sensor on left earbud to go to previous song.

Adjusting Volume: Long Touch the sensor on right earbud to go to increase volume. Long Touch the sensor on left earbud to go to decrease volume.

Siri/Google Assistant: Triple Touch the sensor on left earbud to activate voice assistant.

Note: Changing songs and adjust volume functions cannot be used in mono mode.

Call Controls

Answer Incoming Call: Single Touch the sensor on any earbud to answer incoming call.

Reject Incoming Call: Double Touch the sensor on any earbud to reject incoming call.

Hang Up After Call: Single Touch the sensor on any earbud to end an active call.

5

Game Mode

In Game Mode, you will experience a lower lag between audio and video with a slightly lower audio output. This mode is definitely to be used for playing games and watching movies

Enter Game Mode: Triple Touch the sensor on right earbud. You will hear a voice prompt "Game Mode".

Exit Game Mode: Triple Touch the sensor on right earbud again. You will hear a voice prompt "Music Mode".

6

Charging Function

Charging the Earbuds: Place the earbuds back into the charging case. Please make sure to close the lid of the case to start charging the earbuds.

Charging the Case: Take the USB charging cable. Plug in the micro USB end into the charging case and the other end into a plug point. The LED screen will show "IN" along with battery percentage to indicate case is now being charged.

Note: Please do not use more than 5V output plug points to charge as it can cause damage to the case and will affect battery life.

Power Bank Function: To charge your mobile using the case, plug the USB end of the cable into the charging case and the other end into your mobile. The LED screen will show "OUT" along with battery percentage to indicate the power bank function is now active.

Low Battery Warning: When the battery level on the earbuds is low, you will hear a voice prompt "BATTERY LOW". Please place the earbuds back into the charging case to charge them immediately.

7

Resetting The Device

Please follow the below steps when you see 2 "Wings PowerPods" in your Bluetooth devices menu on your mobile or you can hear music through only 1 earbuds. This means the left and right buds have not auto-paired with each other :

Step 1: Switch off your mobile Bluetooth and remove "Wings PowerPods" from the list of paired devices in your mobile.

Step 2: Take out both earbuds from the charging case.

Step 3: In the pairing state, Triple Touch the sensor on both earbuds. You will hear the voice prompt "TWS Pairing".

Step 4: If autopairing is successful, you will hear the voice prompt "TWS Pairing Success".

Step 5: Switch on your mobile bluetooth and now you will be able to see only 1 "Wings PowerPods". Click on the device to connect.

Reset process is complete and you will be able to hear music through both earbuds.

8

Technical Specifications

- Bluetooth Version: V5.0
- Profile Support: HSP, HFP, A2DP, AVRCP
- Stand-by Time: 2160h
- Talk Time: 5-6 hours
- Charging Time: 1 hour
- Charging Voltage: DC 5V
- Frequency Range: 2.402G - 2.480G
- Ambient Temperature: -20°C / +60°C
- Transmission Distance: 10m
- Earbuds Battery Capacity: 50mAh / 3.7V
- Charging Case Battery Capacity: 2500mAh / 3.7V
- Driver Unit: 8 mm
- Sensitivity: 95dB 3 3dB
- Impedance: 16Ω 3 10%
- Frequency Response: 20Hz - 20000Hz

9

Safety And Maintenance

Please read below suggestions in order to helping prolong the product lifespan and clearly understand the warranty clauses.

- Keep the product dry, do not put it in humid conditions to avoid short circuit.
- Do not expose it to the peak sun or high heat for extended period of time as this will short lifespan of electronic components, damage battery and deform some plastic parts.
- Do not put it in cold circumstance to avoid damage to PCB board.
- Do not attempt to dismantle the product, as it maybe unsafe especially non-professionals.
- Do not use chemical products, detergent, oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not scratch the surface with sharp items to avoid loss in battery life.
- Avoid hearing music at maximum volume for long periods of time as this can affect your hearing and is not advisable.

Note: Any damage to the product that occurs which is not manufacturing defect will lead to warranty being rendered null and void. Therefore, please take utmost care of your product.

10