



STKK50 User Manual

SAFETY PRECAUTIONS

Basic safety precautions must be followed when handling or using electrical products, especially those within the reach of children. Please make yourself aware of the following guidelines:

- This product should only be used by children who are 8 years and older or by persons with disabilities who have received supervision and instructions on the safe use and the hazards involved when using this product.
- It is unwise to allow children to play with this electronic bidet, supervised or not.
- It is not recommended that children who are unsupervised be allowed to clean and perform maintenance for this product.

SIGNS AND MEANINGS



WARNING

Improper operations due to ignorance of the instructions may result in death or injury



CAUTION

Improper operations due to ignorance of the instructions may result in body injury and property loss



FORBIDDEN

Not allowed



MUST

Should be followed

WARNINGS



Please do not touch the electrical outlet with wet hands.

- Or it may cause electric shock

Please do not pour liquids such as water or detergent on top of the electronic outlet and the toilet.

- Or it may cause fire, electric shock, heat or short circuit
- Or it may cause injury and indoor water seepage because of the damaged part

Never attempt to disassemble, repair, or alter the product yourself.

- Or it may cause fire, electric shock, heat or short circuit



Please do not install the toilet in the car, ship, or any other moving objects.

- Or it may cause fire, electric shock, short circuit or fault
- Or the ceramic, seat, and the main part will be damaged due to fall

Do not use if it is broken. Under the following condition, please turn off the toilet and the water angle valve.

- Water leakage from the pipe or inner parts of the toilet
- Smoke
- Unusual heating and smell
- Blockage



Continuous use of the toilet despite of the damages and above-mentioned conditions may result to fire, electric shock, heat, short circuit, injury, and indoor water seepage.

Please don't use seawater and other water except for tap water or potable well water (underground water)

- Or it may cause skin irritation or inflammation

During thunderstorms, do not touch the electrical plug

- Or it may cause electric shock

Please do not let the water inlet soft pipe connect to the electrical plug and outlet

- Or it may cause fire, electric shock, heat, and short circuit because of moisture condensation



Please do not damage the power cable or plug. Do not strike, yank, twist, bend excessively, or alter the electrical cords. Also, do not place anything heavy on, bind or pinch the cords

- Or it may cause fire, electric shock, heat, and short circuit if it's broken

Please do not use a loose or faulty electrical outlet

- Or it may cause fire or short circuit

Please use the electrical outlet and wire appliance in the specified outlet

- Or it may cause fire

Please do not put your finger or anything into the warm air outlet. Do not cover or put objects or clothes on the air outlet.

- Or it may cause scalding, electric shock, or fire



Pay attention to the low temperature scalding
Improper use of warm seat may cause low temperature scalding

If you sit for a long time, please turn the temperature setting to "off level. Please turn the seat temperature setting to "off level, warm air-dry temperature to "low" level under the following situations

- Children and elders or those who cannot adjust the temperature to the proper level
- Persons with disability and patients with behavioral problems
- People who have taken medicines with side effects of hypnosis (hypnotics, cold meds, etc.), or those who are excessively drinking alcohol, too tired, and with somnolence



This is an electrical product, please do not install it in a place where it will get wet easily or in areas with high humidity. If installed in the bath- room, please install a ventilator to maintain the bathroom ventilation. Or it may cause fire or electric shock

The product must be connected to the cold water supply

- Or it may cause body burn or machine fault

Please confirm if the electrical outlet is connected to the ground.

- Or it may cause electric shock because of fault or short circuit

The outlet for power wire should obey the following rules or it may cause fire or electric shock.

Please ask the maintenance team or similar department to replace the power soft wire if it is broken to avoid danger. Repair work must be done by professionals.



Please do not throw lighted cigarettes and other flaming material into the toilet.

- Or it may cause fire



Do not install this product in a room where it may be frosted. The room temperature can't be less than 39.2 degree Fahrenheit.

Don't block the air outlet



Do not use excessive force when closing the cover and the seat.

Do not intentionally soil, spray, or block the cleaning nozzle.

Pull out the plug regularly and clean off the dust with a dry cotton cloth.

Use the new hose parts that come with the product. The old ones should not be reused.



Keep the product away from the heater.

Close the water supply valve before taking out the junction block.

If you need to be away for a long time, be sure to plug it out, turn off the water, and drain the remaining water inside the bidet. The remaining water may freeze when the product is transported over long distances or stored for a long time in cold winter or alpine region.

AUTOMATIC FUNCTIONS

Self-Cleaning Wand

The spray wand cleans itself before and after every use by rinsing itself as it enters and exits.

Aromatherapy

The aromatherapy starts anytime the seat sensor has been activated. The aromatherapy will stop automatically after approximately 15 seconds.

UV Sterilization

Every time the lid closes the UV sterilization activates and kills germs

Pre-Rinse

The Pre-Rinse starts anytime the seat sensor has been activated. A quick jet of water covers the bowl to help waste slide down.

Automatic Flush

The toilet will flush automatically when someone leaves the seat sensor. This setting can be turned on and off.

Automatic Opening/Closing

The lid and seat can be set to automatically open when approaching the toilet. This setting can be turned on and off.


Infrared Therapy

While washing, the infrared light activates.


Efoam

Once a user sits down, foam is inserted into the toilet to help the bathroom smell better, to eliminate splashing, and keep the bowl cleaner.


GETTING TO KNOW YOUR KNOBS

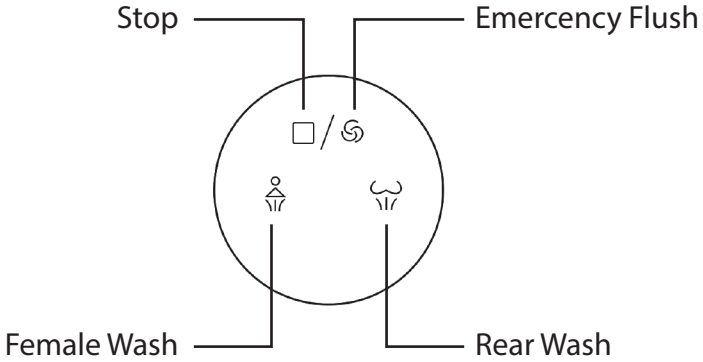

GETTING TO KNOW YOUR DIGITAL DISPLAY

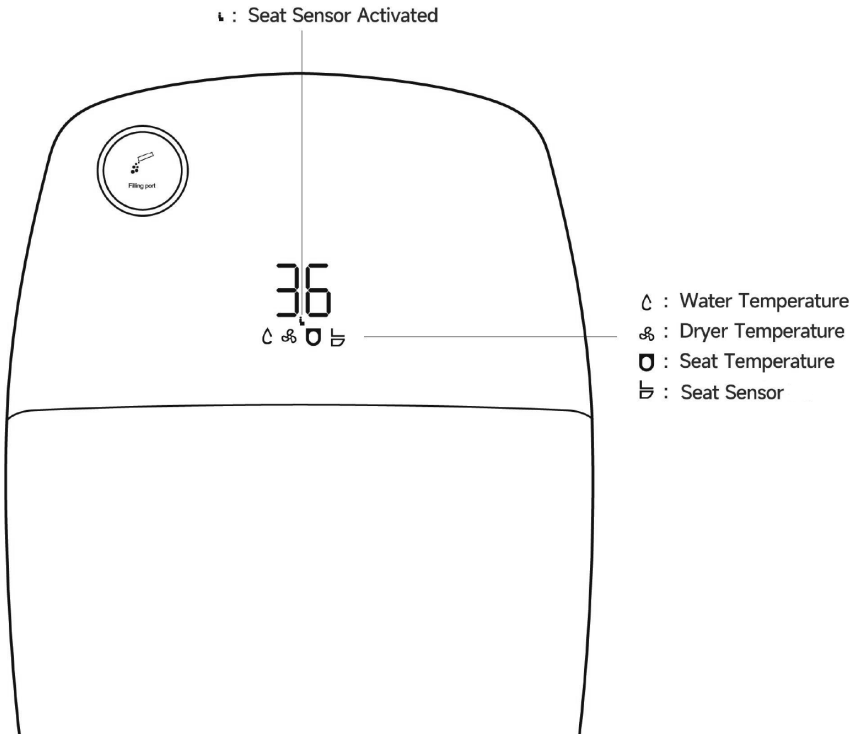


GETTING TO KNOW YOUR REMOTE

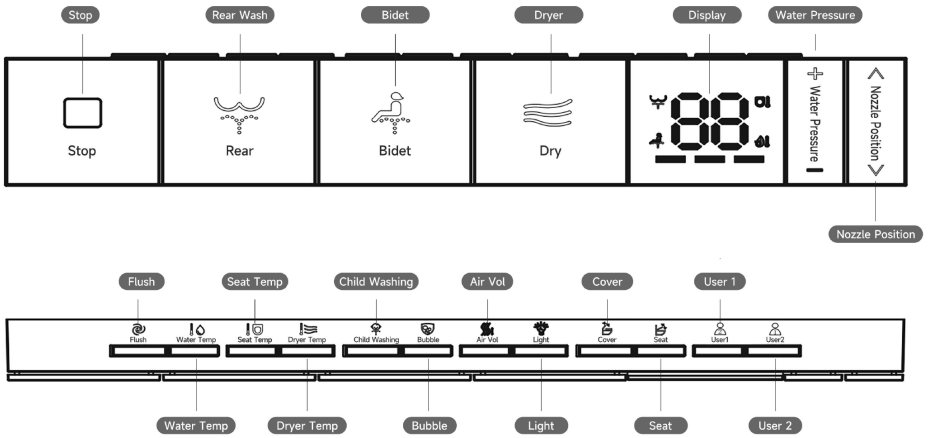

GETTING TO KNOW YOUR LID & SEAT

Opening and Closing the lid

There are four methods to open and close the lid. These methods include (1) by hand, (2) using the remote, (3) using the foot sensor and (4) automatically.


- Method 1: Using your hand you can open or close the lid.
 - Note: Do not interrupt the lid opening or closing with your hand if it is moving via another method. This can cause the gears to break.
- Method 2: Press the Cover button [] to open or close the lid.
- Method 3: When the lid is closed, gently tap the location of the foot sensor.
- Method 4: The lid will automatically open when you are close to it if the automatic lid function is active. The lid will

automatically close on its own after no motion is detected for approximately 30 seconds.


- Note: You can activate or deactivate this feature. See instructions on this feature on page 12.

Opening and Closing the seat

There are three methods to open and close the seat. These methods include (1) by hand, (2) using the remote, and (3) using the foot sensor.

- Method 1: Using your hand you can open or close the seat.
 - Note: Do not interrupt the lid opening or closing with your hand if it is moving via another method. This can cause the gears to break.
- Method 2: Press the Seat button [] to open or close the seat.
- Method 3: When the seat is closed, gently tap the location of the foot sensor.



Adjustable Seat Temperature

- Press the Seat Temp button [] until the desired seat temperature is selected. There are four adjustment levels.





Setting Automatic Lid Opening/Closing

- Press and hold the Seat button [].

Setting of Sensing Distance (Cover Flip/Seat Flip)


- Press and hold the Light button [] for approximately three seconds until the levels (b1-b5) appear on the screen.
- Press the Light button [] to cycle through one level at a time. The higher the number the greater the sensing distance.

Adjusting the Lid and Seat Motor



- Press and hold the Seat button [] for approximately three seconds until the levels (G0-G4) appear on the screen.
- Press the Water Temp button [] to cycle through one level at a time. The higher the number the greater strength.
- To adjust the seat motor, repeat the first step and press the Seat Button [] twice until the levels (S0-S4) appear on the toilet screen.
- Press the Water Temp button [] to cycle through one level at a time. The higher the number the greater the strength.

GETTING TO KNOW YOUR BIDET

Stop

- Press the Stop button [] to immediately end any function.


Rear Wash

- When the user is seated, press the Rear button [] to start rear washing. Press the Rear button [] again to start the oscillating function.


Adjustable Water Pressure

- When you are washing, use the plus and minus buttons [+ -] to increase or decrease the water pressure.



Adjustable Spray Wand Position

- While washing, press the arrow buttons [ ].


Adjustable Water Temperature

- Press the Water Temp button [] until the desired water temperature is selected.


Front Wash

- When the user is seated, press the Bidet button [] to start front washing. Press the Bidet button [] again to start the oscillating function.


Drying

- When the user is seated, press the Dry button [] to start the drying function.


Adjustable Drying Temperature

- While you are drying, press the Dryer Temp button [] until the desired air temperature is selected.

Adjustable Drying Strength



- While you are drying, press the Air Volume button [] until the desired air strength is selected.

Baby/Children Wash

- When the user is seated, press the Child Washing button []. Child washing presets the water pressure to low and the water temperature to warm. Press the stop button when finished.

GETTING TO KNOW YOUR BOWL



Efoam

- To switch Efoam from Automatic to Manual, press and hold the Bubble button [].
- Turn manually use Efoam instead of automatically, press the Bubble button [].
- Efoam helps eliminate splashing, makes the room smell better, and makes the toilet easier to clean.



Night Light

- Press the Light button [] to turn on/ the night light.

Automatic Flush


- Press and hold the Air Temp button [] for approximately 3 seconds until you hear a beep.
- Then press and hold the Seat Temp button [] until you hear a beep. This will activate/deactive automatic flushing.

Adjusting the Flush Time

- Press and hold Dry button [] until the levels (U0-U1) appear on the screen.
- Press the Dry button [] again to switch between the levels. The greater the number the longer the flush duration.

PAIRING THE REMOTE



- 1) Unplug the toilet power.
- 2) Press and hold the Bidet button [] for approximately 3 seconds.
- 3) Plug in the toilet power.
- 4) You have successfully paired your remote control with your toilet bidet combo.

HOW TO ADD EFOAM LIQUID

To refill the Efoam:


1. Pull up the rear cover. Press the foam cover and rotate clockwise to unlock the cap.
2. Connect the two tubes at the top of the cap.
3. Insert the foam bottle, replace the cap, and turn counter-clockwise to lock the cap into place.
4. Re-install the rear cover.



①



②

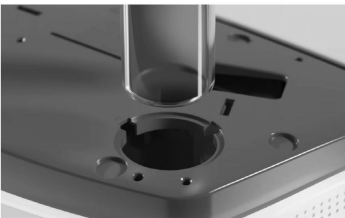

③




④

HOW TO ADD AROMATHERAPY

When your aromatherapy begins to lose its scent, you can add your own essential oil to the aromatherapy tablet. You can also purchase a new tablet at www.troneplumbing.com. To add aromatherapy:

1. Pull up the rear cover and remove the Aroma box from the toilet.
2. Take out the white storage panel and open it with a screwdriver or scissors.
3. Fill in the storage holes with aroma beads, reseal the box and place the box back inside the toilet. Reinstall the rear cover.

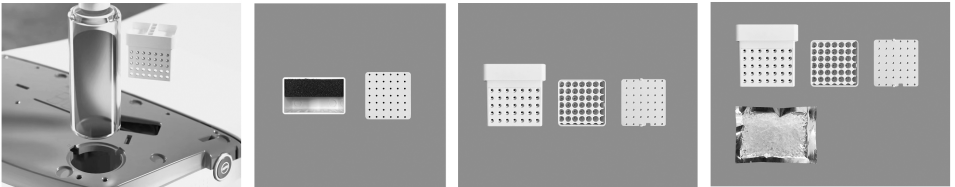


CLEANING AND CARE

Note: Turn off the power, close the water supply angle valve, and stop the water supply before doing any maintenance work. DO NOT rinse this product with water during maintenance.


Toilet Bowl Cleaning

- Please ensure that the electrical plug is taken out.
- Please use soft damp cloth to wipe the toilet shelf and seat. The dirt should be easily removed. If it's not, you may use neutral detergent.

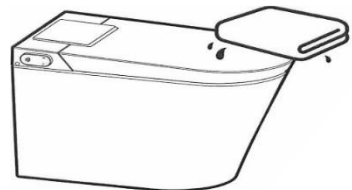


Cleaning the Steel Mesh Filter


- If the flush or bidet washing become weak, clean the steel mesh filter. Close the water supply angle valve.

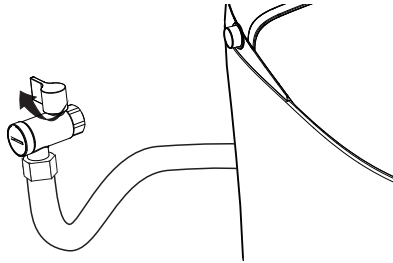

- Turn the filter counterclockwise with a flathead screwdriver or coin to open the filter. It is recommended to clean the steel mesh every 1-2 months.

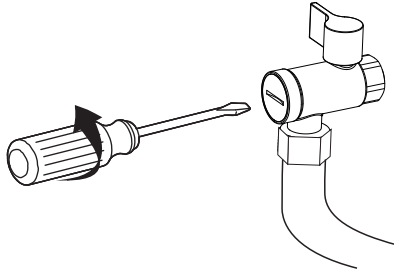

- Clean with water and toothbrush. Do not use any cleaning chemicals.

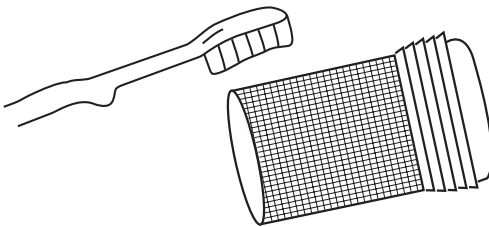

- Reinstall the filter and turn back on the water.

Replacing the Battery

- The toilet has an emergency backup battery for flushing without power. Replace the battery when necessary.

PRODUCT SPECIFICATIONS

Model Number	STKK50
Rated Voltage	120V-, 60Hz
Rated Power	1550W
Power Cable	1.5m
Applicable Water Pressure	22 - 105 PSI
Waterproof Level	IPX4
Cleaning Water Flow	0.18 gpm
Seat Temperature Adjustment	93.2 to 104 °F
Water Temperature	93.2 to 104 °F
Wind Temperature	95 to 131 °F

support@troneplumbing.com
www.troneplumbing.com