
NovaCaddy Golf Trolley Tracking Adjustment

Please test the tracking of your caddy without the bag on even terrain. The tracking can be adjusted via the adjustment mechanism mounted to the front wheel.

Two Adjust Nuts Style (Pic1 & Pic2)

This style is applied to Model X9RD/X9R(Pic1), and earlier models of S2R, P1D3 and S1R(Pic2)

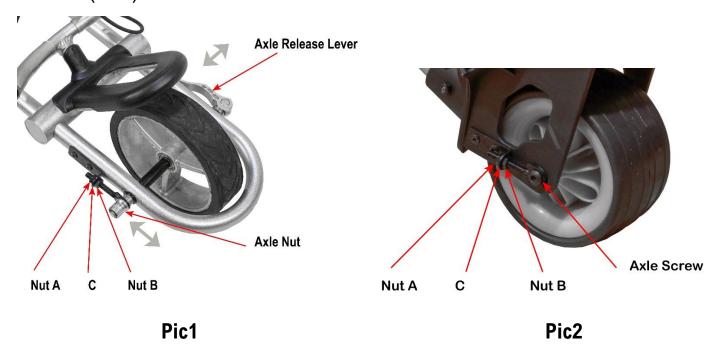

Release the Axle use Axle Release Lever(pic1) or by loosing Axle Screw (Axle Nut) (Pic2 & Pic1).

Adjust tracking to left direction: Loose Nut A Tighten Nut B (both nuts should touch with limitation bar C) to shifting the axle to left direction.

Adjust tracking to right direction: Loose Nut B Tighten Nut A (both nuts should touch with limitation bar C) to shifting the axle to right direction.

Lock the Axle Release Lever and Tighten Axle Screw after adjustment.

Thumb Wheel Style (Pic3)

This style is applied to Model S2R and P1D3 (pic3)



Adjustment Thumb Wheel

Pic3

Release Axle by loosing the Axle Screw. Turning Adjustment Thumb Wheel DOWN (left and/or right side of the front wheel) to adjust the alignment to RIGHT direction, tuning the thumb wheel UP to adjust the alignment to LEFT direction. Always working from one side first.

Tighten Axle Screw after adjustment.

During operation make sure the bag is positioned straight and cannot shift, and the weight in your bag is evenly distributed. Operate the caddy in a forward-looking manner taking the topography and the slope into account. Occasional directional adjustments might be necessary.