


OLED watch operating instructions

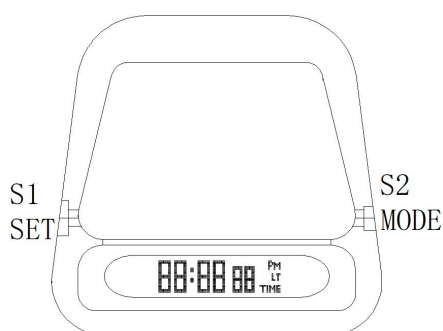

1. Function description

- ①. Time calendar function.
 - a. Time range: January 1, 2020 to December 31, 2099;
 - b. 12/24 hour option;
 - c. Week: Automatically calculate and display
- ②. 1 Group alarm function.
- ③. Alarm time: 10 seconds.
- ④. Hourly timekeeping function.
- ⑤. Stopwatch function.

The maximum value is 23:59 '59";
- ⑥. Countdown function.

Maximum value: 24:00 '00";
- ⑦. Hand light screen, OLED backlight.
- ⑧. Temperature display, error plus or minus 1 degree.

2. Button description

【S1】 button

- a. Press and hold [S1] in the time mode to switch on and off the function of raising the hand to brighten the screen.
- b. In countdown mode, press to start/pause the countdown.
- c. In stopwatch mode, short press the stopwatch to start/stop timing.
- d. In the setting mode, adjust the setting value, short press plus 1, long press fast setting.

【S2】 button

- a. Short press to cycle through the function modes: Time → Date → temperature → stopwatch → countdown → alarm → second clock.
- b. Long press to enter the corresponding setting mode, and short press the setting item conversion button in Setting mode.
- c. Long press the stopwatch to zero in stopwatch mode.

3. Operation instructions

3.1 Time mode

Time mode



3.1.1 Display state


After power-on, the screen is displayed in time mode, which displays the current time and the status of the hand brightening switch.

3.1.2 Set state

- Long press [S2] to enter the time setting state.
- Press [S2] to switch the setting items in the following sequence: 12/24H → second → hour → minute → year → month → day → temperature system → temperature deviation value. In the setting state, press [S1] to adjust the value of the setting item, and press and hold [S1] to enable fast setting.
- In the time setting state, 5 seconds no button operation, automatically exit the setting and save the current setting, return to the time display mode.
- Long press the [S1] button in the time mode to switch on the hand lift screen lighting function. By default, hand lift screen lighting function is on during power-on, and the LT character is displayed on the screen. The light screen function is automatically turned off after 12 hours of operation, and the LT character disappears on the time screen. If necessary, you can press and hold [S1] button to turn it back on.

3.2 Date mode

Date mode



3.2.1 Display state

- Press [S2] on the time interface to switch to the date and week display mode.
- Automatically return to the time mode after 3 seconds of display.
- In the date mode, the week is automatically calculated after setting the time, no need to set it separately.

3.3 Temperature mode

Temperature mode




3.3.1. Display state

- In the time interface, press [S2] twice to switch to the temperature interface, The temperature is adjusted in the set time mode.
- Displays the current ambient temperature of the watch.

3.4 Stopwatch mode

Stopwatch mode




3.4.1. Display state

- In the time interface, press [S2] thrice to switch to the stopwatch interface, displaying ST character and the initial value of the stopwatch: 00:00 '00 ".
- Short press [S1] to start/pause running second timing. In the state of pause, long press [S2] to clear zero.

c. When the clock reaches the maximum value (23:59 '59 "99), no alarm will be given and the clock will continue to run from 00' 00" 00.

3.5 Countdown mode

Countdown mode



3.5.1. Display state

In the time interface, press [S2] four times to switch to the countdown interface, displaying TR character and the initial countdown value: 24:00.00. Press [S1] to start or pause the countdown.

3.5.2. Set state

a. In the countdown mode, long press [S2] for 2 seconds to enter the countdown setting state. Short press [S2] to switch the setting item: hour → minute.

b. Press [S1] to adjust the value of the setting item. Long press [S1] to enable fast setting.


c. In the countdown setting state, 5 seconds no button operation, automatically exit and save the current setting, return to the countdown mode.

3.5.3. Alarm state

When the countdown is over, the alarm will ring for 10 seconds. Press any button to stop the alarm and return to display the countdown setting value.

3.6 Alarm mode

Alarm mode



3.6.1 Display state

In the time interface, press [S2] five times to switch to the alarm interface, displaying the AL character, alarm time and alarm switch status.

3.6.2 Set state

Long press [S2] to enter the alarm setting interface. When the alarm switch is on and blinks, press [S2] to switch to setting items and press [S1] to adjust the setting value.

Set the sequence as alarm switch → alarm hour → alarm minute → alarm time switch.

3.6.3 Alarm state

Alarm event, 10 seconds alarm reminder, press any button to stop the alarm.

3.7 Second clock mode

Second clock mode



3.7.1 Display state

In the time interface, press [S2] six times to enter the second clock display mode, displaying DT characters and the second time.

3.7.2 Set state

a. Long press [S2] to enter the second time setting state.

b. Press [S2] to switch the setting items in the following sequence: hour → minute, and second follows the first time. In the setting state, short press [S1] to adjust the value of the setting item, and long press [S1] to enable fast setting.

c. In the second clock setting state, 5 seconds no button operation, automatically exit and save the current setting, return to the second clock mode.

3.8 Power Consumption

- a. 4uA when in the display closed state
- b. Display opening current: the time display interface is 5.2mA. Other interfaces may change according to the difference of display characters.

4. Precautions

- a. This device is equipped with non-removable built-in battery. Do not replace the battery by yourself to avoid damaging the battery or the parts of the movement.
- b. Strong static charge interference can make the display screen not display properly and even damage the watch parts inside.
- c. Do not press the SET and MODE buttons hard.
- d. It should not be worn when taking a bath or swimming.
- e. Do not expose the Watch to a place with high moisture or extremely high or low temperature for a long time.
- f. If you need to clean the watch or strap, use a soft dry cloth to wipe with water or a neutral detergent, never use volatile chemicals.
- g. Do not make the watch by strong impact or vibration, so as not to damage the movement, resulting in the failure of the watch.
- h. The paint on this watch may fade due to strong pressure, collision, abrasion, friction, and so on.
- i. When not using this watch, please place it in a dry place.
- j. The company reserves the right to modify the contents of this manual without prior notice.