




# Electric Heated Pet Bed

PWB 801/802 | PR4878

## HEATING PAD CONTROLLER OVERVIEW

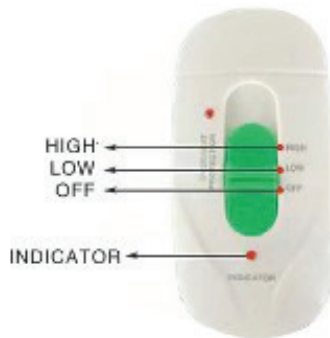

### Specifications:

Size of the Heating Pad	40 x 40cm
Rated Power	20W
Rated Voltage	230V
Temperature	25 - 40°C
Cable Length	180CM

# USING THE HEATED PET BED

1. Insert the electric heat pad inside the cushion of the pet bed then close the zip. Make sure your pet cannot remove it.
2. Place the pet bed on a flat, horizontal surface.
3. Make sure the power cable comes out of the bed through the special opening at the back and is not being squashed or damaged.
4. Connect the Electric Heated Pet Bed to the power outlet.
5. Set the temperature to high and allow the mat to heat up for at least for 15 minutes to reach its optimum operating temperature. Once preheated, set the desired temperature.

## CARE & MAINTENANCE

Regularly check that the product is in good working condition, paying close attention to the power cable and heat pad for any signs of damage.

Before storing the product allow it to cool down.

Clean the heat pad with a soft, damp cloth — avoid using detergents or chemicals. Do not submerge the heat pad in water or place it in a washing machine.

The bed and cushion cover, without the heat pad, cushion insert and cable, can be machine washed using cold or 30°C wash. Do not iron. Do not bleach. Low temperature tumble dry.

# LENOXX™

[www.lenoxx.com.au](http://www.lenoxx.com.au)



1300 666 848



LenoxxElectronics



LenoxxElectronics