


SK3510PD Single Handle Pull-Down Kitchen Faucet **Operation & Maintenance Manual**




Model Numbers		Feature Highlights	
☐ SK3510PD	Single Handle Pull-Down Kitchen Faucet, Polished Chrome	 Pull-down spray wand with 2 mode spray selector, 3/8 inch supply hose compression connections 1.5 gpm (5.7 L/min) standard flow rate Metal construction plated in standard polished chrome finish 	
Compliance		Warranty	
- ASME A112.18.1/CSA B125.1 - NSF/ANSI/CAN 61: Q<1, NSF/ANSI 372		Limited Lifetime - to the original end purchaser in consumer/residential installations.	
★ WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.		10 Years - for commercial/industrial installations. Refer to www.symmons.com/warranty for complete warranty information.	

Dimensions

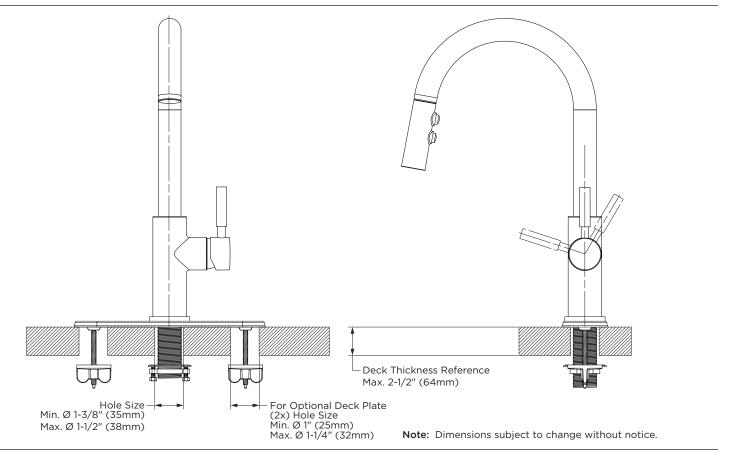

Parts Breakdown

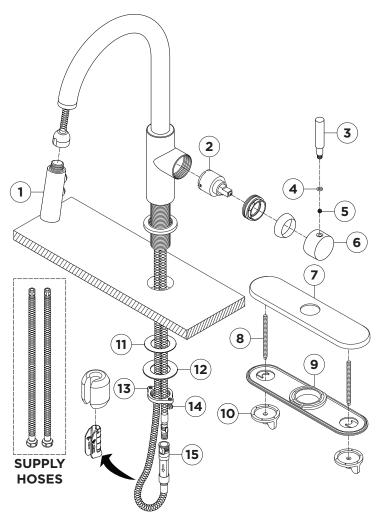

Item	Description	Part Number
1	Wand	RK-054*
2	Cartridge	KN-4
3 4 5 6	Lever O-ring Set Screw Handle Hub	RK-055*
7 8 9 10	Deck Plate Shanks Gasket Mounting Nuts	RK-057*
11 12 13 14	Plastic Washer Metal Washer Mounting Nut Mounting Screws	RK-028
15	1.0 gpm Adapter 1.5 gpm Adapter 2.2 gpm Adapter	RK-060-1.0 RK-060-1.5 RK-060-2.2

Replacement Parts


*Note: Append -STN to part number for Satin Nickel finish.

Notes:


- 1) Apply a bead of silicone around the perimeter of trim installed flush to sink.
- 2) DO NOT use plumber putty or plumber tape on fittings with face seal washers or o-ring seals.
- 3) DO NOT OVERTIGHTEN fittings with face seal washers or o-ring seals.

Tools Required			
Adjustable Wrench			
2.5mm Hex Key			
Measuring Tape	A DE		
Phillips Head Screwdriver			
Safety Glasses			
Silicone			
Soft Jaw Pliers			

 Mount Faucet: Install faucet (A) and faucet flange (B) to deck surface.

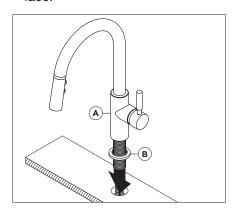


- 2) Optional Deck Plate Install:
 Assemble deck plate (C), gasket
 (D) and deck plate shanks (E).
 Place deck plate assembly onto
 three hole deck surface.
- 3) Optional Deck Plate Install:
 Once deck plate is centered,
 hand tighten mounting nuts (F) to
 secure.
- 4) Optional Deck Plate Install: Install faucet (A) and faucet flange (B) to deck plate surface.

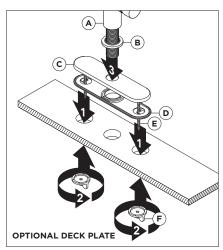

5) Secure Faucet Mounting Hardware: From below deck, slide plastic washer (B) and metal washer (C) onto threaded faucet body (A)...

- **6)** Thread mounting nut (D) onto faucet body.
- 7) Secure mounting hardware to deck with mounting screws (E).


Note: Hoses have been removed for clarity.

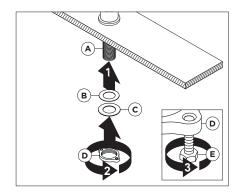


8) Connect Pull-Down Hose:

Attach quick disconnect adapter (B) to the pull-down hose adapter (A). Arrows on adapter ring must be aligned with quick disconnect release tabs for full engagement.

Note: Press both quick disconnect release tabs to easily disconnect adapters.

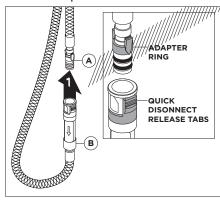

9) Orient guide (D) so arrow is facing upward. Slide bottom of guide onto pull-down hose before attaching top of guide. 10) Attach counterweight (C) to pulldown hose. Slide counterweight over top of guide. Push counterweight down so it holds guide.

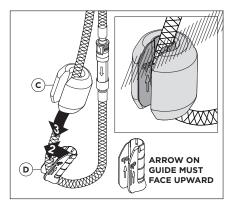


11) Connect Water Supply Lines:

Connect hot supply hose (on left side) and cold supply hose (on right side) to supply outlets.

Notes:

DO NOT use plumber putty or plumber tape on fittings with face seal washers or o-ring seals.


DO NOT OVERTIGHTEN fittings with face seal washers or o-ring seals.

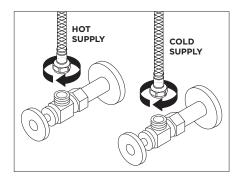

12) Flush Supply Lines:

Remove wand (B) from pull-down hose fitting (A). With faucet handle in the off position, turn on supply outlets.


Installation

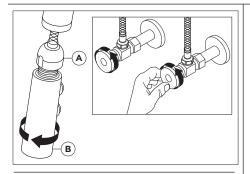


13) Slowly pull handle (C) forward to the cold position, then back to the hot position. Check for leaks, debris and foreign matter.

Note: Faucets purchased before XX/2020

feature 45 degree handle rotation, forward and backward. Suggested minimum distance to backsplash or finished wall is 4" (102mm).

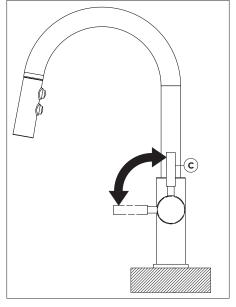


14) After faucet supply lines have been flushed, install wand to pulldown hose fitting.

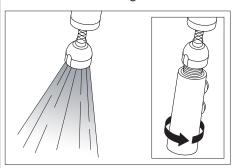


Maintenance

- Remove Cartridge: Remove lever

 (A) from handle hub (C) with soft
 jaw pliers as to avoid damaging
 finish on lever handle. Use 2.5mm
 hex key to remove set screw (B)
 from handle hub.
- 2) Remove handle hub (C) from faucet.
- IMPORTANT: Soft jaw pliers must be used on lever handle to avoid damaging decorative finish.

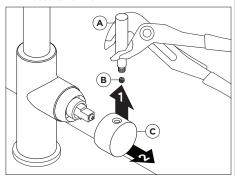


- 3) Remove decorative collar (D).
- 4) Remove compression nut (E).
- 5) Remove cartridge (F) from faucet body. Inspect cartridge for debris and replace cartridge if necessary.

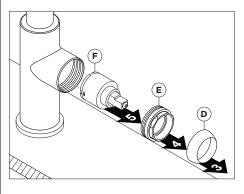


- 6) Replace Cartridge: Orient cartridge so pegs align with holes in faucet body (see illustration to the left for reference).
- To install cartridge, reverse steps
 1-5 in the Remove Cartridge section above.

Note: Faucets purchased before XX/2020

feature rotated cartridge rientation (see illustration below for reference).

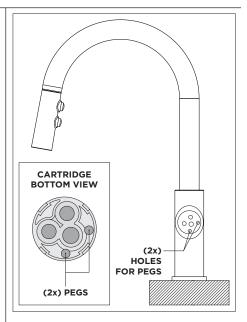

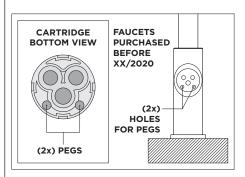

Troubleshooting Chart

Problem	Cause	Solution
Faucet no longer maintains accurate temperature.	Foreign matter such as copper chips, sand, stones, etc. clogging the cartridge ports and/or damaging the sealing surfaces of the cartridge.	Remove cartridge and inspect for debris. Replace cartridge if necessary.
Flow is irregular.	Accumulation of sediment in cartridge.	Remove cartridge and inspect for debris. Replace cartridge if necessary.
Same as above.	Accumulation of sediment in spray wand.	Remove and clean spray wand.
Pull-down hose will not retract.	Pull-down hose is not properly weighted to allow hose to retract.	Install counterweight to pull-down hose or adjust counterweight.
Handle is loose.	Set screw has loosened.	Tighten set screw.
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.