

Ri1000 Chip and Ink Bag Installation

Ink Chip Swap Instructions

To replace ink chip and ink bag on RI2000 ink cartridge with FIREBIRD ink and chip. [Link to Video Tutorial](#)

To start this process, you will need:



Procedure:

Note: Procedure is the same for W1 and W2

① Open the Ink Cartridge

Use a Phillips head screwdriver to remove the 2 screws on the back of the cartridge.



Use a flathead screwdriver to press in the locking tabs on either side of the cartridge.



Ri1000 Chip and Ink Bag Installation

Hold each side of the ink cartridge and carefully lift the side without the chip to separate them.



② Replace Ricoh ink bag with FIREBIRD ink bag

Pull from the top of the original ink bag to separate it from the cartridge and the double-sided tape. Please do not squeeze the ink bag to avoid spills.



Place the new FIREBIRD ink bag in the chip side of the cartridge with the label facing upright.



Note: Location of chip is indicated by green circle



3 Replacing Ricoh Chip with FIREBIRD Chip

To remove the chip, pull back the tab to the right of the cartridge and slide the chip up. To replace Ricoh chip with FIREBIRD chip, pull back right tab again and gently slide the FIREBIRD chip in.

Note: Make sure the serial number on the chip is facing upright when replacing.

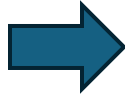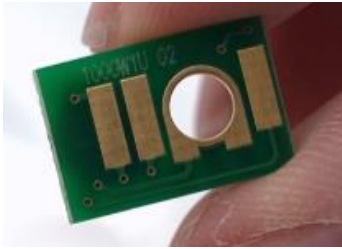

Line the three clips at the bottom of the cartridge up and press the two sides together to close the cartridge.



Use the Phillips head screwdriver to replace the screws.

Tip: if there is already a FIREBIRD chip loaded, please replace it with a new one before the machine panel shows 10% left.