

**FOLD DOWN WALL MOUNT  
INSTALLATION INSTRUCTIONS  
For Indoor/Outdoor Line**

**INDOOR/OUTDOOR (1200x 600mm)**

**Parts supplied:**

2 x Pre-Assembled Side Arms (600mm deep)  
2 x Front spacer Bars (430mm x 22mm x 22mm)  
1 x Front Joiner Bar (535mm x 25mm x 25mm)  
Cord 10m

**Accessory Pack:**




1 x Wall Template  
2 x 16mm plastic end Caps for Side Braces  
2 x 25mm plastic end Caps for Side Arm ends  
1 x Cord Knob  
1 x Cord Tidy  
4 x8mm wall plug and 4 screws 6x50mm

**WALL MOUNT INSTRUCTIONS:**

**For a standard installation holes should be drilled 1210mm apart.** Please see below for how to shorten a Fold Down. Mark the top fixing screw approximately 50mm above user's head height (if known). For general installation where user's height is unknown, mark the top fixing screw between 1800-1850mm above finished ground level. Ensure Template is vertically plumb. Please check dimensions if placing over a bench top, cupboards or tough to ensure sufficient space is allowed for line to close.

**To shorten a Fold Down Clothesline:** Mark both sets of fixing points within the available space. Keep 50mm (min.) in from the end of any masonry wall. Measure the distance between the left and right fixing points. Deduct this amount from the standard fixing points given on the previous page for your clothesline model. This is the amount which will need to be cut off the Front Bar. For example: If you are installing a 1200mm long Fold Down and your fixing points are 900mm apart, you will need to reduce the overall length of the Front Bar by 300mm. For the Joiner to remain in the centre of the Front Bar, an equal amount (in this instance 150mm) should be cut off the end of each front Spacer Bar. Do not cut the Joiner Bar. Insert cut Spacer Bars into each end of Joiner Bar to form the new length Front Bar.

1. Please ensure fixing surface is structurally sound. Never fit a clothesline to mortar joints. Drill holes using a hammer drill or variable speed drill with an 8mm drill bit. Insert wall plugs flush with surface if fixing to a masonry wall. Attach the pre-assembled Left Side Arm to wall using 2x screws supplied. The two bent Side Arms should face towards each other.  
**Do not tighten any other Bolts.**
2. Assemble the Front Bar by sliding the two Front Spacer Bars into each end of the Front Joiner Bar. The hole on the end of each Bar is a powdercoat hook and has no relevance to the installation.
3. Fit the Front Bar to the fixed Left Side Arm (after attaching to wall) and to the pre-assembled Right Side Arm. Due to the shorter length of this line it is easier to insert the assembled Front Bar prior to fixing the second Side Arm to the wall.
4. Fix the pre-assembled Right Side Arm to wall using the remaining 2x screws.
5. Lock the frame into the upright position by inserting the 6mm Brace ends into the larger holes in the Side Arms. Slide the Line Tension Lock towards the front corner so it sits over the first hole (refer to centre diagram). Begin by threading the Cord through the 1st hole leaving about 30cm of extra Cord for tying off. Continue threading the Cord through to the back. Slip the Cord Tidy (6mm black ferrule) onto the line BEFORE threading through the last hole.
6. After threading the last hole, cut the Cord leaving a 10-15cm tail. Wrap the Cord **over the top of the Side Arm** and tie the Cord off with several knots. Push the cut Cord end through the Cord Tidy and cut excess off (refer to diagram3). DO NOT tie the Cord around the Side Arm as this will prevent Side Arm from down into Wall Bracket.

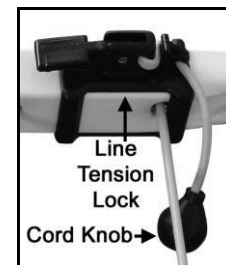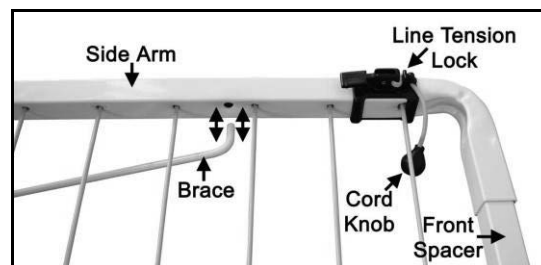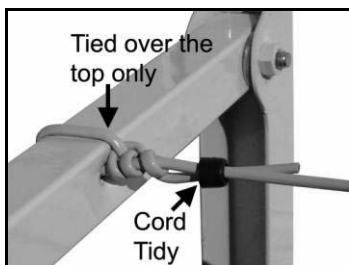

7. Starting from the back line, pull on each line one at a time, taking up the slack until the front line is reached. Raise the Lever on the Line Tension Lock and pull the slack through the hole, by pulling on the cut end until Cord is taut. Lock the Lever down into position. Repeat if necessary. Wrap the line around the cleats on side of Line Tension Lock (image 3). Slide the Cord Knob onto the loose end of the Cord and knot the cord below the Cord Tidy. Cut off the loose end and pull the Cord Knob down over the knot to cover.
8. Fold the clothesline down and fit an End Cap to the top end of each Side Arm.

**To lower the frame**

- a) Remove the 6mm Brace from punched hole in Side Arm.
- b) Fold the Brace down.
- c) Whilst supporting the frame, repeat on the other side.
- d) Lower the clothesline frame.

**To raise the frame**

- a) Raise the clothesline frame.
- b) Whilst supporting the clothesline, lift Brace up.
- c) Slide one 6mm Brace into the Side Arm
- d) Repeat on the other side.

## MANUFACTURER'S WARRANTY

Austral Clothes Hoists Pty Ltd ("Austral") provides the following warranty in relation to its Clothes Lines products ("Product").

### WARRANTY

Subject to the exclusions below, Austral warrants:

- **for 12 months from date of purchase:** the repair or replacement, in its discretion, of any Product that fails to operate correctly due to faulty workmanship or defective materials. The "materials" includes the plastic components and cord.
- **for 20 years from date of purchase:** the repair or replacement, in its discretion, of any part of the tubular frame that is broken or distorted as a direct result of rust. The "tubular frame" comprises the circular, square or rectangular hollow steel frame on powder coated or galvanised Product.

The benefits of this warranty are in addition to the non-excludable rights and remedies imposed by Australian State and Federal legislation.

### WARRANTY CLAIMS

To make a warranty claim, please contact your place of purchase or your local Distributor with details of the alleged defect and your original receipt as proof of purchase. Where it is deemed necessary, Austral will arrange for the inspection of your Product.

You must bear the cost of making the Warranty claim. Austral will bear the cost of repairing or replacing defective Product (including freight or postage of replacement Product).

### WARRANTY EXCLUSIONS

Austral's Products are suitable for air drying purposes.

The Warranty does not cover:

- Defects caused through abuse or misuse.
- Incorrect adjustments or unauthorised repairs.
- Defects caused by incorrect installation.
- Product damage or deterioration due to abnormal environmental conditions including extreme coastal, storm damage, fire, wind, humidity, pressure, stress and similar.
- Powder coat deterioration caused by exposure to sea air where the Product is installed in coastal areas.
- Defects caused through normal wear and tear.
- Defects caused through the installation or use of a clothesline cover or sunshade.

### SPARE PARTS

Austral maintains stock of spare parts for a reasonable period of time. Spare parts may not be available for the entire duration of this Warranty.

Austral reserves the right to repair or replace defective Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired.

### LIMITATIONS

Austral makes no express warranties or representations other than as set out in this warranty. The repair or replacement of the Product or part of the Product is the absolute limit of Austral's liability under this express warranty.

## DISTRIBUTORS

State:	Phone:	Address:
VIC & TAS	03 9799 8122	32-34 Hydrive Close, Dandenong South, VIC, 3175
NSW & ACT	0428 262 471	PO Box 380, Cammeray, NSW, 2062
SA & NT	08 8337 4445	20 Sunbeam Road, Glynde, SA, 5070
WA	08 9455 1985	Unit 3, 12-14 Panama Street, Canning Vale, WA, 6155
QLD	07 5596 2520	8 / 24 Palings Court, Nerang, QLD, 4211

Contact your local Retailer or Distributor for Spare Parts, Accessories and Warranty claims.

*Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*