

Banana Peel



Owner's Manual

What's in the Box?



Front Frame Assembly



Rear Frame Assembly



Backrest



Flags



Seat



Rear Wheels



Parts Bag

Assembly Instructions


Tools Required: 3/8" wrench, 1/2" wrench, 9/16" wrench, flat blade screwdriver, Phillips head screwdriver, Air Pump, Air Gauge, Allen wrenches, 15/16" socket wrench, Adjustable wrench, pliers, rubber mallet.

- 1. **Preparation:** Remove all parts from the box, and carefully unwrap all parts.
- 2. **Pedals:** Install pedals by threading the pedal marked "R" into the right side of the crank (clockwise) and the pedal marked "L" into the left side of the crank (counterclockwise).
- 3. **Backrest:** Insert backrest onto front frame assembly with pivot mounting tub pointed downwards and to the rear. The backrest should slide evenly onto the frame about 1.5" to 2" on both sides. Note: This may be a tight fit and it may be necessary to lubricate the frame and tap the backrest on with a rubber mallet. Insert bolts into the backrest clamps from the outside and loosely install washers and nuts. Note: On some backrest clamps, it may be necessary to squeeze with pliers before inserting screws.



Backrest installed into front frame

4. Rear Frame: Insert the screws in the holes on rear axle tabs. Loosely tighten with the nuts. Assemble front frame with the back rest on top of rear frame section (shown below). Insert screws into nylon bushings that are preassembled into frame sections. Secure with nylon jam nuts. Tighten nuts so that the frame sections are securely held together, but not so tight to cause binding when pivoted. Tighten backrest clamps. Tighten axle tab screws.

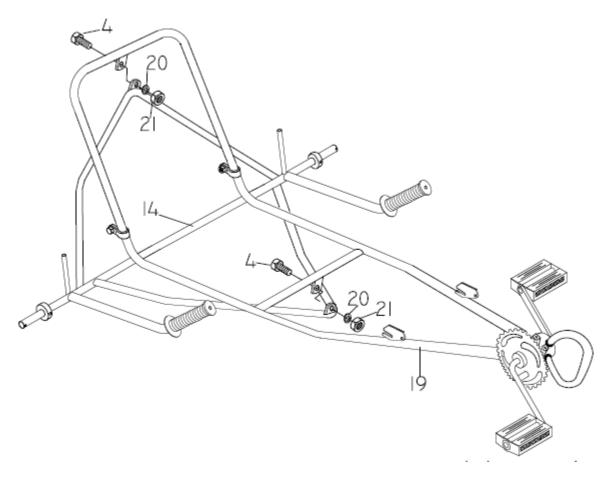

Rear Frame assembly points

5. **Rear Wheels:** Loosen set collar on axle. Slide one washer onto each rear axle against set collar. Slide wheel onto axle along with washer and another set collar. Secure cotter pin into end of axle. Slide outside set collar against cotter pin and tighten. Move remaining components against outside set collar and tighten inside set collar.



Inner set collar and washer



Outer washer, set collar and cotter pin

6. **Seat:** Place seat on back rest with the wide flap at top. Install flaps around outside frame and buckle from top to bottom and side to side. Sit in seat and readjust tension until comfortable.



Seat buckle installation

7. **Final Check:** Install the handle grips to the handlebars and put the safety flags into the holders. A bit of water inside the handle grips may make it easier to install them. Check all connecting bolts and screws for tightness. Pump tires to the proper pressure.

REGULAR MAINTENANCE: Bi-Monthly

- 1. Keep all painted parts cleaned and waxed for a long-lasting luster.
- 2. Spray all chrome parts with recommended protective spray coating (LPS-1, WD-40, etc.). When spraying with protective coatings, it is recommended that you let parts set overnight so the coating will penetrate.
- 3. Lubricate the following:
 - a. Pivot points at top and bottom of seat
 - b. Axle shafts
 - c. Inside bearings of both pedals
 - d. Chain turn pedal crank forward and spray freely
- 4. When storing over prolonged periods, turn upside down to prevent flat spots from occurring on the tires. If stored outside, cover to protect finish and moving parts.

PREVENTATIVE MAINTENANCE: Every Six Months

These are services that should be performed by your local bicycle shop. A fee may be charged.


- 1. Check tires for wear, rim cuts, and valve core alignment (usually caused by improper air pressure).
- 2. Check wheels for cracks and alignment.
- 3. Check brakes for proper operation.
- 4. Clean and repack all bearings and adjust all cones.
- 5. Check for worn bearings, cones, and cups.
- 6. Check chain for adjustment and clean as needed.
- 7. Check for loose bolts and nuts.

Attention: While your unit is new, some noises may occur when the unit is breaking in. Should they continue for more than 30 days, see your local bike shop.

INSPECTION

Check the following, as it applies to your cycle, on a regular basis:

- 1. Coaster brake Make sure the brake engages, by pedaling backwards.
- 2. Wheels Check wheels for alignment.
- 3. Pedals Inspect pedal bearings and make sure pedal is tightly attached to crank.
- 4. Handle grips Replace worn or loose grips.
- 5. Chain Check for proper tightness. Replace damaged chain immediately.
- 6. Seat Adjust seat for rider comfort and safety.
- 7. Tires Keep tires inflated to the recommended tire pressure, as indicated on the tire's sidewall.
- 8. Chainguard Replace damaged or missing chainguard immediately.
- 9. Frame Replace damaged frame immediately.

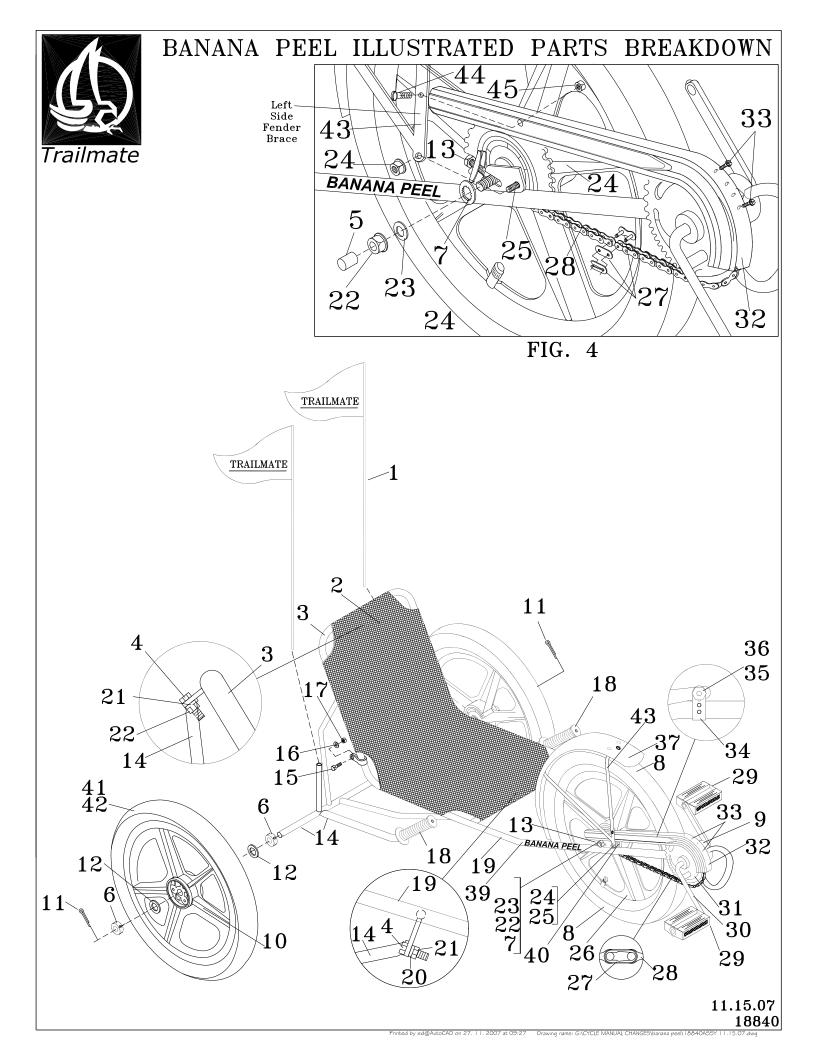

BANANA PEEL CYCLE PARTS

		Ŀ	BANANA PI	EEL	CYCLE	PARTS		
ITE	M PART#	DESCRII	PTION	QTY. I	TEM PART#	DES	CRIPTION	QTY.
10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23.	11070 19640 20028 18809 13225 13226 13227 18175 18808 12236 11065	TIRE 16" x 1.7 DECAL TM HEA WHEEL 16" MAG PIN COTTER 3/ WASHER 5/8 SA CHAIN ADJUSTE FRAME B/P RE CLMP BOLT M8 CLMP WASHER CLMP NUT M8 GRIPS HANDLE FRAME B/P FR WASHER 5/16 NUT #5/16-18 NUT AXLE CB	PEEL ACKREST ASSY. 8X1 HHCS OR /8" NT. TOOTH DRV. 75 BSW D G 5/8 BORE /32 x 1 AE R COMPLETE AR x 38mm LG H M8 FLAT HEX YELLOW/BLACK ONT SAE NYLON INSERT	1 1 2 2 4 2 1 1 2 2 2 1 2 2 2 1 2 2 2 2	25. 12197 26. 18785 27. 11679 28. 12934 29. 11857 30. 11694 31. 11934 32. 18832 33. 12188 34. 12279 35. 19169 36. 19168 37. 12863 38. 19355 39. 18830 40. 19167 41. 17615 42. 19346 43. 20284 44. 20307 45. 20308 46. 12170 47. 19171	WHEEL 16" CONNECTING CHAIN B/P PEDAL 1/2" CRANK 4 1/ SPROCKET 3 CHAINGUARI SCREW #10- CLAMP (BRA SCREW BRAI NUT BRAKE FENDER 16' RIM STRIP DECAL BANA SPROCKET 1 TIRE 16X2.1 WHL 16"2.13 FENDER BRA SCREW RHM NUT HEX 8, NUT 10-32/	65 PITCH (PAIR) /2" 36T D B/P -32 x3/8 SLTD HWH KE STRAP) KE STRAP SHIMANO STRAP SHIMANO "B/P FRONT 16"X1.75 ANA PEEL SIDE RAIL 18T 125 BSW KNBY W/TUBE 25 SPOKED ZINC ACE BP S 8/32 X 3/8" FC/BP /32 FC/BP	211111121111221222
	* - FOR SPOKED ZINC WHL ONLY 09/II/06 #I8840/#I88II							
	ITEM	STRATED PART #12170 (2) NUT #10-32 HEX	PARTS LI ITEM PART #19171 #47 SCREW #10-32	(2)	BANANA	PEEL)	ITEM PART #12428 (2) WASHER INTERNAL TOOTH	
	<i>"</i>	(i)	#10 Sci.	3 A 676	ITEM PART # #35 SCREW	19169 (1) #10-32 X 1/2" FOR BRAKE STRA		
	ITEM #36	PART #19168 (1) NUT BRAKE STRAP	ITEM PART #110 #21 NUT #5/16 NYLON INS	8-18	9		ITEM PART #13226 (2) WASHER #16 THICKER ONE	
						12197 (2) #1/4-20 X 1/2" welded)	•	
	ITEM #24	PART #12172 (2) NUT #1/4-20	ITEM PART #132 #17 CLAMP NU		Ð		ITEM PART #12236 (2) #20 WASHER	
					ITEM PART ##4 SCREW	#12210 (4) #5/16-18 X 1"		
	ITEM #22	PART #19153 (2) NUT AXLE	ITEM PART #203 #45 NUT HEX 6		BP ITEM PART CLAMP	#13225 (2) BOLT	ITEM PART #12301 (2) #23 WASHER	
			FEM PART #20307 (1) 44 SCREW # RHMS		/8" FC/BP		ITEM PART #19640 (4) #12 WASHER 5/8 SAE	
		ITEM PART # #34 CLAMP (12279 (1) (BRAKE STRAP)		ITEM PART #11 COTTE		10.20.07.#BA	DTCION



1851 67th AVE East Sarasota, Fl 34243 Tel:(941) 755-5511 Fax: (941) 758-5141

Visit us @www.trailmate.com

For service or to order replacement parts please contact your local Trailmate dealer.

BANANA PEEL

This is a recreational unit, not designed for excessive speeds or misuse.

Do not brake or turn at high speeds. This may cause cycle to roll over. Careless operation may cause rider to lose control and result in **serious injury**.

Things to know before riding your cycle:

- 1. Know your local bicycle laws and wear a helmet.
- 2. Do not exceed the recommended weight limit of 150 lbs.
- 3. No more than one rider at one time.
- 4. Do not stand on unit.
- 5. Be sure to install safety flags.
- 6. Wear light-colored clothing and protective gear.
- 7. Do not ride at night.
- 8. Children must be supervised by an adult at all times.

Trailmate Limited Warranty

Trailmate, Inc., guarantees each cycle product against all defects in materials and workmanship for a period of 90 days from date of purchase. Tires and tubes are not covered by this guarantee.

During this period, any part that is judged by the makers to be defective will be replaced free of charge. Any failure resulting from accident, abuse, neglect, normal wear, or improper assembly or maintenance by the owner is not covered.

Trailmate, Inc., further authorizes a lifetime frame guarantee and will replace any frame, at no cost to the buyer, providing that item has not been used for rental use and that:

- 1) The item has not been altered, repaired, or modified in any way.
- 2) The item has not been subject to misuse, negligence, and/or an accident.
- 3) Original ownership is established.

Any parts under this guarantee on which claims are entered shall be returned for inspection with transportation charges prepaid by the claimant. Replacement parts will be shipped F.O.B. factory.

There are no warranties or guarantee, expressed or implied, written or oral, which extend beyond the description on the face hereof.