

User's Manual for ERGONOMIC WORKER SEAT

Model CPRO-800LP



Thank you for purchasing the ERGONOMIC WORKER SEAT. This information will provide you with the safe handling of the product. Please read this information carefully and keep this for future reference.

Instructions for Safe Use of the ERGONOMIC WORKER SEAT



Do not use this product as a stepladder or any other purpose than chair. The chair may fall causing injury and damage.



Do not move the chair when sitting on the seat. The seat may shift unexpectedly causing injury and damage.




Do not place any objects, especially hot liquids, on the seat of the chair. The seat may move causing the object to fall, leading to possible injury and burns.



This chair is a folding chair, so please do not place your fingers and hands between any moving areas when you handle the chair. You may catch your fingers and hands in these moving areas causing injury.

- Do not use this chair in an unstable position such as leaning while seated. It may fall down causing injury and damage.
- If you use this chair on floor, it may cause damage scratching the floor. Please place a rug or mat under the chair to prevent damage and scratching to the floor. The leg caps can wear. If you see any cracking or damage to the leg caps, replace them.
- Incorrect operation or inappropriate use of the chair might cause bodily injury or damage. Please be careful when allowing children to use the chair.

The stopper rubbers can wear. If you see any cracking or damage to the stoppers, replace them. (Please replace stopper rubbers in a set of 8 pcs.)

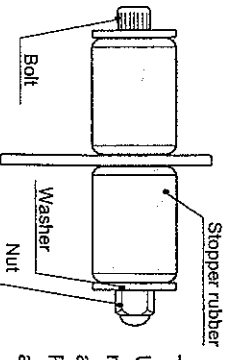


How to change the stopper rubbers
To remove, use a 3mm hexagon wrench and 7mm spanner. Unscrew nut to remove washer and bolt from the stopper rubber. If you have difficulty removing, after unscrewing nut and bolt, snap them out with a flat screwdriver. Replace the new stopper rubbers by screwing in bolt, washer and nut to secure the stopper rubbers.

Instructions to Open Chair


1

Open the front leg.

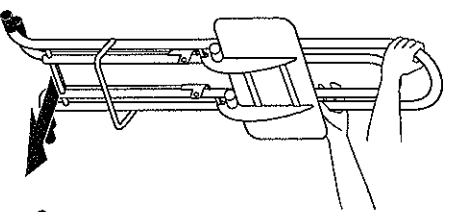

2


After lifting the seat from locking position, fold down to open as shown.

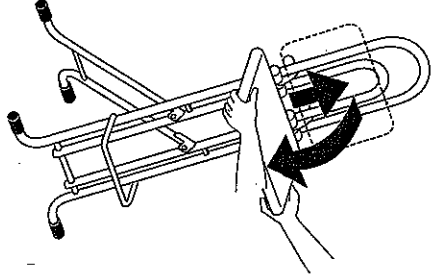

Instructions to Close Chair


1

Fold seat up against frame.

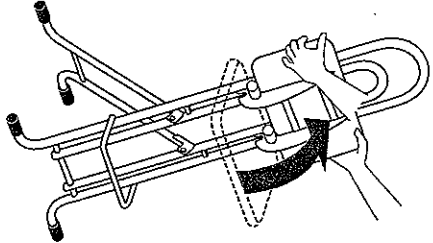



2

Slide seat down to lock the seat stopper, and the rear leg to the frame.

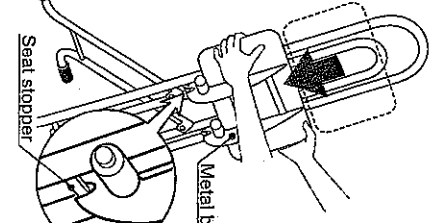

Instructions to Adjust Seat Height

Hold the front of the seat and lift up so it moves freely up and down.

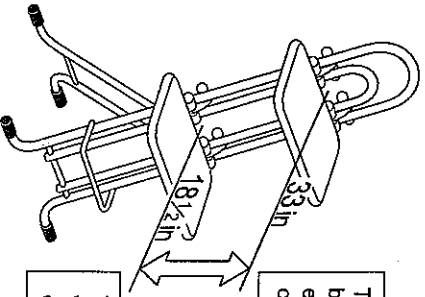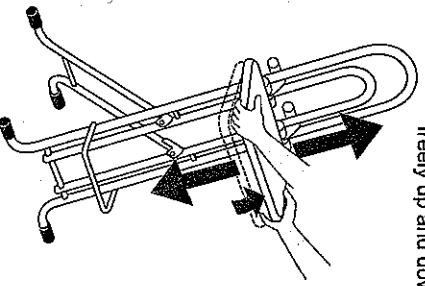

The seat adjusts to any height desired between 33in - 18 1/2 in.

The maximum seat height is achieved by making sure all eight stopper rubbers are in contact with the straight area of the frame.

The lower limit is achieved at a point where the metal bracket of the seat does not touch the seat stopper.

LIMITED WARRANTY

Vestil Manufacturing Corporation (“Vestil”) warrants this product to be free of defects in material and workmanship during the warranty period. *Our warranty obligation is to provide a replacement for a defective original part if the part is covered by the warranty, after we receive a proper request from the warrantee (you) for warranty service.*

Who may request service?

Only a warrantee may request service. *You are a warrantee if you purchased the product from Vestil or from an authorized distributor AND Vestil has been fully paid.*

What is an “original part”?

An original part is a part used to make the product as shipped to the warrantee.

What is a “proper request”?

A request for warranty service is proper if Vestil receives: 1) a photocopy of the Customer Invoice that displays the shipping date; AND 2) a written request for warranty service including your name and phone number. Send requests by any of the following methods:

Mail
Vestil Manufacturing Corporation
2999 North Wayne Street, PO Box 507
Angola, IN 46703

Fax
(260) 665-1339
Phone
(260) 665-7586

Email
sales@vestil.com

In the written request, list the parts believed to be defective and include the address where replacements should be delivered.

What is covered under the warranty?

After Vestil receives your request for warranty service, an authorized representative will contact you to determine whether your claim is covered by the warranty. Before providing warranty service, Vestil may require you to send the entire product, or just the defective part or parts, to its facility in Angola, IN. The warranty covers defects in the following *original* dynamic components: motors, hydraulic pumps, electronic controllers, switches and cylinders. It also covers defects in *original* parts that wear under normal usage conditions (“wearing parts”): bearings, hoses, wheels, seals, brushes, batteries, and the battery charger.

How long is the warranty period?

The warranty period for original components is 30 days. The warranty period begins on the date when Vestil ships the product to the warrantee. If the product was purchased from an authorized distributor, the period begins when the distributor ships the product. Vestil may extend the warranty period for products shipped from authorized distributors by *up to 30 days* to account for shipping time.

If a defective part is covered by the warranty, what will Vestil do to correct the problem?

Vestil will provide an appropriate replacement for any *covered* part. An authorized representative of Vestil will contact you to discuss your claim.

What is not covered by the warranty?

1. Labor;
2. Freight;
3. Occurrence of any of the following, which automatically voids the warranty:
 - Product misuse;
 - Negligent operation or repair;
 - Corrosion or use in corrosive environments;
 - Inadequate or improper maintenance;
 - Damage sustained during shipping;
 - Collisions or other incidental contacts causing damage to the product;
 - Unauthorized modifications: DO NOT modify the product IN ANY WAY without first receiving written authorization from Vestil. Modification(s) might make the product unsafe to use or might cause excessive and/or abnormal wear.

Do any other warranties apply to the product?

Vestil Manufacturing Corp. makes no other express warranties. All implied warranties are disclaimed to the extent allowed by law. Any implied warranty not disclaimed is limited in scope to the terms of this Limited Warranty.

