



WMF 1200S

Operating & cleaning instructions



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
ph: 03 9946 4160

97/1-5 Harwood St
Pymont NSW 2009
ph: 02 9034 6580



CLEANING TABLET CHECK SHEET

RINZA **MILK**

ACTUAL SIZE

HOLD TABLET OVER SHAPE ABOVE TO CHECK

The image shows a white plastic bottle of Rinza Milk cleaning tablets. The label is blue and white, featuring the brand name 'RINZA' and 'MILK' along with a 'DIREX' logo. To the left of the bottle is a solid blue circle with the text 'ACTUAL SIZE' inside it. Below the bottle, the text 'HOLD TABLET OVER SHAPE ABOVE TO CHECK' is written. The bottle is shown with its white cap removed and tilted to the left.

Part No: 12-MKTAB12-40

CAFIZA **COFFEE**

ACTUAL SIZE

HOLD TABLET OVER SHAPE ABOVE TO CHECK

The image shows a white plastic bottle of Cafiza Coffee cleaning tablets. The label is red and white, featuring the brand name 'CAFIZA' and 'COFFEE' along with a 'DIREX' logo. To the left of the bottle is a solid red circle with the text 'ACTUAL SIZE' inside it. Below the bottle, the text 'HOLD TABLET OVER SHAPE ABOVE TO CHECK' is written. The bottle is shown with its white cap removed and tilted to the left.

Part No: 12-ESPTH12-100

CHOCOLATE HOPPER

Holds one Bag of Vending Chocolate

COFFEE BEAN HOPPER

Holds 500grams of fresh roasted beans

BEVERAGE SELECTION

- A.** Press the illuminated ring beside the product required.
- B.** To access the product on the lower level please press the ring twice.
- C.** To stop during dispense press the ring again.

COFFEE STRENGTH CONTROL

By pressing **+** or **-** prior to selecting a product increase or decrease the coffee strength.

- +** 15% stronger
- 15% weaker

COFFEE GROUNDS CONTAINER

to empty:

- A.** Push spout all the way up
- B.** Raise metal slide, pull out grounds container.
- C.** Empty, rinse and replace

POWER SWITCH

Under the front lip, lies the main power switch

SPOUT POSITION

Adjustable foamer, should be left 10mm above the top lip of your cup



REMOVAL OF GROUTS

IMPORTANT PROCESS



1. Push combi spout all the way up
2. Remove grounds container
3. Empty and replace grounds container
4. Confirm process on the display

CLEANING INTERVALS OVERVIEW

			DAILY	WEEKLY	MONTHLY	
x						System cleaning
x						Clean Screen (CleanLock)
x						Grouts container cleaning
		x				Clean the brewing unit
	x					Drip tray cleaning
	x					Milk System Manual Clean
	x					Clean the mixer
		x				Bean hopper cleaning
		x				Clean powder hopper

For further information please refer to care menu instructions or user manual

MACHINE CLEAN – BASIC MILK (TANKED)



PERFORM THIS AT LEAST ONCE EVERY 24 HOURS



THIS CLEANING PROCEDURE TAKES APPROX. 10 MINUTES



CHECK CORRECT TABLET IS USED FOR EACH STAGE. USE ONLY URNEX TABLETS.

STEP 1. ▶

Press

select clean.program
browse: -/+

Touch **+** until cleaning program is displayed

cleaning
switching off
OK: P browse: -/+

Press **P**

STEP 2. ▶

empty drip tray
empty grounds cont.
OK: P cancel: C

Confirm with **P**

That the drip tray has been emptied

STEP 3. ▶

Soak combi spout
in cleaning solution
at least
once per day
OK: P cancel: C

Confirm with **P**

STEP 4. ▶



milk hose
in water
start: P cancel: C

Prepare 0.3l of clear, cold drinking water for the water rinsing.

STEP 5. ▶



Place a 2L container under the combi spout, press **P**
Rinsing starts

STEP 6. ▶

milk system rinsing
in progress

The milk system is rinsed using hot water. *The hot water is drained through the combi spout.*

STEP 7. ▶



insert tablet
into manual insert

Add cleaning tablet and close the cover

STEP 8. ▶

start: P

Press **P**

Machine cleaning will start. If choc beverages have been dispensed, clean will start with mixer rinsing.

STEP 9. ▶

Clean will take approx
7 Minutes



MILK SYSTEM EXCHANGE & CLEAN



PERFORM THIS AT LEAST ONCE EVERY 24 HOURS



THIS CLEANING PROCEDURE TAKES APPROX. 15 MINUTES



USE ONLY WMF CERTIFIED MILK CLEANING TABLETS.

STEP 1.



Pull forward the lever behind the combi spout

STEP 2.



Remove combi spout & remove milk hose from container

STEP 3.



Dismantle combi spout into separate pieces ready for soaking & immerse the length of the remaining milk hose in the cleaning solution

STEP 4.



Re-mount the spare clean foamer, choc hose & milk line

STEP 5.



Fill container with warm water and add one **RINZA** tablet. Place dirty foamer & milk line, soak for 5 hours

STEP 6.



After soaking, rinse all pieces under tap and dry

STEP 7.



Store in tub with lid to avoid contamination ready for next weekly exchange

REFILL COFFEE HOPPERS



PERFORM THIS WHEN PROMPTED BY MACHINE



THIS PROCEDURE TAKES APPROX. 2-3 MINUTES



DURING REFIL BE CAREFUL THAT NO FOREIGN DEBRIS FALLS INTO HOPPER

NOTE.



DO NOT FILL ABOVE LINE

Fill hoppers with fresh coffee to just below lid line. The hoppers will empty at the same rate so ensure all hoppers are filled to the same level.

STEP 1.



If the machine runs out of coffee, it will prompt the operator to refill hopper.

STEP 2.



Remove lid the pour coffee into the empty hopper.

STEP 3.



Once hopper is topped up, tap on the green tick to continue.

HOPPER CLEANING



PERFORM THIS AT THE END OF THE MONTH.



THIS CLEANING PROCEDURE TAKES APPROX. 15 MINUTES




ENSURE HOPPERS ARE DRY BEFORE RE-FITTING

STEP 1. ▶

Press the **ON/OFF** switch for longer than 2 seconds until coffee machine switches off.

Disconnect mains plug.

STEP 2. ▶

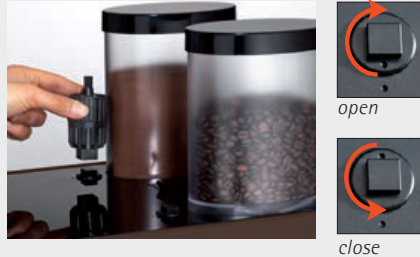

Unlock hoppers with multitool by turning in **clockwise direction**

STEP 3. ▶

Lift hopper out and empty.

Unscrew union nut at front & rear and remove the dosing auger.

Never clean hoppers in the dishwasher.

STEP 4. ▶

Thoroughly wipe out hopper using a damp cloth.

Thoroughly clean individual dosing auger components.


STEP 5. ▶



Allow hopper and individual components to dry completely before reassembling

! IMPORTANT: HOPPER REASSEMBLY

Please note, once you have dried the hopper after washing, it is important that the hopper is reassembled correctly for proper functioning. Please use the exploded diagram as a guide for reassembly and make sure that the half moon opening is at the top before re-inserting the hopper.

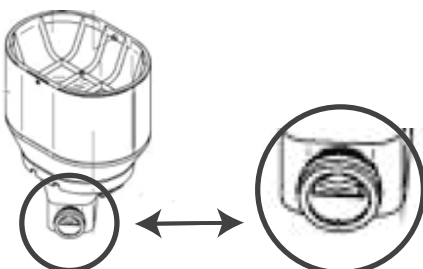

Welcome to My Coffee Shop!

Our hours of operation are Monday – Friday 9am to 5pm. Visit us at your convenience at www.mycoffeeshop.com.au. Orders and service requests can be placed by:

Phone: 1300 365 487
E-mail: clientservices@mycoffeeshop.com.au
Online: www.mycoffeeshop.com.au
Remittances: accountsreceivable@mycoffeeshop.com.au
Service enquiries: servicecentre@mycoffeeshop.com.au

Next business day delivery via courier to:

Adelaide Canberra Melbourne Sydney

for product orders placed by 1.30pm

Please note you will be advised when ordering if delivery charges apply to your order.

Once again, welcome to My Coffee Shop and remember we are here to help. If you have any questions please don't hesitate to contact us.

We look forward to exceeding your expectations and making your day easier and more enjoyable.

Kind regards,

My Coffee Shop
Client Services
My Coffee Shop Pty Ltd



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
Ph: 03 9946 4160

97 / 1-5 Harwood St
Pymont NSW 2009 Ph:
02 9034 6580