

CUCKOO


CP-ADR031UW/CP-ADR051UW

QUICK & EASY FILTER REPLACEMENT


You can replace the filters for your CUCKOO water Purifier by following this instruction

FILTER CONFIGURATION & REPLACEMENT CYCLE

RIGHT

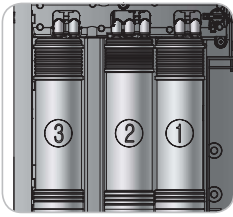

LEFT

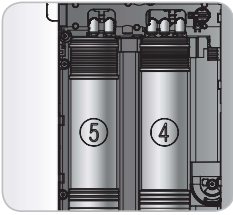


FILTER	LABEL COLOR	REPLACEMENT CYCLE	
		CP-ADR031UW	CP-ADR051UW
SEDIMENT FILTER (1101SD)	YELLOW	—	① 4 months
SEDIMENT 3,0 FILTER (1103SD)	YELLOW	—	② 8 months
PRE CARBON BLOCK 3,0 FILTER (1103PCS)	GREEN	① 4 months	③ 8 months
REVERSE OSMOSIS FILTER (1111HRO)	RED	② 12 months	④ 12 months
NATURAL 3,0 FILTER (1103N)	GRAY	③ 12 months	⑤ 12 months


Please check the type and the filter # of the new filters before removing the old filters!

REPLACEMENT GUIDE


· Always use genuine CUCKOO filters.

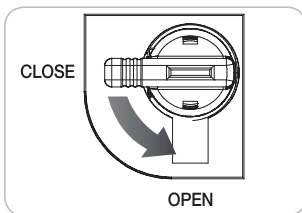


1. Turn the product valve counterclockwise until it's pointed towards OPEN.
(If the product is moved and the filter is replaced, shut off the Tap Water Supply.)

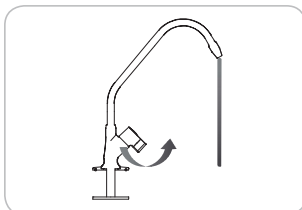




2. Drain all remaining water in the water storage tank.

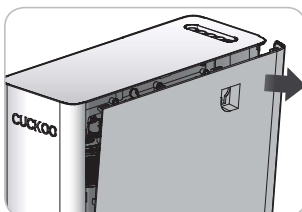

3. Detach the side cover.
 - ▶ After detaching the side cover, do not forcibly turn the CLOSE lever. It may cause damage to the product.
 - ▶ If the side cover is not detached, turn the side cover lever to the OPEN direction.

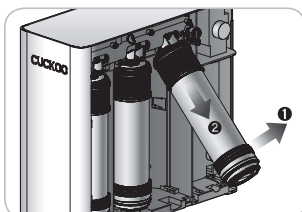

4. Remove the used filters by pulling from the bottom then install the new filters in the appropriate order.
 - ▶ Residual water may spill from the used filters. This is normal and not indicative of a product leak.

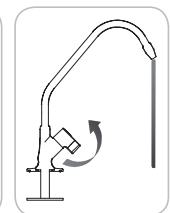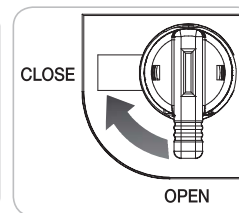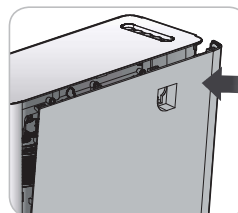

5. Close the side cover then allow the water to run for 5-10 minutes.
* Close the Water Storage Tank Valve when flushing the filters.
* Open the Water Storage Tank Valve when flushing is completed.

Case 1.

When replacing the Sediment and sediment 3.0 Filters :
Allow water to pass through for about 5 minutes.

Case 2.

When replacing the Pre carbon block 3.0 and Natural 3.0 Filters :
Allow water to pass through for about 7 minutes.

Case 3.

When replacing the Reverse Osmosis Filter :
Connect the Reverse Osmosis Filter to the previous filters,
Allow water to pass through for about 10 minutes.

Case 4.

When replacing all filters :
Allow water to pass through for about 10 minutes.
※ It is important to supply the purifier with water to check for any water leaks after filter replacement.
▶ Make sure that water is passed through for more than the recommended time to ensure the desired water quality.
▶ Once the process of passing water through the filter is complete, supply tap water and use a soft cloth, etc. to check if there is any water leakage.

Still having a trouble replacing your filters?

CUCKOORENTAL.COM

Please visit our homepage!
You can find the Video instruction.

We can help!

888.700.0425



Please contact CUCKOO CUSTOMER SERVICE CENTER!
Our professional staffs can happily assist you.
Business Hours : M-F, 9AM-6PM (PST)

P/N : 10384-0001F0 REV.0

초간편 필터 교체

설명서 안내에 따라 직접 필터를 교체하실 수 있습니다.

필터 구성 및 교체 주기를 먼저 확인하세요

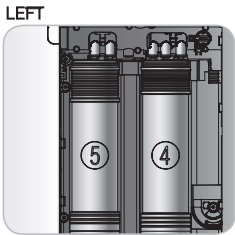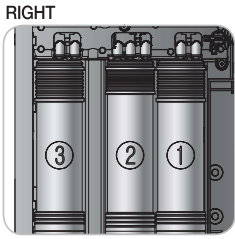


필터	라벨 색상	교체 주기	
		CP-ADR031UW	CP-ADR051UW
세디먼트 필터 (1101SD)	노란색	-	① 4 months
세디먼트 3.0 필터 (1103SD)	노란색	-	② 8 months
프리 카본 블록 3.0 필터 (1103PCS)	연두색	① 4 months	③ 8 months
역삼투압(RO) 필터 (1111HRO)	빨간색	② 12 months	④ 12 months
내추럴 3.0 필터 (1103N)	회색	③ 12 months	⑤ 12 months


새필터의 종류와 번호를 먼저 확인해 주십시오.
교체 주기에 따라 배송되는 필터의 수량과 종류가 상이하므로
교체가 필요한 필터만 제거/교체 하시면 됩니다.

교체 방법 안내


· 반드시 쿠쿠 정품 필터를 사용해 주십시오.

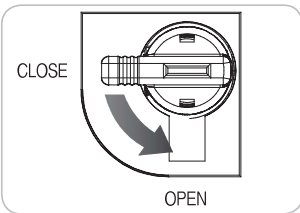


1. 제품 밸브가 OPEN 방향을 가리키도록 밸브를 반시계 방향으로 돌립니다.
(제품을 옮겨 필터를 교체할 경우 원수 공급 밸브를 잠가주세요.)

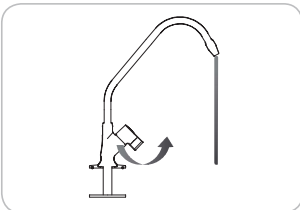




2. RO 저장 탱크에 남아있는 물을 모두 출수하여 주십시오.

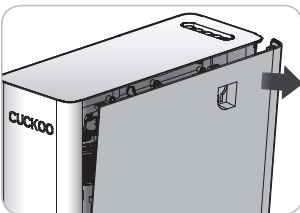

3. 필터 커버 분리.
▶ 필터 커버 분리 후, 밸브를 역지로 CLOSE 방향으로 돌리지 마십시오. 제품 손상의 원인이 됩니다.
▶ 필터 커버가 분리되지 않는다면, 밸브를 OPEN 방향으로 돌리십시오.

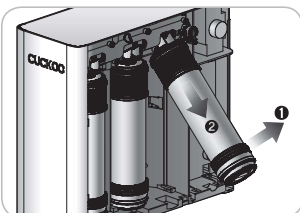

4. 사용된 필터를 그림 1과 같이 들어 올린 후 그림 2처럼 아래로 잡아당겨서 빼 주십시오. 새 필터를 번호에 맞게 설치하십시오.
▶ 사용된 필터에서 남아있는 물이 흘러나올 수 있습니다. 이는 정상이며, 제품의 누수가 아닙니다.

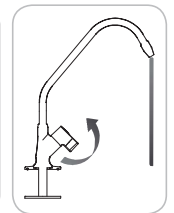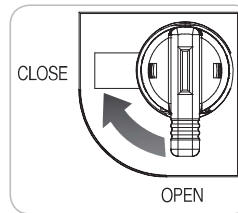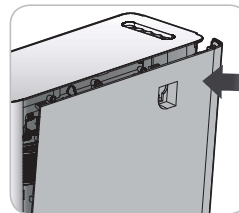

5. 필터 커버를 닫고 물을 5-10분간 통수시켜 주십시오.
* 통수하는 동안 물 저장탱크를 닫아주십시오.
* 통수 완료 후 물 저장탱크를 다시 열어주십시오.

경우 1.
세디먼트 필터와 세디먼트 3.0 필터를 교체한 경우 :
물을 5분간 통수시켜 주십시오.

경우 2.
프리 카본 블록 3.0 필터와 내추럴 3.0 필터를 교체한 경우 :
물을 7분간 통수시켜 주십시오.

경우 3.
역삼투압(RO) 필터를 교체한 경우 :
물을 10분간 통수시켜 주십시오.

경우 4.
모든 필터를 교체한 경우 : 물을 10분간 통수시켜 주십시오.
※ 필터 교체 후 정수기에 누수가 있는지 다시 한번 확인하여 주십시오.
▶ 권장 시간 이상 물을 통수시켰을 시 수질이 보장됩니다.
▶ 제품 통수 이후 원수 공급 밸브 등에 부드러운 천 등을 대어 누수를 확인합니다.

필터 교체에 어려움이 있으세요?

CUCKOORENTAL.COM

저희 홈페이지를 방문하시면 동영상 가이드라인에 따라 필터를 교체하실 수 있습니다.

저희가 도와드리겠습니다!

888.700.0425

저희 고객센터를 연락하시면 전문 상담가가 언제든지 친절하게 안내해 드립니다.
운영시간 : 미 서부 기준 오전 9시 - 오후 6시