


Ultra Tower Max User Manual

Before using: For Your safety, please read and understand this manual before using your product.



20 Scent Intensity
Schedules

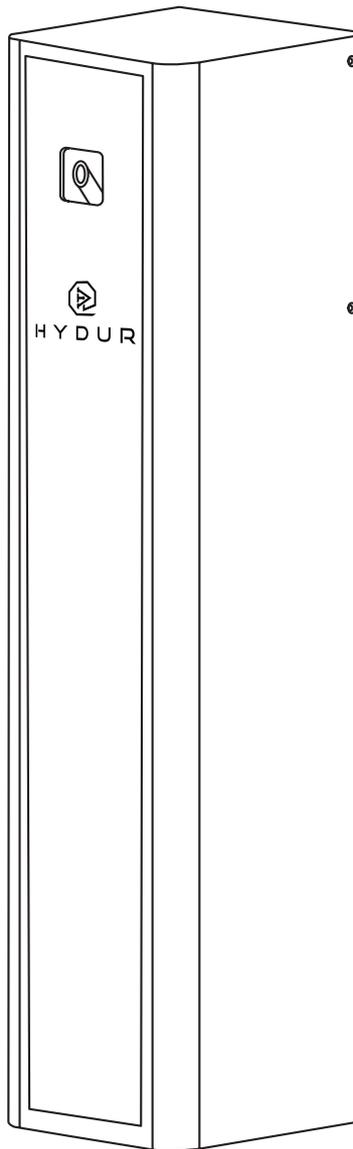

Up to 830sqm
Coverage



1000ml Oil
Capacity



Mobile App
Bluetooth Operated

Product Name: Ultra Tower Max

Coverage: Up to 830m²/2500m³/88000ft³

Dimensions: (H) 664 mm x (W) 152 mm x (D) 150 mm

Net weight: 7.18 kgs

Gross weight: 7.85 kgs

Oil Consumption: 0.30 ml – 3.70 ml per hour

Power: 10 Watts

Voltage: DC12V

Container capacity: 1000 ml

Accessories: Power adapter

Suitability: Home, Retail, Commercial, Large Spaces, Halls, Lobby




Waste electrical products should not be disposed of with house hold waste. Separate disposal facilities exist, for your nearest facilities see www.recycle-more.co.uk

Specification


Our Ultra Tower Max takes home, office, retail and commercial scenting and aromatherapy to a whole different level. It is sleek and powerful that the diffuser can scent up to 800 square meters, creating a wonderful and relaxing ambiance for your home, office, shop, or commercial spaces.

Our technologically advanced scent diffuser use nebulisation, patented ultrasonic technology and is easy to use, modern, healthier and a safer alternative to Bakhoor, Candles and Incense. Unlike other scenting options, our Ultra Tower Max Diffuser does not require heat or water. The scenting oil is broken down into ultra dry nanoparticles, diffusing it into the air, leaving every room in your house, office, shop smelling of natural aromas.


The Ultra Tower Max comes with an adjustable scent intensity setting and the ability to custom scent schedule your scent diffusion based on your preferred time and day using our dedicated Hydur Scenting Bluetooth Mobile Application. With sufficient scenting oil storage, the Ultra Cylinder Max will diffuse for a long period of time before needing a refill.

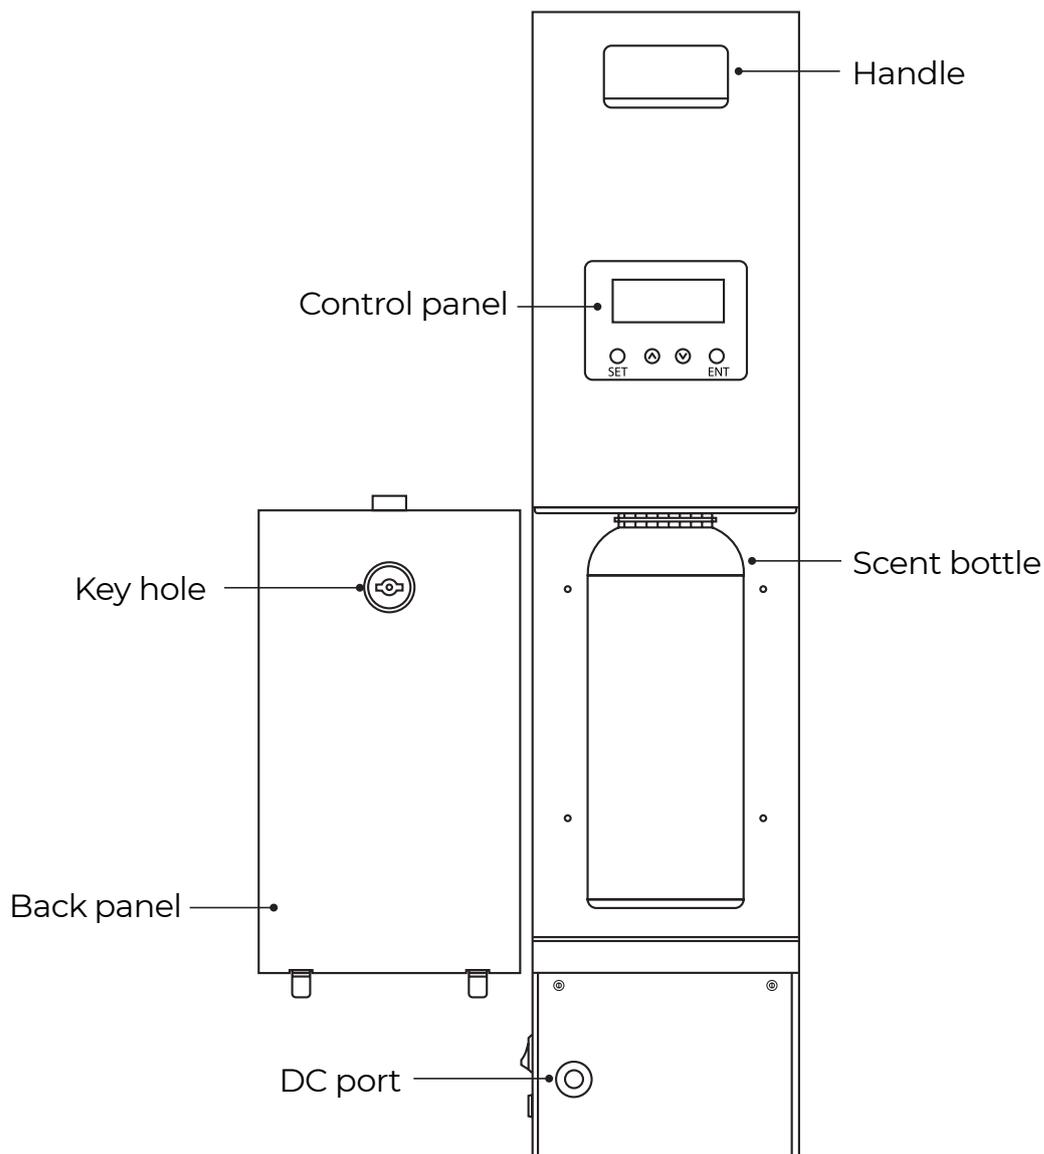


- 1 Using the key, unlock the back cover and remove the panel.

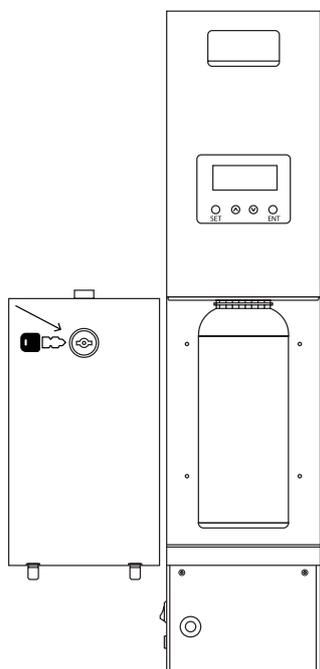


- 2 Unscrew the scent bottle and carefully take it out of the machine.

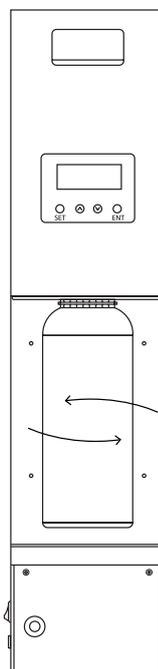

- 3 Fill the bottle with scenting oil and screw it back to the machine.

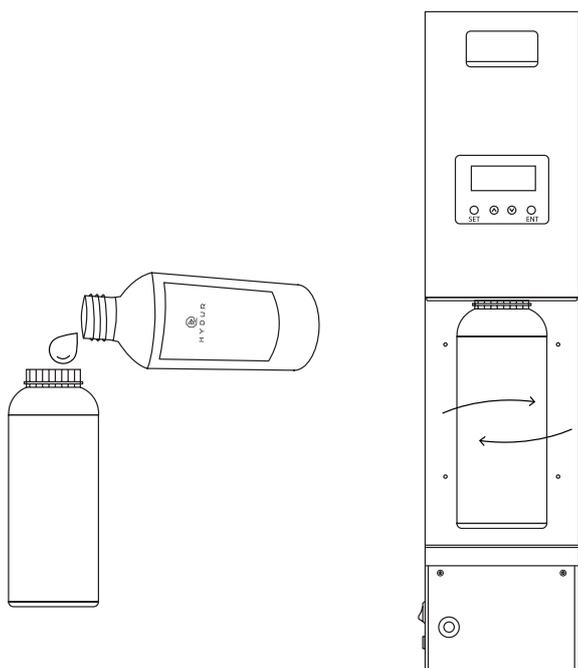


- 4 Keep the machine upright and securely place the back panel and lock it with the key.

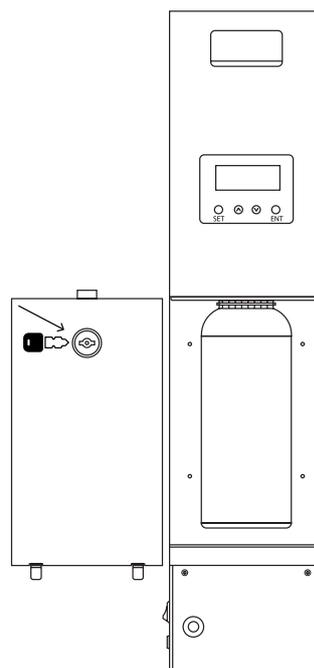

Operating your diffuser


- 5 Plug in the power adapter and turn the machine ON, the machine will beep to indicate its ON and ready to operate.

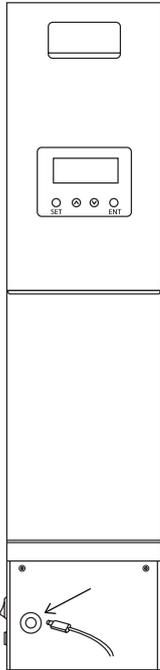

- 6 Adjust the desired intensity level by connecting to the Hydur Scenting app bluetooth. The app allows you to control your diffusion levels and settings based on your preferred day and time. The Hydur Scenting controller app is available to download on IOS or android. You may also configure the setting using the control panel.




- 7 Place your Ultra Tower Max Diffuser in conference rooms, hotel lounges, restaurant, salon, meeting room, office, or any ventilated indoor space.

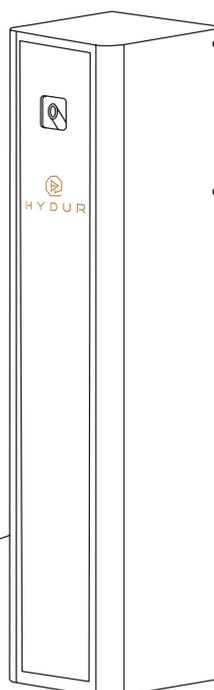


How to set & control your scent intensity settings

1 Download and open the Hydur Scenting Controller App.

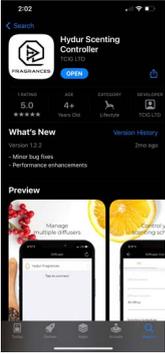


2 Select the Scent Diffuser from the list.

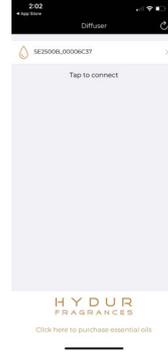

3 Log in using the default password '8888.'



4 Tap the '+' or 'Add' button to add scenting schedule.

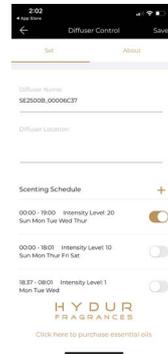

5 Select the desired Start and End Time.



6 Adjust the intensity level and tap 'Save.'



Hydur Scent Diffuser can work continuously or intermittently, depending on your settings. We recommend that you schedule your scent diffusion intermittently between one to three times a day for up to 1 hour at the maximum.

Set your intensity to the maximum level on the first cycle of scenting and reduce the intensity on the next cycles.

Power On

Connect the DC12V adapter to the outlet and turn the power switch On. Local time and scent intensity levels will appear.

Intensity and Oil Consumption

It takes approximately 3.5 hours for the diffuser to be fully charged (recommended) and will last approximately 24 hours in standby mode.

Intensity Level Indicator Light	Length of Diffusion	Interval Between Diffusion	Oil Consumption (ml/hr)
1	15 secs	5 mins	0.30 ml
2	15 secs	2.5 mins	0.40 ml
3	20 secs	2 mins	0.60 ml
4	20 secs	1.25 mins	0.70 ml
5	25 secs	1.20 mins	0.80 ml
6	30 secs	1.15 mins	1.00 ml
7	30 secs	1 min	1.10 ml
8	30 secs	50 secs	1.20 ml
9	30 secs	40 secs	1.30 ml
10	30 secs	33 secs	1.50 ml
11	33 secs	30 secs	1.70 ml
12	40 secs	30 secs	1.90 ml
13	50 secs	30 secs	2.20 ml
14	60 secs	30 secs	2.40 ml
15	75 secs	30 secs	2.60 ml
16	80 secs	25 secs	2.80 ml
17	85 secs	20 secs	3.00 ml
18	120 secs	20 secs	3.30 ml
19	150 secs	15 secs	3.50 ml
20	300 secs	15 secs	3.70 ml

Safety Care

- Unplug the diffuser immediately and discontinue use in the event of smoke or a burning smell
- Do not wrap the adaptor with cloth, paper, or anything that may result to avoid abrasions, cuts, fraying, crimping, and kinking
- Do not disassemble or attempt to self-repair the diffuser, this will void the warranty. Any damage caused by the user does not qualify for replacement by Hydur
- Disconnect the diffuser from power adaptor before refilling, cleaning or moving the diffuser
- Clean the sensor with a isopropyl alcohol-soaked cotton swab
- Do not use metal objects to clean the sensor; use only a cotton swab or cloth dipped in isopropyl alcohol or a neutral detergent
- Make sure to clean the unit before switching to different scenting oils
- Use only essential oils or Hydur scenting oils. Artificial, synthetic, or impure oils and fragrances can damage the diffuser.
- Avoid placing the diffuser in direct sunlight, close to a refrigerator or fan, or in a hot environment
- When not in use, clean the diffuser and store dry at 0°C—50°C, 5%-95% humidity.

Taking Care of your Storage

To keep your diffuser clean and ensure the best mixture of Hydur Fragrances it is recommended that you perform a cleaning cycle on your diffuser at least once a month, if you use your diffuser daily or in case any of these situation happens:

- Switch or change to another Scenting Oil
- Atomization volume becomes weak or there is no mist or less mist than usual

To do a cleaning cycle on your diffuser, follow these steps:

Step 1: Turn the device off and unplug prior to cleaning.

Step 2: Gently wipe the plate using a cotton swab dipped in rubbing/isopropyl alcohol.

Step 3: Fill a clean bottle with isopropyl alcohol.

Step 4: Install the bottle filled with rubbing alcohol to the diffuser and turn it on. Let it diffuse for 5-20 minutes or until the essential oil scent wears off.

Step 5: Replace the bottle of rubbing/isopropyl alcohol with your scenting oil.

Disposal

Dispose of this product and packaging materials with your local regulation. Waste electrical products should not be disposed with household waste. Separate disposal exist for your nearest facilities, see www.recycle-more.co.uk

Condition	Solution
Diffuser is not working.	<p>USB cable or power plugged may not be properly plugged in or your diffuser ran out of battery (if battery operated).</p> <ul style="list-style-type: none">• Check if the power is on or off and or your diffuser is charged or plugged in.• Check if there is a scented oil inside the bottle.
No mist coming out of my diffuser.	<p>Your atomizer head might be blocked.</p> <ul style="list-style-type: none">• Check if there is any scented oil build up on the plate. In case there is a buildup, follow the cleaning instructions.
Diffuser is leaking.	<p>Your diffuser head is either displaced or the the diffuser is tilted.</p> <ul style="list-style-type: none">• Check that the diffuser head is screwed properly to the bottle.• Make sure that the diffuser is set on a hard, flat surface.• Keep the diffuser constantly vertical do not tilt or keep the diffuser horizontal.
Scent is too strong or too weak.	<p>If you find the mist/intensity is too strong or weak, adjust the diffuser intensity to either a higher or lower setting to suit your preference.</p>

What is the average oil consumption of a Ultra Tower Max?

Average scenting oil consumption ranges from 0.30 ml – 3.70 per hour.

How much area does a Ultra Tower Max covers?

An Ultra Tower Max will cover up to 830 square meters.

How long will my 100ml Scent last?

A 1000 ml bottle can last approximately 1 month, depending on the intensity settings and diffusing times.

Do I need to put water on the diffuser?

No. Hydur Diffuser does not use water. It atomize the scenting oils using a series of tubes, dispersing the oils in their purest form.

What type of oils can I use on the diffuser?

Hydur Diffuser diffuses 100% essential oil or Hydur Scenting Oil. Other blends and oils may contain fragrances, base oils or synthetics that could result in malfunction. Hydur Scenting Oils are carefully blended and curated for Hydur Diffusers.

Do I need to clean the diffuser?

Yes. It is recommended that you perform a cleaning cycle at least once a month.

How do I reset the password of the Hydur Scenting App?

In case you forget the password, simply press the reset button to restore to factory settings. The default password is 8888.

How do I create a scenting schedule from the Hydur Scenting App?

The scent scheduling feature is only available on Plug Diff, Midi Square, Grandi Square, Ultra Tower Max and Ultra Cylinder Max.

To create a new scenting schedule using the app, simply:

Step 1: Select "Add New" under the "Schedule" section on the Homepage

Step 2: Choose to create your own schedule, or select one of the pre-set schedules

Step 3: Enter your desired Start time, End time, Name and intensity. If you would like the schedule to repeat, select the day(s) you would like it to repeat.

Step 4: Click "Save"

Will my diffuser work even if I am not connected to the Hydur Scenting App?

Yes. The diffuser will keep the schedules you have set. Once you reconnect via Bluetooth you can change the schedules, adjust the scent intensity or turn the diffuser off manually.

ألترا تاور ماكس الدليل الإرشادي للاستخدام

قبل الاستخدام: يُرجى قراءة وفهم هذا الدليل الإرشادي قبل استخدام المنتج الخاص بك



إمكانية التشغيل
باستخدام تطبيق
الهاتف المحمول



سعة استيعاب
1000 مل من الزيت
العطري



يغطي مساحة تصل
إلى 830 متر مربع



20 مستوى لجدولة
كثافة انتشار الرائحة

- اسم المنتج: ألترا تاور ماكس
 نطاق الانتشار: لغاية 830 م² / 2500 م³ / 88 ألف قدم³
 الأبعاد: الارتفاع 664 مم x العرض 152 مم x العمق 150 مم
 وزن الموزع: 7.18 كجم
 وزن الموزع مع زجاجة الزيت العطري: 7.85 كجم
 استهلاك الزيت العطري: 0.30 مل - 3.70 مل في الساعة
 الطاقة: 10.0 واط
 نظام الكهرباء: DC12V
 حجم الاستيعاب: 1000 مل
 الملحقات: محول طاقة
 أماكن الاستخدام: المنزل، المتجر، المساحات الواسعة، الصالة، مكتب الاستقبال.



صنع في الصين


لا ينبغي التخلص من نفايات المنتجات الكهربائية مع نفايات المنزل. هناك مرافق منفصلة للتخلص من هذه النفايات، لمعرفة أقرب هذه المرافق، قم بزيارة www.recycle-more.co.uk



ينقل موزعنا العطري ألترا تاور ماكس رائحة المنزل والمكتب والعلاج بالروائح العطرية إلى مستوى مختلف تماماً. إنه جهاز أنيق وقوي يمكنه نشر الرائحة في المساحات التي تصل إلى 800 متر مربع، مما يخلق أجواءً رائعة ومريحة لمنزلك ومكتبك ومتجرك.


تعتمد طريقة نشر الرائحة في جهازنا المتقدم تقنياً على تقنية الموجات فوق الصوتية الحاصلة على براءة اختراع، سهلة الاستخدام، متطورة، وصحية، كما أنها بديلاً آمناً لأنواع البخور والشموع. على عكس خيارات التعطير الأخرى، لا يتطلب الموزع العطري ألترا تاور ماكس الحرارة أو الماء ليعمل. ينقسم زيت الرائحة العطرية إلى جزيئات نانوية شديدة الجفاف، وينشرها في الهواء، ليجعل كل غرفة في منزلك أو مكتبك مفعمة بالروائح الطبيعية.

يأتي ألترا تاور ماكس بإعدادات ضبط كثافة انتشار الرائحة القابلة للتعديل، وإمكانية تخصيص جدول لأوقات انتشار الرائحة حسب الوقت واليوم المفضلين لديك باستخدام تطبيق Hydur Scentsing Controller للهاتف المحمول. مع مساحة كافية لاستيعاب الزيت العطري، يستمر ألترا تاور ماكس بنشر الرائحة لفترة طويلة من الوقت قبل الحاجة إلى إعادة تعبئة زجاجة الزيت العطري في الجهاز.

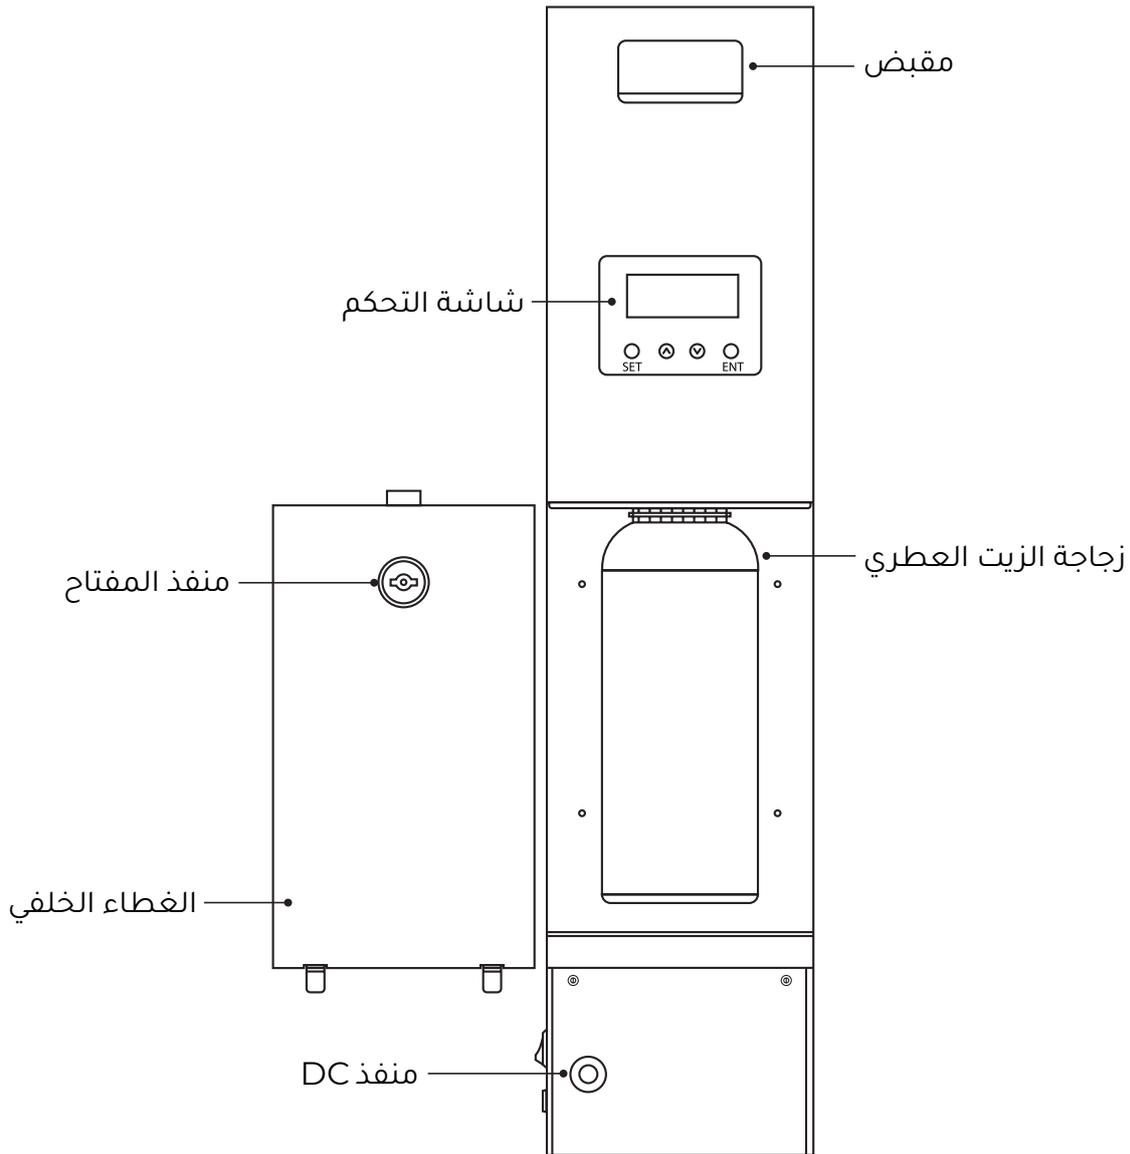


فك الزجاجة واخرجها بعناية من الجهاز

2

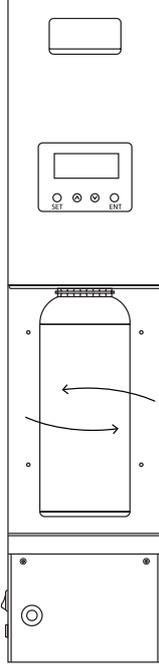


باستخدام المفتاح، افتح الجهاز وأزل الغطاء الخلفي

1

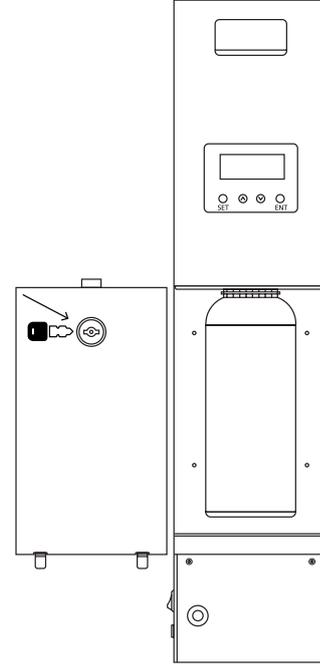


بينما الجهاز في وضع مستقيم، ضع الغطاء الخلفي في مكانه وأحكم غلقه بالمفتاح

4

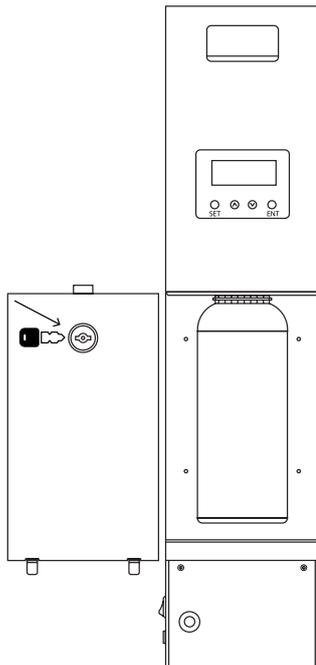

املأ الزجاجة بالزيت العطري ثم أعد وضعها في الجهاز


3

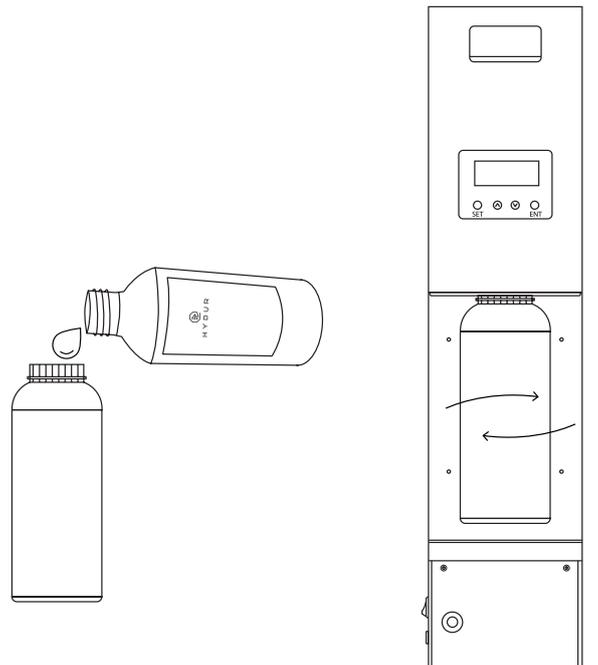


6 اضبط مستوى انتشار الرائحة عن طريق البلوتوث باستخدام تطبيق حيدر للعطور الذي يسمح لك بالتحكم في مستوى الانتشار والإعدادات بناءً على الوقت واليوم المفضل لديك. يتوفر تطبيق Hydur Scenting Controller على IOS أو Android. يمكنك أيضاً التحكم في الإعدادات باستخدام لوحة التحكم.




5 قم بتوصيل محول الطاقة وتشغيل الجهاز، وسوف يصدر صوت صفير للإشارة إلى أنه قيد التشغيل وجاهز للتشغيل

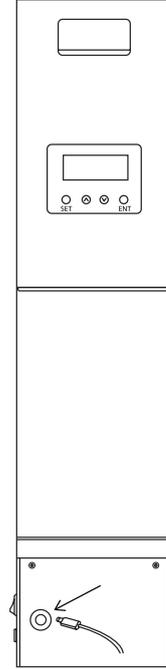


7 ضع ألترا تاور ماكس في قاعة المؤتمرات أو صالة الفندق أو المطعم أو الصالون أو غرفة الاجتماعات أو المكتب أو أي مساحة داخلية جيدة التهوية

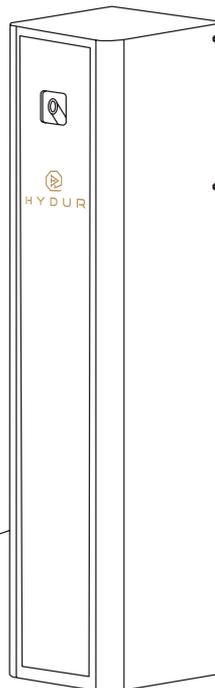


1 حقل وافتح تطبيق Hydur Scenting Controller

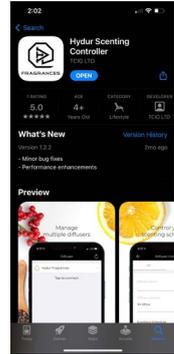


2 حدّد نوع الموزع العطري من القائمة

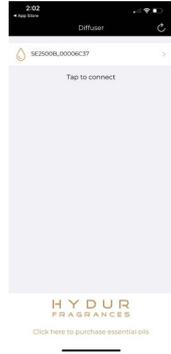

3 سجّل الدخول باستخدام كلمة المرور "8888"

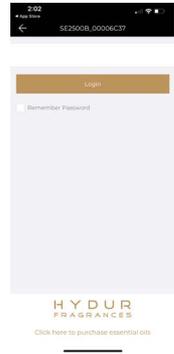

4 اضغط على زر "+" أو "Add" لجدولة وقت انتشار الرائحة

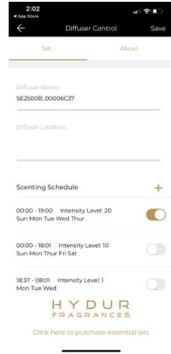

5 حدّد وقت تشغيل وتوقف نشر الرائحة



6 قم بتحديد مستوى كثافة الرائحة واضغط على "Save"



يمكن أن يعمل الموزع العطري من حيدر بشكل مستمر أو متقطع، حسب خياراتك في الإعدادات. نوصيك بجدولة انتشار الرائحة بشكل متقطع، بين مرة إلى ثلاث مرات في اليوم لمدة تصل إلى ساعة واحدة كحد أقصى.

اضبط كثافة الرائحة على أعلى مستوى في الدورة الأولى من التعطير وقلل الكثافة في الدورات التالية.

قم بتوصيل محول DC12V بمنفذ الطاقة وتشغيل مفتاح الطاقة. ستظهر لك مستويات انتشار الرائحة والتوقيت المحلي

مستوى انتشار الرائحة وحجم استهلاك الزيت العطري

مستوى الانتشار ضوء المؤشر	مدة التعطير	الفاصل الزمني بين فترات التعطير	حجم الاستهلاك (مل/الساعة)
1	15 ثانية	5 دقائق	0.30 مل
2	15 ثانية	2.5 دقائق	0.40 مل
3	20 ثانية	2 دقائق	0.60 مل
4	20 ثانية	1.25 دقائق	0.70 مل
5	25 ثانية	1.20 دقائق	0.80 مل
6	30 ثانية	1.15 دقائق	1.00 مل
7	30 ثانية	1 دقيقة	1.10 مل
8	30 ثانية	50 ثانية	1.20 مل
9	30 ثانية	40 ثانية	1.30 مل
10	30 ثانية	33 ثانية	1.50 مل
11	33 ثانية	30 ثانية	1.70 مل
12	40 ثانية	30 ثانية	1.90 مل
13	50 ثانية	30 ثانية	2.20 مل
14	60 ثانية	30 ثانية	2.40 مل
15	75 ثانية	30 ثانية	2.60 مل
16	80 ثانية	25 ثانية	2.80 مل
17	85 ثانية	20 ثانية	3.00 مل
18	120 ثانية	20 ثانية	3.30 مل
19	150 ثانية	15 ثانية	3.50 مل
20	300 ثانية	15 ثانية	3.70 مل

- قم بفصل الموزع العطري عن الطاقة وتوقف عن استخدامه فوراً إذا شاهدت دخاناً يخرج منه أو رائحة حريق
- لا تغطي محول الطاقة بقطعة قماش، ورق أو أي مادة أخرى يمكن أن تؤدي إلى حدوث كشط، قطع، تلف، التواء أو تجعد السلك
- لا تفكك الموزع أو تحاول إصلاحه بنفسك، فهذا سييطل الضمان. أي أن الضرر الذي يسببه المستخدم للجهاز يجعله غير قابل للاستبدال من قبل شركة حيدر للعبور.
- افصل الموزع العطري من محول الطاقة قبل إعادة تعبئة أو تنظيف أو نقل الموزع العطري
- قم بتنظيف المستشعر باستخدام عود قطني مبلل بكحول الإيزوبروبيل
- لا تستخدم أدوات معدنية لتنظيف المستشعر، استخدم فقط عود قطني أو قطعة قماش مبللة بكحول الإيزوبروبيل أو منظم محايد في مكوناته الأساسية
- تأكد من تنظيف الموزع العطري قبل تغيير الزيت العطري المستخدم فيه
- استخدم فقط الزيوت الأساسية أو الزيوت العطرية من حيدر للعبور. الزيوت الصناعية أو غير الطبيعية يمكن أن تتسبب في تلف الجهاز
- تجنب وضع الموزع العطري تحت أشعة الشمس المباشرة، قريباً من الثلجة أو المروحة، أو في الأماكن الحارة
- في حالة عدم الاستخدام، قم بتنظيف الموزع العطري وتخزينه في مكان جاف عند درجة حرارة تتراوح بين 0 - 50 درجة مئوية، ورطوبة تتراوح بين 5% - 95%.

الطريقة الصحيحة لتخزين الجهاز

للمحافظة على نظافة الموزع العطري والحصول على الرائحة المثالية من الزيت العطري من حيدر للعبور، يجب تنظيف الموزع العطري مرة واحدة شهرياً على الأقل، إذا كنت تستخدم الموزع العطري بصورة يومية أو في حال حدوث أي من التالي:

- تغيير الزيت العطري المستخدم في الموزع العطري
- ضعف قوة انبعاث الرائحة العطرية، انخفاض أو انعدام الرائحة العطرية

يُرجى اتباع الخطوات التالية لتنظيف الموزع العطري:

- الخطوة 1: قم بإيقاف تشغيل الموزع العطري وفصله عن الطاقة قبل بدء التنظيف.
- الخطوة 2: قم بمسح الجزء الخارجي من الموزع العطري برفق باستخدام ممسحة قطنية مبللة بالكحول المعقم/ الأيزوبروبيل
- الخطوة 3: املاً زجاجة نظيفة بكحول الأيزوبروبيل
- الخطوة 4: قم بتثبيت الزجاجة بعد ملئها بالكحول في الموزع العطري وتشغيله. دعه يعمل لمدة 5 - 20 دقيقة أو إلى أن تختفي رائحة الزيت العطري الذي ترغب باستبداله.
- الخطوة 5: قم باستبدال كحول المعقم/ الأيزوبروبيل بزيتك العطري.

التخلص من الجهاز

تخلص من هذا المنتج ومواد التعبئة والتغليف وفقاً للوائح المحلية الخاصة بمكان إقامتك. لا ينبغي التخلص من نفايات المنتجات الكهربائية مع النفايات المنزلية. يمكنك التخلص منه في المرافق المخصصة لذلك الأقرب إليك، قم بزيارة www.recycle-more.co.uk

الحل	الحالة
<p>قد لا يكون شاحن USB موصولاً بالكهرباء بطريقة صحيحة أو أن البطارية قد نفذت</p> <ul style="list-style-type: none"> • تأكد من تشغيل الطاقة و/أو أن الموزع العطري مشحون بالطاقة • تأكد من وجود الزيت العطري في الجهاز 	الموزع العطري لا يعمل
<p>قد يكون رأس البخاخة مسدوداً.</p> <ul style="list-style-type: none"> • تحقق من عدم تراكم الزيوت العطرية على غطاء الموزع العطري. في حالة تراكم الزيت، اتبع تعليمات تنظيف الزيت العطري. 	لا يخرج رذاذ من موزعي العطري
<ul style="list-style-type: none"> • قد لا يكون رأس موزعك العطري في موضعه الصحيح أو أن الموزع العطري في وضع مائل. • تأكد من أن رأس الموزع مثبت بشكل صحيح في الزجاجة. • تأكد من وضع الموزع العطري على سطح صلب مسطح. • حافظ على إبقاء الموزع العطري في وضع عمودي باستمرار دون أن يكون مائلاً أو في وضع أفقي. 	هناك تسرب في الموزع العطري
<p>إذا لاحظت أن مستوى الرائحة العطرية قوياً جداً أو ضعيفاً جداً، فقم بضبط مستوى كثافة الرائحة إلى الأعلى أو الأقل حسب خيارك المفضل.</p>	الرائحة العطرية قوية جداً أو ضعيفة جداً

ما هو معدل استهلاك الزيت العطري في الموزع العطري ألترا تاور ماكس؟
معدل استهلاك الزيت العطري يتراوح بين 0.30 مل - 3.70 مل في الساعة.

ما هي المساحة التي يغطيها الموزع العطري ألترا تاور ماكس؟
يغطي ألترا تاور ماكس المساحات التي تصل إلى 830 متر مربع.

كم تدوم زجاجة الزيت العطري بحجم 100 مل؟
يمكن أن تدوم الزجاجة حجم 100 مل حوالي شهر واحد، وفقاً لإعدادات مستوى كثافة الرائحة ومدة التعطير.

هل يجب إضافة الماء إلى الموزع العطري؟
لا. الموزعات العطرية من حيدر للطور لا تحتاج إلى الماء. إذ أنها تقوم بتفتيت الزيوت العطرية باستخدام سلسلة من الأنابيب، مما يؤدي إلى نشر الزيت العطري في أنقى صورته.

ما هي أنواع الزيوت العطرية التي يمكنني استخدامها مع الموزع العطري؟
مع موزعاتنا العطرية، يمكن استخدام الزيوت العطرية 100% أو الزيوت العطرية من حيدر للطور. المخلطات والزيوت العطرية الأخرى قد تحتوي على عطور، زيوت أساسية أو صناعية قد تؤثر على أداء الموزع العطري. الزيوت العطرية من حيدر للطور تم خلطها وإعدادها خصيصاً لاستخدامها مع الموزعات العطرية من حيدر للطور.

هل أحتاج إلى تنظيف الموزع العطري؟
نعم. نوصي بإجراء دورة تنظيف إلى الموزع العطري مرة واحدة على الأقل شهرياً.

كيف يمكنني إعادة إنشاء كلمة المرور في تطبيق Hydur Scenting؟
في حال نسيت كلمة المرور، ببساطة اضغط على زر إعادة إنشاء كلمة المرور لإعادة ضبط إعدادات المصنع. كلمة المرور الافتراضية هي 8888.

كيف يمكنني جدولة التعطير عبر تطبيق Hydur Scenting؟
تتوفر خاصية جدولة التعطير في موزعاتنا العطرية التالية فقط: ديف مع قابس، ميدي سكوير، جراندي سكوير، ألترا تاور ماكس وألترا سيلندر ماكس.

لجدولة التعطير في هذه الأجهزة، يُرجى اتباع الخطوات التالية:
الخطوة 1: اختر "Add New" أسفل قسم "Schedule" في الصفحة الرئيسية
الخطوة 2: اختر تخصيص جدول التعطير حسب رغبتك أو اختر من الجداول المقترحة
الخطوة 3: أدخل وقت بدء التشغيل، وقت الإيقاف، الاسم ومستوى كثافة الرائحة. إذا رغبت بإعادة الجدولة، اختر اليوم/ الأيام التي ترغب فيها بإعادة الجدولة.
الخطوة 4: اضغط على "Save"

هل سيعمل موزعي العطري حتى وإن لم أكن متصلاً بتطبيق Hydur Scenting؟
نعم. سيعمل الموزع العطري حسب الجدول الذي وضعته. بمجرد إعادة الاتصال بالتطبيق عبر خاصية البلوتوث، يمكنك إعادة جدولة أوقات ومستوى كثافة التعطير أو إيقاف تشغيل الموزع العطري بصورة مباشرة يدوياً.