

OCTAVIA MEDIUM/LARGE CHANDELIER

AKCH33527/AKCH33427

General Product Information

 Intertek	 INDOOR	 DIMMER COMPATIBLE
 DAMP LOCATION SAFE	 PLEASE SEE visualcomfort.com FOR PRODUCT SPECS	 CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!
 NEC COMPLIANT JUNCTION BOX	 SAVE THESE INSTRUCTIONS!	


WARRANTY


FCC STATEMENT

Tools Required

 PHILLIPS-HEAD SCREWDRIVER	 WIRE CUTTER
--	--

Safety Information


CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

USE MINIMUM 90°C SUPPLY CONDUCTORS.

 Turn off electrical current at the source before working with any lighting fixture or portable lamp. Install and use this product in adherence with local electrical codes and regulations.



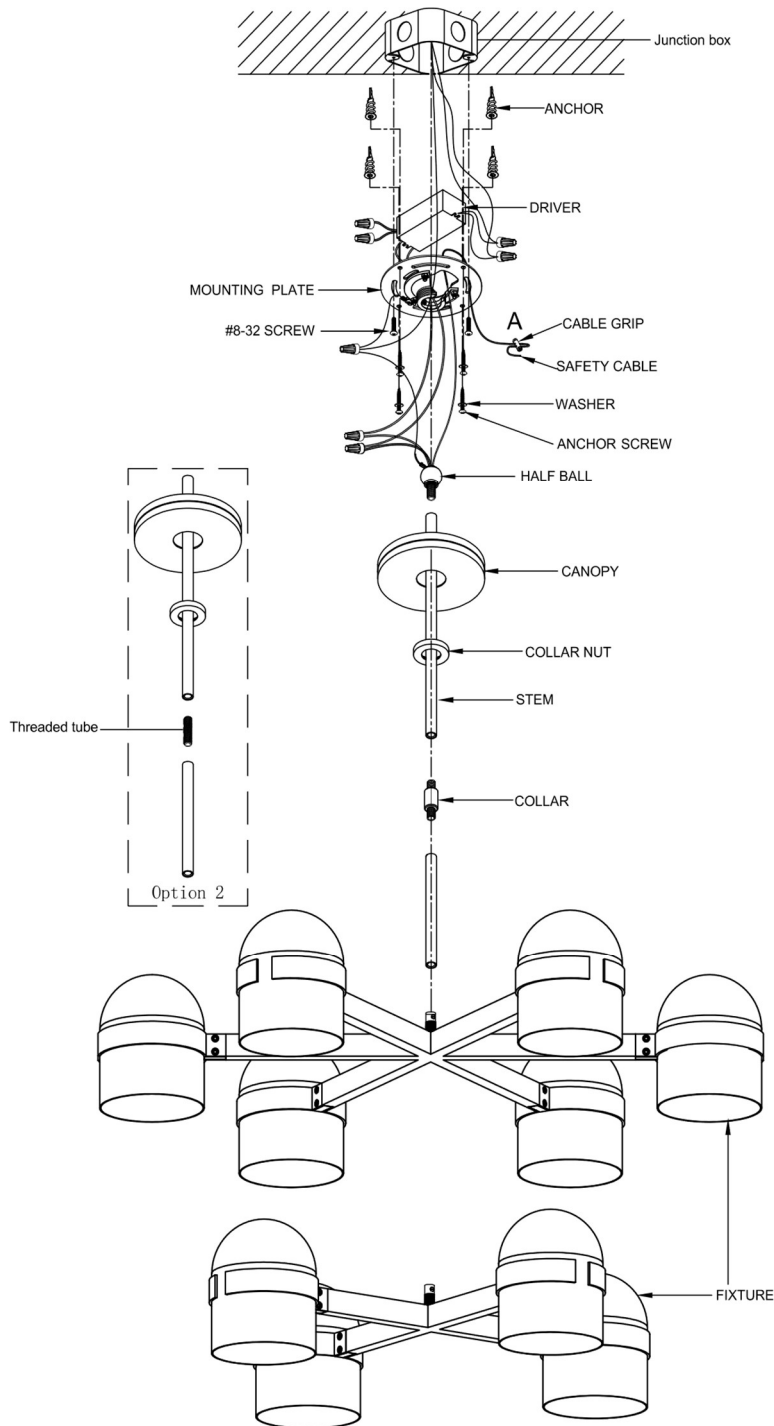

INSTRUCTIONS

I. Preparing the Fixture

1. Remove the mounting plate from the canopy.
2. Temporarily install the mounting plate to the junction box with the two #8-32 screws provided.
3. Mark the location of the anchors and remove the mounting plate.
4. Line up an anchor tip with the center of an anchor hole in the marked position and push the anchor into the ceiling, up to the threads.
5. Screw the anchor in the rest of the way with a Phillips-head screwdriver.
6. Repeat steps 4-5 for the remaining anchors.

7. Safety first! Locate the circuit breaker and switch it off to cut the power supply to the relevant circuits, ensuring that there is no electricity running through the wiring.
8. Connect the following wires using a wire nut:
 - a) Input driver wire (white) to the neutral power line wire
 - b) Input driver wire (black) to the hot power line wire
9. Place the driver in the junction box, while ensuring that the driver and wires are accessible.
10. For 0-10V dimming capabilities, connect the purple and pink wires to a compatible dimmer. Cap off these wires if you are not using a dimmer.
11. Reinstall the mounting plate to the junction box.
12. Slide an anchor screw through a washer and screw it into an anchor, securing the mounting plate to the ceiling.
13. Adjust the fixture height:
 - a) Determine the desired height of the fixture by connecting the provided stems and either:
 - The collar
 - Or the threaded tube (*Option 2* in the diagram).
 - b) Feed the fixture wires and the safety cable through each section of the stem assembly, screwing the sections together as each piece is added.
14. Slide the collar nut and the canopy down over the stem assembly, then screw the half-ball on top.
15. Seat the half-ball into the mounting plate, ensuring that no wires are pinched.
16. Remove the cable grip (see the area of the diagram labeled **A**), pull the cable up and then down through the mounting plate, feed the cable through the cable grip, and then secure them to the mounting plate as shown.
17. Tighten the screws to secure the cable.

II. Wiring the Fixture

1. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to a suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
2. Adjust the length of any of the wires using a wire cutter/stripper, if necessary.
3. Now, connect the following wires using a wire nut:
 - a) Positive fixture wire (+) to the positive output driver wire
 - b) Negative fixture wire (-) to the negative output driver wire

III. Installing the Fixture

1. Next, neatly place the wires and wire nut connections inside the canopy.
2. Slide the canopy up over the mounting plate and secure it in place with the collar nut to finish.
3. If necessary, tighten the LED bulb(s).