





USER GUIDE

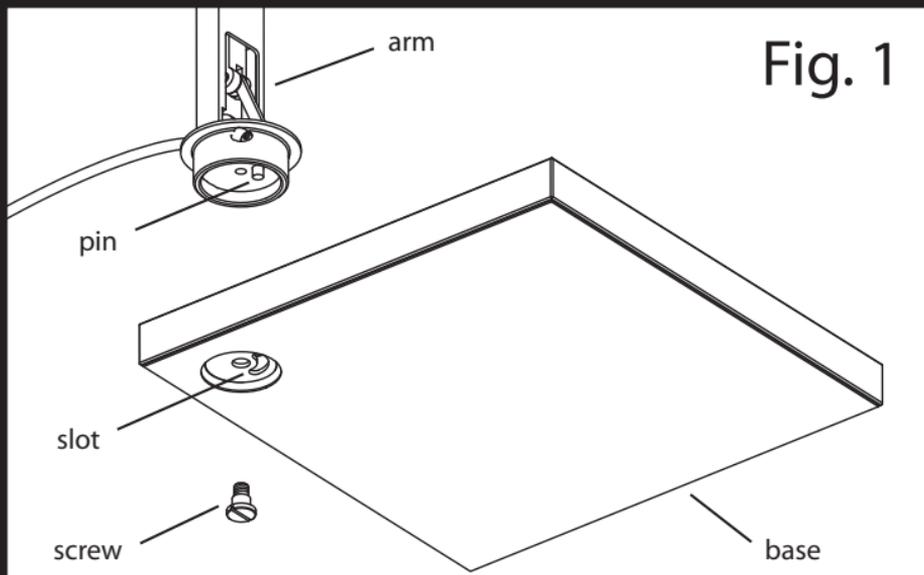


- 1) Insert the arm into the hole on the base, so that the pin fits into the slot. Use the screw to attach the arm to the base from the bottom. Tighten with a flat-head screwdriver. (Fig. 1)

Fig. 2

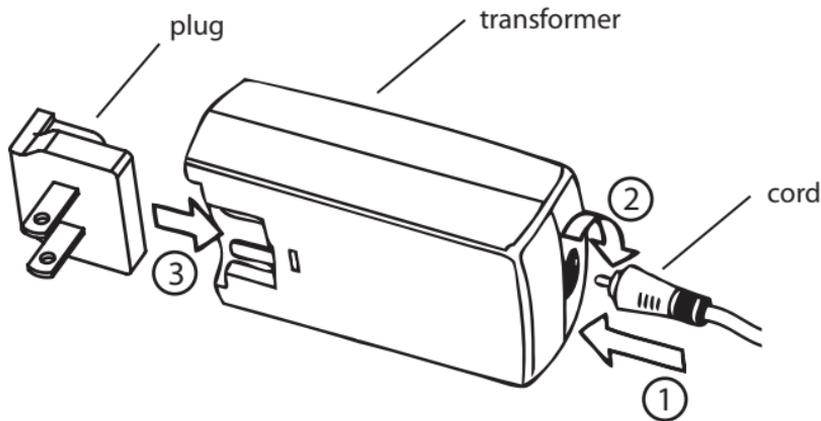

- 2) Insert the end of the cord into the transformer (1), and lock by rotating 90 degrees (2). Insert the plug to the transformer, being sure that it snaps firmly into place (3). (Fig. 2)

Fig. 3

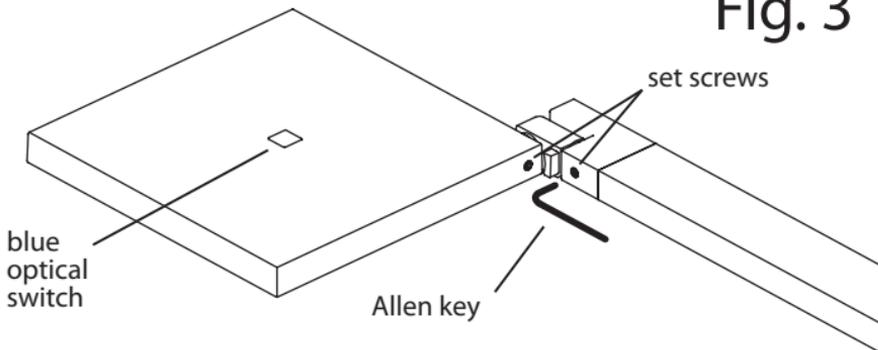

- 3) Turn the lamp on by lightly touching the blue optical switch on the top of the head. (Fig. 3) Adjust the brightness by touching the blue optical switch again. The order of brightness levels is:
OFF / HIGH (100%) / MID (60%) / LOW (20%) / OFF
- 4) The friction in the head rotation joints can be adjusted with the Allen key provided. (Fig. 3)

CARE INSTRUCTIONS: Dusting – Use a clean, damp cloth.

Cleaning – To protect the finish, avoid any harsh abrasives or chemicals.

Visit www.sonnemanquattro.com for warranty, registration, and more information about your Quattro™.