



HEATED GLOVE LINERS

HG-HL040N

USER MANUAL

IMPORTANT SAFETY INSTRUCTIONS

Please keep these important instructions for future reference.


Warning:

Please read all safety precautions and operating instructions carefully. Failure to comply with safety precautions and operating instructions may result in electric shock, fire, and/or serious injury.

- This product should not be used by persons (including children) with restricted physical, sensory or mental capabilities or without experience and relevant knowledge, unless they are supervised by a person responsible for their safety or have been trained in how to use the product. Children should be supervised to make sure that they are not using the product as a toy.
- Regularly check the product for signs of wear or damage. If any of these signs are noticed or if the product is being misused or not functioning properly, contact us before using it again.
- Not suitable for children under 36 months.
- Consult your doctor before using this product if you are unable to properly sense heat or cold (e.g., diabetics, individuals with special needs).
- This product is not intended for hospital use.

- The drying temperature should not exceed 60°C/140°F; therefore, do not use a dryer or radiator to dry the heated gloves. Dry the gloves only at room temperature, away from heat sources.
- To prevent bending, do not place any objects on the product when storing it.
- Stop using the product if any signs of damage to the cables, battery, or other components are observed.
- Do not attempt to modify the product or use it for any other unintended purposes.
- Do not wear the gloves if the lining is wet.
- If any discomfort occurs, immediately turn off the power and unplug the cable.
- Do not wring or twist the gloves, as this may damage the heating elements or cables.
- Suggest handwashing and gentle washing. This way of washing will be beneficial for the heating elements. Gloves will last longer.

WHAT'S INCLUDED

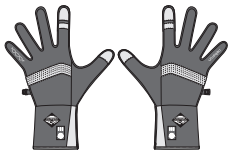

Heated Glove Liners x1 Pair



Power Adapter and
Charging Cable x1



Battery x2





Storage Bag x1



User Manual x1


PRODUCT OVERVIEW

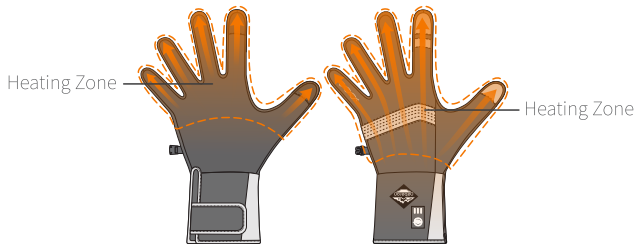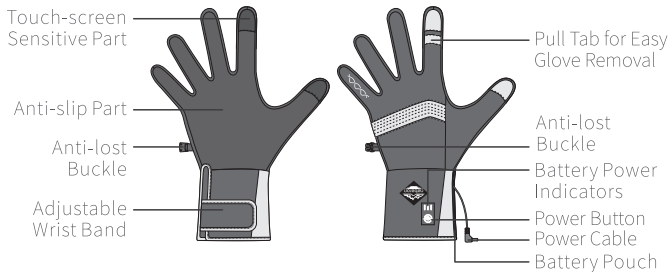

OPERATION GUIDE

1. Charge

Please fully charge the two batteries with the charging cable and the power adapter in the bag. It takes 2 hours and 12 minutes to reach a full charge for two batteries.

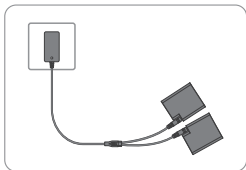


Tips:

1. Charging: Indicator on the Adapter Flashes Red
Fully Charged: Indicator on the Adapter Turns Green
2. When both batteries get charged via the adapter, the adapter will heat up a bit because it runs with the maximum power. This is normal and safe.

2. Plug-in

Step 1:

Unzip the pockets on the gloves, connect the batteries with the DC-IN connectors in the pockets. The power buttons will flash red, blue, green and then become off for self-inspection.

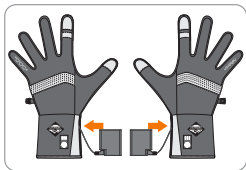


Step 2:

Insert the batteries into the pockets and adjust them to proper positions so that your hands will feel comfortable when you are wearing the gloves.

3. Turn On

Press and hold the power button for 2s on the glove to turn it on. The power button will flash red in a pulsating manner for 15s, indicating that the gloves are activating. After that, the gloves will automatically operate at high heat.

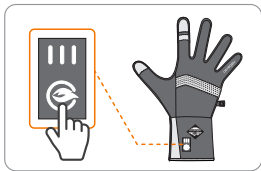


Tip:

If there is no activity for 10 minutes after turning on, the power button will automatically switch to a solid blue color, indicating that the gloves are now set to medium heat.

4. Adjust Heating Levels

Shortly press the power button to adjust the heating levels.

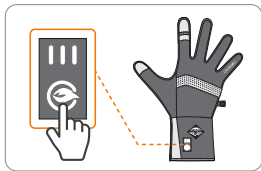


Heating Level	Temperature	Heating Duration
High(Red LED)	60-65°C/140-149°F	≈2-2.5H
Medium(Blue LED)	50-55°C/122-131°F	≈3-4.5H
Low(Green LED)	40-45°C/104-113°F	≈7.5-8H

Tips:

- * When the battery power drops to one bar (| | | |), please ensure timely charging of the battery.
- * If the actual battery life of the gloves differs from what is stated here during use, please understand that it could be influenced by the surrounding temperature. It's not recommended using the gloves when the temperature is below -4°F(-20°C).

5. Turn off

Press and hold the power button for 2s on the glove again to turn it off or directly unplug the battery.

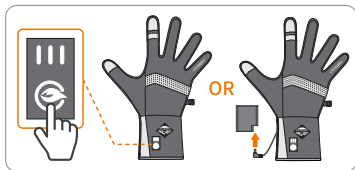

BATTERY

Specifications

Battery Pack Model	NR-HG040BY
Battery Capacity	2050mAh/15.58Wh
DC Input	8.7V \equiv 2.1A
DC Output	7.6V \equiv 2.1A

Warnings

- Before first use, please fully charge the battery.
- Do not charge the battery when it is overheated. Allow the battery to cool down first.
- Do not charge the battery near flammable materials or on conductive surfaces.
- Do not attempt to dismantle or alter the structure of the battery.
- Do not strike the battery, protecting it from impacts.
- Do not dispose of the battery in fire or any liquid.
- Do not expose the battery to high temperatures or low pressures.
- Do not heat the battery above 45°C/113°F or incinerate it.
- When the gloves are not in use, always store the battery in the battery pouch.
- Dispose of the battery according to local environmental regulations. Do not treat it as household waste.
- Do not use if the battery or product has been damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior and pose a risk of fire or injury.
- Do not immerse the battery in water or use it underwater.
- The battery pack should be discharged once every six months, then charged to half capacity.

- Only use the provided charger for charging. It is designed for indoor use and should not be exposed to moisture.
- When the battery pack is not in use, keep it separated from other metal objects such as paper clips, coins, keys, nails, screws, and other small metal items. Short-circuiting can result in burns or fire.
- Do not insert any metal or other objects into the socket or plug as this may damage the product.
- Do not attempt to open the battery pack. Mishandling lithium-ion batteries can lead to explosions.
- Damaged battery packs must not be used further and should be disposed of immediately.
- Do not puncture the battery with a needle or similar object.

WASHING INSTRUCTIONS

Please remove the batteries and zip the pockets before washing the gloves. If you choose machine washing, please use a laundry bag and select the gentle cycle. When handwashing, avoid forcefully wringing or twisting the gloves. It is recommended to air dry them after washing.



Machine Wash Cold on
A Gentle Cycle



Do Not Bleach



Do Not Tumble Dry



Do Not Iron



Do Not Dry Clean

It's not recommended to wash the heated gloves more frequently than once a month.

1. If I ordered the wrong size, can I exchange it for a different size?

* Yes, you can. Please follow the Amazon exchange & return policy or contact us at support@neberon.com for the exchange.

2. Do the gloves only warm the fingers or the back of my hands?

* The gloves warm not only the fingers but also the back of your hands.

3. What should I do if there is no response when I press the power button, or if the product doesn't work due to battery failure?

* If there is any abnormality when you are using the gloves, please contact us and we will provide you with a satisfaction-guaranteed solution.

4. Why is the heating function not functioning properly?

* Please ensure that the batteries are fully charged and properly installed in the gloves.

* Check the battery connection to ensure proper current transmission.

* The heating effect may be affected in low-temperature environments. It is not recommended using them when the temperature is below -4°F(-20°C).



All trademarks, logos, and brand names are the property of their respective owners.