


USER MANUAL

Chef-Mate Kitchen Scale

Model : KS 40




www.healthsense.in



Sensing Health Everywhere

Negative value




The display will show a negative value (see LCD functions) if a weight has been removed from the scale. Please press the button to clear the negative value, the display will show "0" again.

Error Indication



The "Lo" symbol on display indicates that the battery power is running low. Please replace new battery.




The "Err" symbol on display indicates that the scale is over-loaded. Please remove excessive load immediately to avoid possible damage to the product.



The "unSt" symbol on display indicates that the scale is not stable for weighing. Please follow operation instructions for usage.

Care and Maintenance



- Place the scale on a solid level surface before use.
- Avoid hitting or dropping the scale otherwise damage may occur.
- Do not overload the scale or put heavy things on the scale when not use.



- Treat the scale with care as it is a highly precise electronic instrument.
- Do not immerse this product in water or any other liquid. Please keep dry surface.
- Clean the scale with a soft damp cloth, do not use chemicals or harsh abrasives.

Battery Advice



- If the scale is not to be used for long periods, it's recommended to remove the battery to avoid damage to the scale due to possible battery leakage.
- Keep the batteries out of reach of children.



- Do not mix old and new batteries, with different compositions or of different brands in order to prevent possible leakage, explosion.
- Do not heat or deform the batteries or explore to fire.



- Waste batteries should not disposed of with household waste.
- Please check with your local authority for battery recycling advice.

Warranty & Support

Entitle yourself for the 1 year HealthSense warranty by registering your purchase and easily reach us to submit your product related issues & queries, when you follow these hassle free ways.

At HealthSense our top priority has always been our valued customers. We very well know your HealthSense product is a part and parcel of your everyday life, which is why we are more easily accessible than earlier.

SCAN - For Warranty Registration



(Must register within 30 days from date of purchase)

SCAN - To File Complaint



(Fill & submit form if you are facing any product related issues)

* For detailed warranty terms please visit the link : www.healthsense.in/warranty-terms
* For additional support : Mail us at support@healthsense.in or Call us on : 080-41262836

Features

- Equipped with four precision strain G-Sensors system
- Max Capacity:5kg/11lb:0.4oz 5000ml/176fl'oz
- Division:1g/0.1oz 1ml/0.1fl/oz
- Touch on / Auto off / Touch off
- Tare function
- Two weight units :g-lb:oz
- Two volume units: ml-fl'oz
- Low battery/ over-load indication

Button Functions



Touch on / Touch off / Zero / Tare



Unit Conversion: g ↔ lb:oz ↔ ml ↔ fl'oz


LCD Display Functions




: negative value
 : tare weight
 : volume unit

g : weight unit
lb:oz: weight unit
fl'oz: volume unit


Battery Replacement

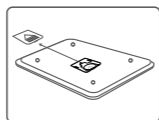

1. Remove battery compartment lid & isolation sheet before use.

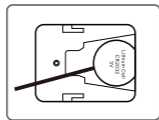

2. Take out the used battery with the aid of a sharp object to replace new battery.

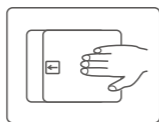


3. Re-insert the battery cover

Unit Conversion


If the scale is with unit systems of Metric(g,ml) and Imperial(lb:oz,fl'oz), users can select units from g to lb:oz or ml to fl'oz.

While the scale is on, select the required unit by touching the button or 3 seconds until the desired unit is shown, g/lb:oz or ml/fl'oz.


1. Weight mode



2. Water volume mode

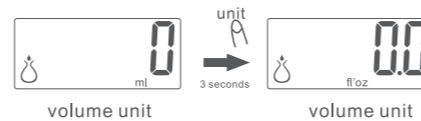

Operating the Scale

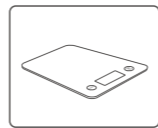

Before use, place the scale on a solid, level surface. Place any container or bowl (if used) on the scale before operation.



Gently touch the button to turn on the scale.




The scale LCD displays all parameters on the screen as it powers ON



Wait until the "0" is shown on the display.



Place the item to be weighed on the scale (or in the bowl if required). The LCD will show the weight reading.

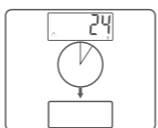

After weighing press the button once to TARE the scale or 3 seconds to turn off the scale Or leave the scale and it will automatically power off in 2 minutes.

Tare Function


The tare function allows you to weigh another item consecutively after weighing the first item without removing it from the scale.




Gently touch the button to turn on the scale.



The scale LCD displays all parameters on screen as it powers ON



Wait until the "0" is shown on the display. Put the container on the scale platform.




The LCD display will show the steady weight of the container.



Touch the button to clear the weight of the container (reset to zero).



The lower-left corner will show icon , it means the Tare function is activated.



Add the ingredients into the container.



The LCD will show the weight of the ingredients only. Repeat touching the button to weigh new different ingredients.