

Fitting The Wand Tonearm® to a Michell Turntable. (Plus and Master Series)


Wand 9.5in; may be mounted on the standard Michell Technoarm / Rega mounting plate.

Wand 10.3in; may only be mounted on a dedicated Michell mounting plate and using a special Wand-Michell arm mount available to order from Design Build Listen Ltd


Wand Classic 10.3in; These instructions are for Wand Plus and Master Series, ask us about Classic 10.3in arm fitting.(You will need the Michell plate but not the Wand one pictured here)

Step 1; Mount the mount onto Michell Plate
(But don't tighten screws)

Step 2; Add Spindle

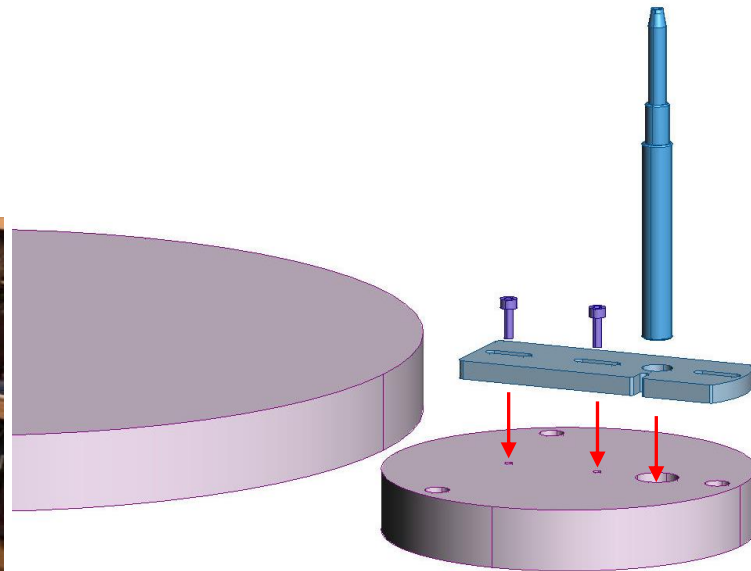

Step 3; Set arm height. Sit the protractor on the playing surface.
Lock the spindle with the hex key into the side of the mount.

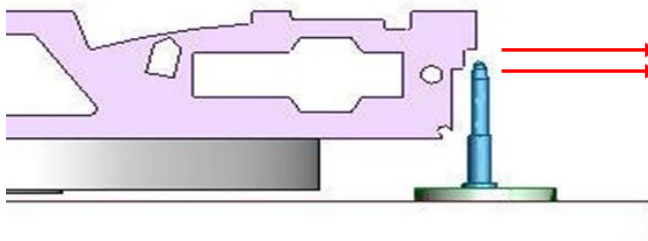


-Arm at +2 degrees
-Arm level (nominal)

Note; We suggest starting with the arm level. Later adjust upwards by ear. 2 degrees up may be good. This exact height depends on many factors. (See; P29 "SRA, VTA & My Sonic Lab" by Michael Fremer Stereophile June 2010)

Wand Master Series; The VTA adjustment won't work quite as shown on Page F as there is no black locking lever. We suggest you orient the spindle slot for the side grub screw. This will still stop the arm rotating until locked with the final height.

Step 4; Position the spindle sideways using protractor Then continue with Page D on the User Guide.

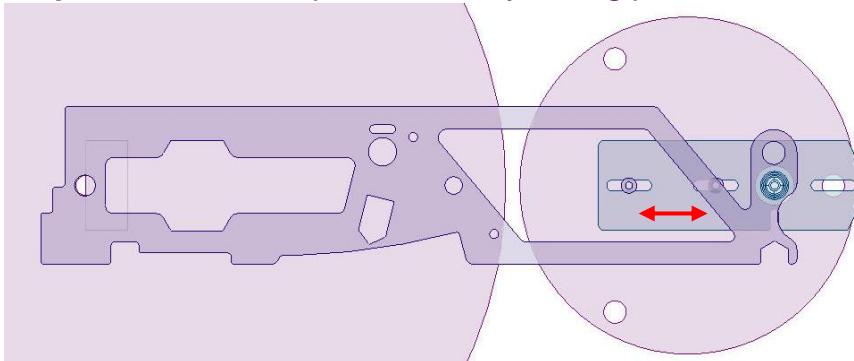

THE WAND®
UNIPIVOT TONEARM

www.thewandtonearm.com

©January 2018 design build listen Ltd. v2