
JUNIORJONES

AYLO

INSTRUCTION MANUAL




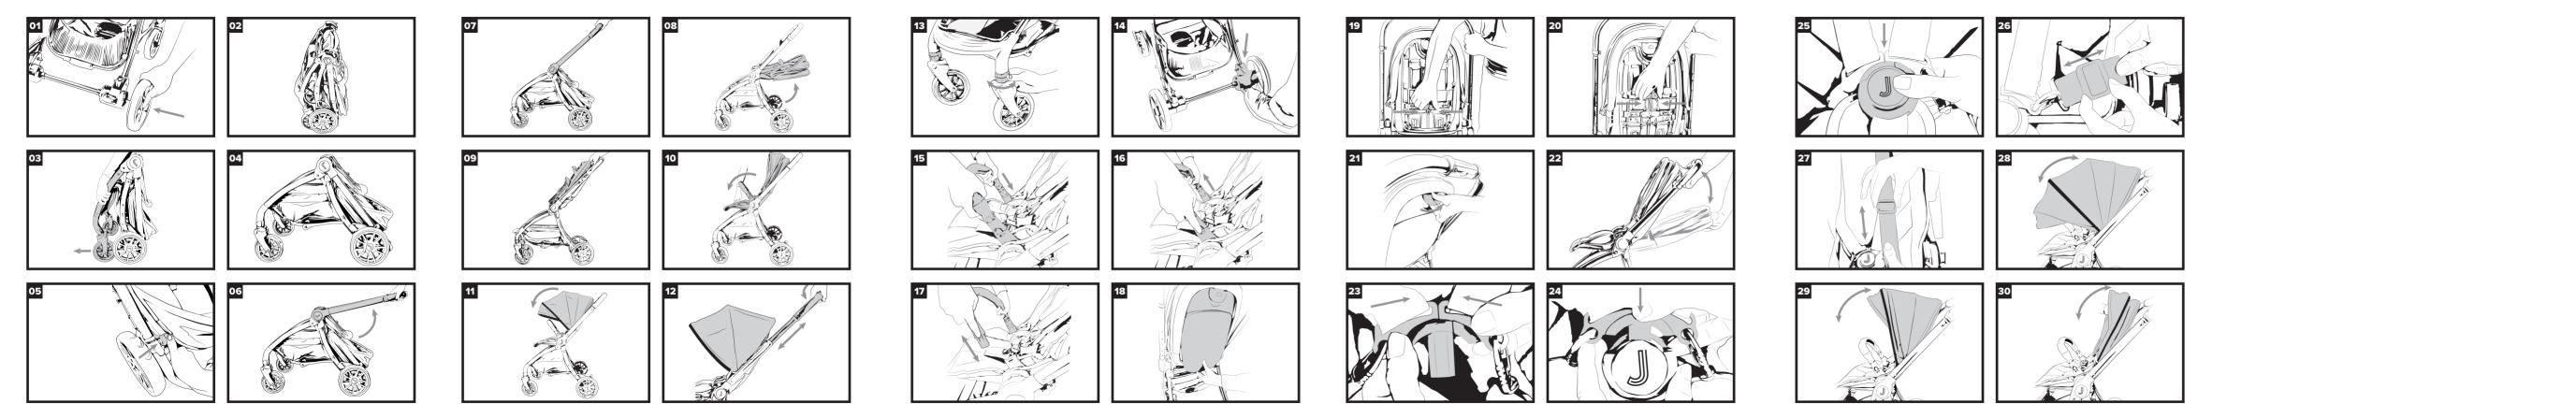

JUNIORJONES





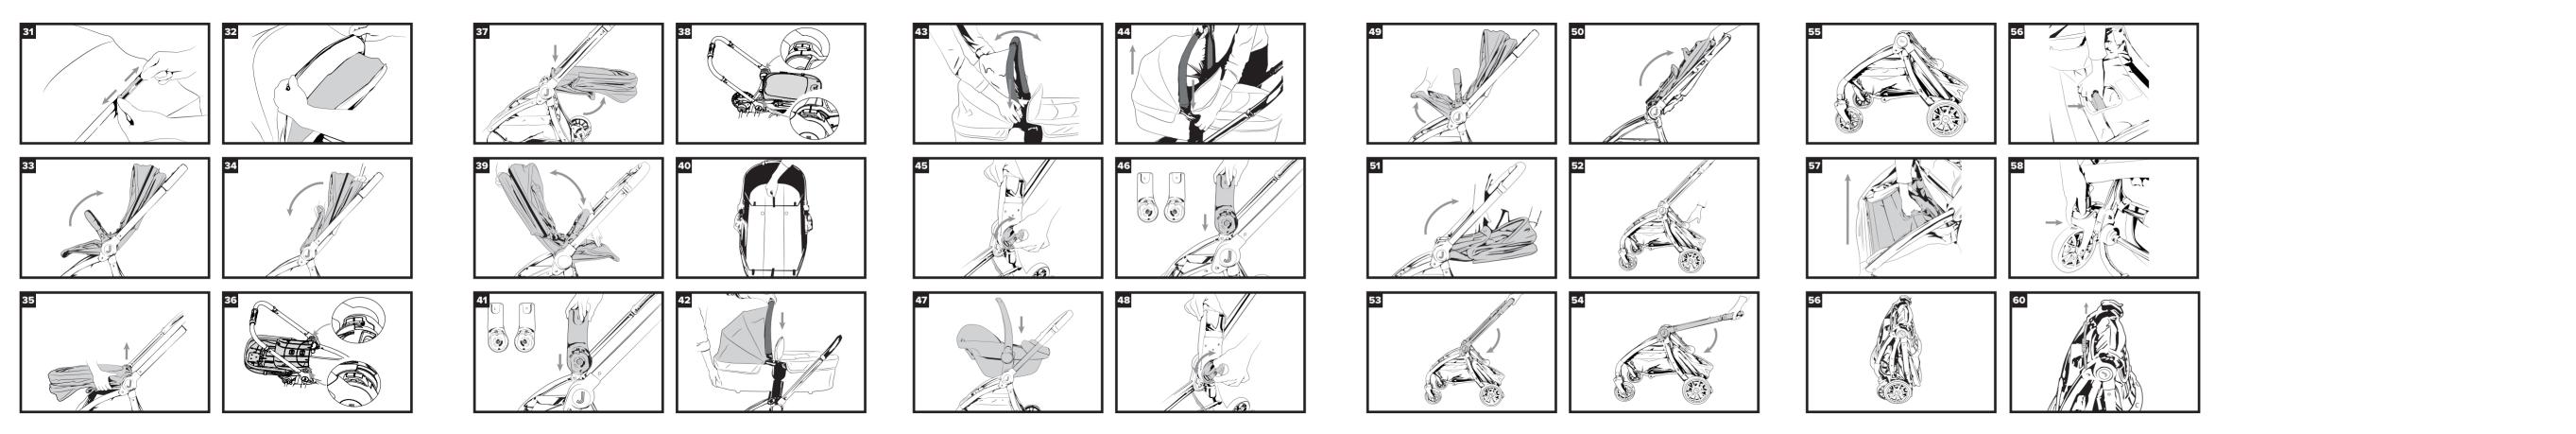

JUNIORJONES

INSTRUCTION MANUAL

CONTENTS

Diagrams	04	12. Operating the 5-point safety harness	23
Warnings	18	13. Adjusting the 5-point safety harness	23
1. Fitting/removing the rear wheels	20	14. Operating the hood	24
2. Unfolding the AYLO	20	15. Using the hood ventilation panel.	24
3. Adjusting the handle height	20	16. Removing the seat unit	24
4. Using the front swivel wheels	21	17. Attaching the seat unit in parent-facing mode	24
5. Operating the parking brake	21	18. Using the AYLO with the Carrycot	25
6. Attaching/removing the bumper bar	21	19. Using the AYLO with a Group 0 Car Seat	27
7. Swing-away bumper bar	22	20. Folding the AYLO	28
8. Removing/attaching the back panel	22	21. Care and maintenance	29
9. Adjusting the hood height	22	22. Warranty	31
10. Adjusting the shoulder strap height	22	23. Patent list	32
11. Reclining the seat unit	23		

Warnings

IMPORTANT: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Important Safety Information.

This vehicle is intended for children from birth to a maximum of 22kg or 4 years whichever comes first. Any weight added to the stroller will affect the stability. The stroller is suitable for one child only to the maximum weight stated above.

This stroller complies with EN 1888-1:2018+A1:2022 and EN 1888-2:2018

WARNING: never leave the child unattended.

WARNING: the brake shoud be engaged when inserting or removing your child.

A WARNING: this product is not suitable for running or skating.

A WARNING: ensure that all the locking devices are engaged before use.

WARNING: to avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING: check that the pram body, seat unit or car seat attachment devices are correctly engaged before use.

WARNING: only Junior Jones approved accessories should be used with this product.

WARNING: do not let your child play with this product.

WARNING: always use the restraint system in combination with the seat unit.

WARNING: the maximum weight for the standard shopping basket is 3kg.

WARNING: never lift/carry this product while occupied.

WARNING: do not use the stroller on steps, stairs or escalators; as it may be dangerous to your child.

WARNING: always descend/mount kerbs on the back wheels, do not tip the stroller forward.

WARNING: any load attached to the handle and/or the back of the backrest and/or the sides of the chassis will affect the stability of the product.

WARNING: never use a parasol attached to the stroller in windy conditions.

WARNING: always use the seat in the most reclined position for new born babies from approximately 6 months.

WARNING: only replacement parts supplied or recommended by the manufacture/distributor should be used.

1. Fitting/removing the rear wheels

Press the button in the centre of the rear wheel, align the axel and push onto the rear wheel housing (fig. 1).

Important: Check the wheels are correctly fitted before use.

To remove the rear wheels, press the button in the centre of the rear wheel and pull the wheel away from the wheel housing.

2. Unfolding the AYLO

Release the wheels from their lugs (fig. 2 & 3) and push forward until the chassis base locks into place (fig. 4).

Unclip the travel lock located at the rear wheel (fig. 5).

Lift the handle bar upwards (fig. 6) until it locks into place (fig. 7).

Lift the seat unit upwards into an upright position (fig. 8 & 9) and then drop the seat section downwards into place (fig. 10). Unfold the hood by pulling it forwards (fig. 11).



WARNING: ensure the locking devices are engaged before use.

3. Adjusting the handle height

Twist the barrel on the handle forward and move the handle upwards until it is in the desired position (fig. 12).

When folding the AYLO always ensure that the handle is in the lowest position.

4. Using the front swivel wheels

The front wheels can be in a fixed forward travelling position or swivel position.

Rotate the switch located above the front wheel to lock the wheels in a forward travelling position and twist again to change back into swivel mode (fig. 13).

For uneven surfaces you may find the stroller is easier to manoeuvre in the fixed forward position.

5. Operating the parking brake

Press down on the pedal to engage the parking brake (fig. 14).

Press down again to release the brake.



WARNING: never leave your stroller without fully engaging the parking brake.

6. Attaching/removing the bumper bar

Insert the bumper bar into the housings on both sides of the seat unit (fig. 15).

Press the buttons on either side of the bumper bar to release (fig. 16).

7. Swing-away bumper bar

Press the button on one side of the bumper bar to swing away, this allows easy access to your child (fig. 17).

8. Removing/attaching the back panel.

Slide your fingers into the bottom of the back panel and pull away from the seat back (fig. 18).

The back panel is magnetic and will attach easily when placed back into position.

9. Adjusting the hood height

Pinch the bottom slider buttons inwards and push up or down to adjust the hood into the desired position (fig. 19).

Always ensure that the hood is in the lowest position before attempting to fold the chassis.

10. Adjusting the shoulder strap height

Pinch the top slider buttons inwards and push up or down to adjust the shoulder harness into the desired position (fig. 20).

Always ensure that the harness is a comfortable fit on your child's shoulders.



WARNING: to avoid serious injury always use a 5-point safety harness.

11. Reclining the seat unit

Lift the handle located on the rear of the seat unit (fig. 21).

Recline into the desired position (fig. 22).

Use the same handle to raise the seat unit back into a seated position.

The seat unit has 3 recline positions and is suitable from birth in the lie-flat position.

12. Operating the 5-point safety harness

To fasten the harness bring together the left and right sections of the shoulder straps (fig. 23) and push into the main buckle housing on the crotch strap until they click into place (fig. 24).



WARNING: to avoid injury always use the 5-point safety harness.

To open the harness, press the button on the buckle housing (fig. 25).

13. Adjusting the 5-point safety harness

The waist strap and shoulder straps are adjustable to grow with your child. Simply slide the harness through the adjusters to the desired position (fig. 26 & 27).



WARNING: to avoid injury always use the 5-point safety harness.

14. Operating the hood

Pull the hood forwards to open and back to close (fig. 28, 29 & 30) Unzip the zippers on the hood to extend the canopy fully (fig. 31).

15. Using the hood ventilation panel.

There is a ventilated panel within the hood for adding air circulation on warmer days. Unfold from the rear of the hood to reveal the mesh ventilation panel fully (fig. 32). To close, fold the fabric back.

16. Removing the seat unit

Lift the seat part of the seat unit upwards to meet the back rest (fig. 33).

Drop the seat unit forwards into a horizontal position and align the two lines and lift off the chassis (fig. 34, 35 & 36).

17. Attaching the seat unit in parent-facing mode

Slide the seat unit into the chassis housings with the seat facing the rear of the stroller and align the two lines (fig. 37 & 38).

Lift the back rest into a seated position (fig. 39).



WARNING: ensure the seat unit is locked in place on the chassis before use.

18. Using the AYLO with the Carrycot

To assemble the carrycot, remove the apron and mattress to gain access to the stay bars in the bottom of the carrycot.

Using the tabs, pull the stay bars into the clips on the baseboard until you hear them click into place (fig. 40).

Replace the mattress and reattach the apron.

IMPORTANT: ensure that the stay bars are fully engaged before using the carrycot.

Your AYLO carrycot comes with adaptors that are also compatible with Group 0 Car Seats.

Slide the car seat adaptors into the housings on the chassis (fig. 41). The car seat adaptors are labelled 'L' and 'R'. This is from the perspective of you standing behind the chassis.

The adaptors will lock into place with a click.



WARNING: ensure the car seat adaptors are locked in place before use.

Attach your carrycot by lowering it on to the adaptors (fig. 42).

To adjust the carrycot hood, depress the buttons on the side of the

hood (fig. 43) and pull up until you hear it click into place.

Depress the buttons again to put the hood down.

To remove the carrycot, depress the release buttons on the side of the carrycot (fig. 44) and lift upwards from the chassis and the adaptors.

To release the car seat adaptors twist the locking device round and lift off (fig. 45).

CAUTION: always remove the car seat adaptors before folding the chassis.



WARNING: the AYLO carrycot is suitable for a child who cannot sit unaided, roll over or push itself up on its hands and knees. Maximum weight of the child: 9kg.



WARNING: do not let other children play unattended near the carrycot.



WARNING: do not use if any part is broken, torn or missing.



WARNING: no additional mattress should be used.

Never use the carrycot on a stand.

Do not leave your child unattended.



WARNING: before carrying or lifting, make sure that the handle is in the correct position of use.



WARNING: the head of the child in the carrycot should never be lower than the body of the child.

IMPORTANT:

- Ensure that you only use the carrycot on a horizontal, firm, level and drv surface.
- Regularly inspect the handle and base of the carrycot.
- Never use/leave your carrycot near open fire and other strong heat sources such as electric fires, gas fires etc.
- This carrycot is not a safe means of transport by car and should NEVER be used as such.

19. Using the AYLO with a Group 0 Car Seat

Slide the car seat adaptors into the housings on the chassis (fig. 46). The car seat adaptors are labelled 'L' and 'R'. This is from the perspective of you standing behind the chassis.

The adaptors will lock into place with a click.



A WARNING: ensure the car seat adaptors are locked in place before use.

Attach your car seat by lowering it on to the adaptors (fig. 47).

To release the car seat adaptors twist the locking device round and lift off (fig. 48).

CAUTION: always remove the car seat adaptors before folding the chassis.

The AYLO has been designed and tested for use with a variety of leading car seat brands. For full details please visit the Support section on our website; www.juniorjones.com or check with your local experience centre.



WARNING: only use car seats which have been approved by JUNIORJONES.

20. Folding the AYLO

Lift the seat section of the seat unit upwards to meet the back rest (fig. 49 & 50). Drop the seat unit to the rear of the chassis (fig. 51 & 52).

Ensure the handle bar is in the lowest height position. Firmly twist the barrel on the handle bar towards yourself to release the locking mechanism and drop the handle bar to the rear legs (fig. 53, 54 & 55).

In the shopping basket, press the button (fig. 56) to release the secondary locking mechanism and lift the barrel shaped handle upwards (fig. 57).

Bring the front wheels in towards the rear wheels and lock them into the lugs (fig. 58).

Your AYLO will free-stand when folded and the front wheels are locked into the lugs correctly (fig. 59).

Lift and manoeuvre the folded AYLO with the attached carry strap (fig. 60).

21. Care and maintenance

- Regularly check screws, rivets, bolts and fastenings to ensure they are locked tight and secure.
- · Replace any parts in an inferior condition.
- Always apply the brake when stationary/leaving the stroller and when inserting or removing your child from the stroller.
- When using this product during the winter, by the sea or off-road it is important to clean using clean fresh water and dry thoroughly. Salt water and salt and grit from the roads will corrode metal parts unless removed.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the product is damaged, contact our Customer Services Team immediately.
- Do not expose to excessive sunlight for extended periods of time, even normal exposure to sunlight may cause change to the colour of the fabrics.
- Light oil or silicone spray can be used to lubricate moving parts.

- Ensure zips are either fully open or closed to prevent damage.
- Always use the rain cover in inclement weather.
- Never leave the raincover over the stroller with your child in it when indoors.
- Do not place items on top of the hood/canopy, it could damage the fabrics and affect the stability of the product.
- Any load attached to the handle and/or the back of the backrest and/ or the sides of the chassis will affect the stability of the product.
- Tyres could potentially leave marks on some surfaces such as vinyl flooring and carpet.
- · Fabrics should be cleaned in accordance to the care labels.
- Do not place fabrics in a washing machine, hand wash or sponge clean only using a mild detergent and warm water (30° C) in accordance to the care labels.
- Never leave the stroller with the child near swimming pools, stairs and fire.

22. Warranty

JUNIORJONES Ltd provide the warranty that all products purchased from us are free from manufacturing faults and material defects in both the workmanship and the materials.

With regard to our stroller products, your warranty is valid for two years from the date of purchase. With regard to our carrycots, soft goods and other accessories, your warranty is valid for twelve months from the date of purchase.

Please retain your proof of purchase as it will be required to validate any claim under this warranty.

As an owner of a JUNIORJONES product, it is your responsibility to ensure your product is kept in good condition and is regularly maintained. You must also adhere to all instructions for care and use, as these will keep your product in the best condition and will prevent injury or damage to your product or child.

Your statutory rights are not affected.

AYLO Instruction Manual AYLO Instruction Manual

23. Patent list

UK Patent No. GB2553802. GB2566816. GB2566331. GB2560550 GB2566817. GB2586842

UK Patent Application No. 1612455.4.

European Patent No. EP3188949, EP3272621, EP3512753

USA Patent No. 10,150,496. 10,343,704. 10,836,419 Hong Kong Patent Application No. 18100395.1

Chinese Patent No. ZL 201520389910.3. ZL 201720771457.1. ZL 201620139880.5. ZL 201921459229.6. ZL 202021926757.0. ZL 201710820911.2

Chinese Patent Application No. 201811157321.7. 202011088950.6 202210149729 X

PCT Patent Application No. PCT/IB2015/056521. PCT/IB2017/055128. PCT/IB2018/056114. PCT/IB2018/051725

European Design Registration No. 003789130-0003. 003789130-0004. 003789130-0001.003789130-0002.003800002-0001.003800002-0002. 007718762-0001.007718762-0002

Chinese Design Registration No. ZL 201630464887.X. ZL 201630464888.4 ZL 201930486061.7. ZL 201930486376.1

UK Design Registration No. 90037891300003. 90037891300004. 90037891300001. 90037891300002. 90038000020001. 90038000020002

AYLO Instruction Manual — AYLO Instruction Manual AYLO Instruction Manual