


ASAKUKI

User Manual

Ultrasonic Cool Mist Humidifier

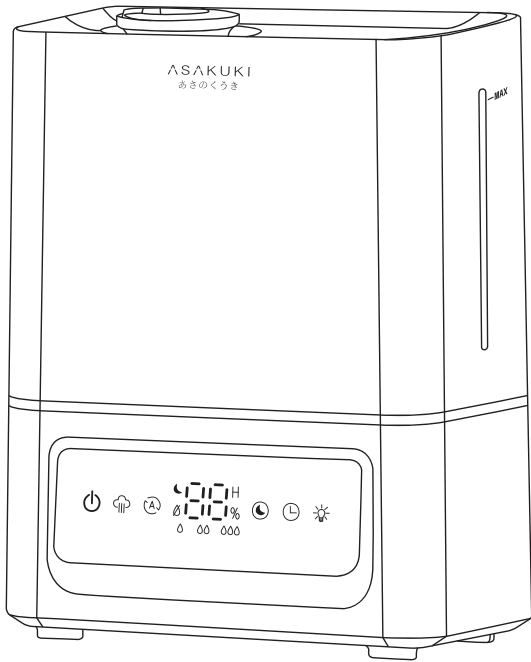

Need Help?

Please contact us at support@asakuki.com

Model: AH001

TABLE OF CONTENTS

PACKAGE CONTENTS	01
SPECIFICATIONS	01
SAFETY INFORMATION	02
GETTING TO KNOW YOUR HUMIDIFIER	03
• Humidifier Diagram	03
• Control Panel	04
• Remote Control	05
GETTING STARTED	06
• Filling and Refilling	07
• Using the Aroma Box	08
OPERATING YOUR HUMIDIFIER	09
• Turn On the Humidifier	09
• Auto Mode	09
• Intelligent Sleep Mode	09
• Timer Setting	10
• Night Light	10
• Turning Off the Display	10
• Turn Off Beeps	10
• Memory Function	10
• Automatic Shutoff	10
CARE & MAINTENANCE	11-12
TROUBLESHOOTING	13-14
WARRANTY	15


PACKAGE CONTENTS




1 x 6L Humidifier




1 x Remote Control

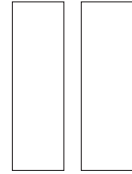

2 x Aroma Pad
(1 Pre-Installed)

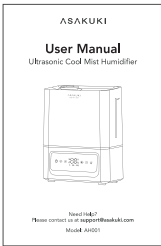

1 x User Manual

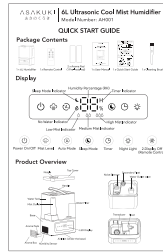

1 x Quick Start Guide



1 x Cleaning Brush

SPECIFICATIONS

Power Supply: AC 100-240V, 50/60Hz

Water Tank Capacity: 1.59gal / 6L

Rated Power: 25W

Dimension: 180 × 260 × 340.5mm / 7.09 × 10.24 × 13.4in

Weight: 2.17kg / 5.77lbs

SAFETY INFORMATION


To reduce the risk of fire, electric shock, or other injury, when using your humidifiers, basic safety precautions should always be followed. Read all instructions before using.

1. Place the humidifier on a dry, flat, stable surface. **Do not** place the humidifier directly on carpets or rugs.
2. Place the humidifier and cord so that the humidifier will not be knocked over.
3. **Do not** place the humidifier on or near heat sources such as radiators, heated ovens, etc.
4. Close supervision is necessary when the humidifier is used by or near children.
5. **Do not** overfill the water tank. Water should not exceed the MAX level.
6. **Only** fill the tank with cold pure water (distilled/purified water). Never fill the humidifier with other liquids.
7. **Do not** add essential oils or other objects into the water tank or base chamber.
8. **Do not** cover the nozzle while the humidifier is on.
9. **Do not** attempt to inhale the mist directly from the nozzle.
10. Make sure to unplug the humidifier before cleaning or when the machine is not in use.
11. **Do not** immerse the cord, plug, or base in water or other liquids.
12. **Do not** use the humidifier for other than intended purpose.
13. **Do not** use the humidifier if it is malfunctioning, or if any part, including the base, water tank, cord, or plug, is damaged in any way. Stop using it and contact customer support.
14. Keep the humidifier out of reach from children.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**


GETTING TO KNOW YOUR HUMIDIFIER

Humidifier Diagram

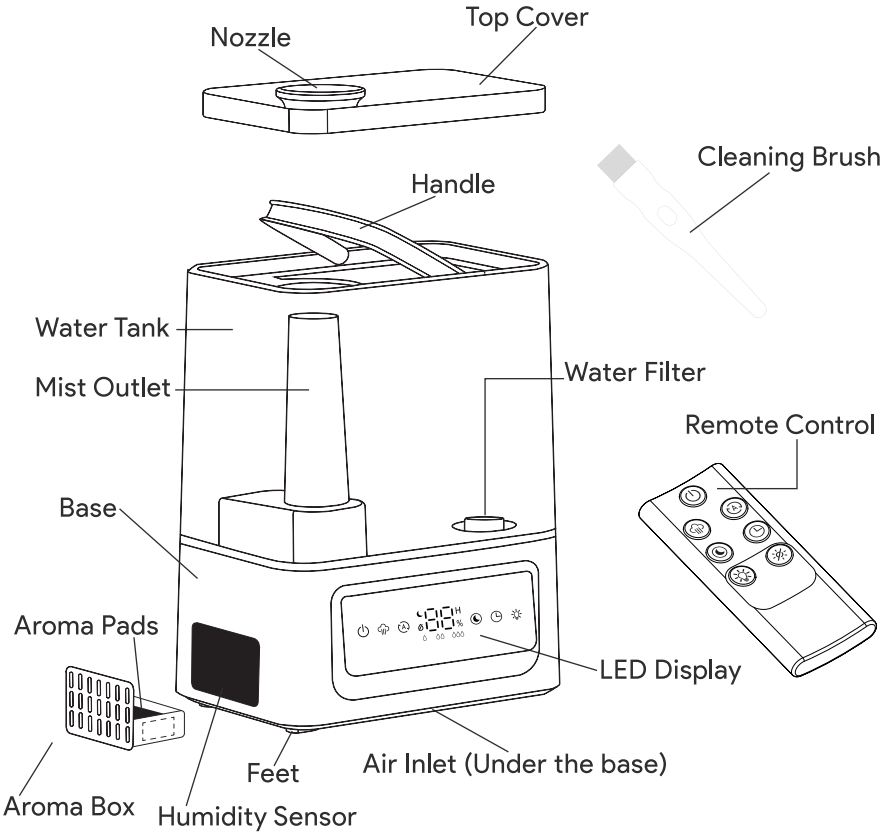

GETTING TO KNOW YOUR HUMIDIFIER

Control Panel

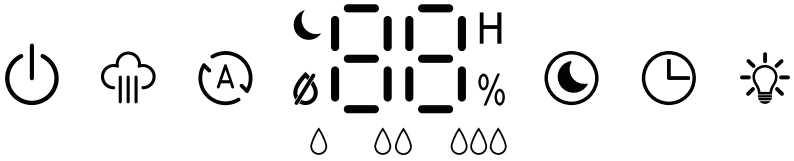


Power Button

- Press to turn the humidifier on/off.
- Press and hold for 5 seconds to turn the beeps on/off.

Mist Level Button

- Press repeatedly to cycle through mist level settings: low, medium and high mist. The default mist level is medium.

Auto Mode Button

- Press once to turn Auto Mode on.
- The default target humidity level is 50%. Press repeatedly to choose a target relative humidity between 40% and 80% (with 5% increments per adjustment).
- Press  to exit the Auto Mode.

Sleep Mode Button

- Press once to turn Sleep Mode on/off.
- Press and hold for 5 seconds to turn all display lights off.

Timer Button

- Press to choose a time setting between 1h and 16h.

Night Light Button

- Press to turn the night light on/off.

Sleep Mode Indicator

Humidity Percentage (RH)

No Water Indicator

Timer Indicator


Low Mist Indicator

Medium Mist Indicator

High Mist Indicator

GETTING TO KNOW YOUR HUMIDIFIER


Remote Control

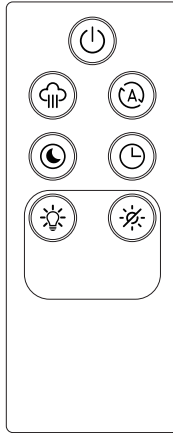


Button	Icon	Function
Power Button		Press to turn the humidifier on/off.
Mist Level Button		Press repeatedly to cycle through mist level settings: low, medium and high mist.
Auto Mode Button		Press once to turn Auto Mode on. Press repeatedly to choose a target relative humidity between 40% and 80% (with 5% increments per adjustment).
Sleep Mode Button		Press once to turn Sleep Mode on/off.
Timer Button		Press to choose a time setting between 1h and 16h.
Night Light Button		Press to turn the night light on/off.
Display Off Button		Press to turn off all display lights.

GETTING STARTED


1. Remove all packaging.
2. Remove the adhesive tapes between the tank and base. *[Figure 1.1]*

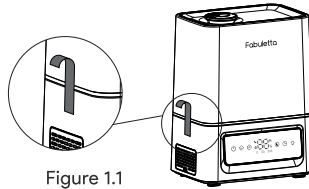


3. Take the water tank off of the base, remove the tape on the float. *[Figure 1.2]*

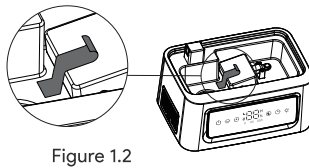

4. Clean the water tank and top cover before first use.
5. Choose a flat, hard location for the humidifier at least 6 in/15 cm away from any walls. The surface must be water-resistant. *[Figure 1.3]* Placing the humidifier on the ground directly may cause bad performance. It is recommended to put it on a smooth countertop or table instead.

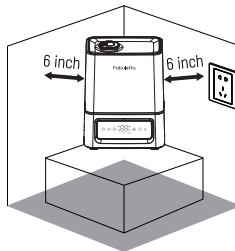

6. Rotate the nozzles to keep mist directed away from any walls, furniture, bedding and appliances. *[Figure 1.4]* Avoid letting too much mist fall on the side of the humidifier with the aroma box, as this may interfere with the sensor inside the aroma box.

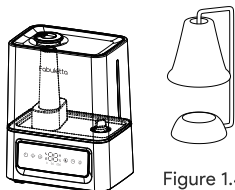

GETTING STARTED

Note: DO NOT place the humidifier on the towels, carpets, rugs, or any surfaces with fibers. This may block the air inlet at the bottom of the humidifier and cause malfunctioning. [Figure 1.5]

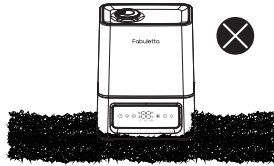


Figure 1.5

Filling and Refilling

1. Take out the top cover by holding the nozzles and pulling upward.
2. Fill the tank with cold water. We recommend using purified water. Avoid using tap water. Minerals in tap water will create white dust around the humidifier. [Figure 2.1]

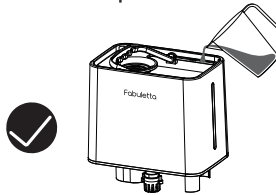


Figure 2.1

3. Make sure the water tank is properly placed on the base.
4. Place the water tank cover back on the tank. Make sure to align the nozzles with the spray tube.
5. Wipe off any excess water on the tank and base.

Note:

- Do not fill with hot water or other liquids.
- Do not add water through the mist tube, or the inner chamber. [Figure 2.2]

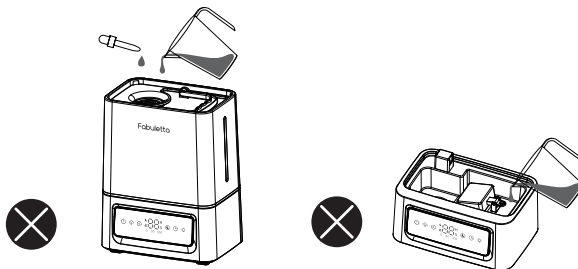


Figure 2.2

- Do not add essential oils to the water tank or base chamber. Drip essential oil on the AROMA BOX. [Refer to next page]

GETTING STARTED

Using the Aroma Box

Your humidifier can be used for aromatherapy. Follow the below instructions to add essential oil.

1. Gently push the aroma box on the side of the base and pull it out. *[Figure 3.1]*

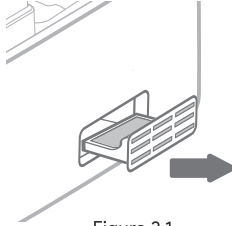


Figure 3.1

2. Put 10-15 drops of essential oil on the aroma pad. *[Figure 3.2]*

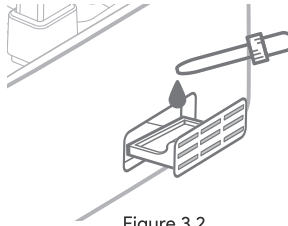


Figure 3.2


3. Replace the aroma box into the humidifier.



Note:

- The aroma is intended to be light. This humidifier is not an aroma diffuser.
- For best results, we recommend using pure essential oil.
- The aroma pads can be cleaned and reused after diffusing essential oils.

OPERATING YOUR HUMIDIFIER


Turn On the Humidifier

Please fill the tank before turning on the humidifier. If there is no water in the tank, no water indicator  will appear on the display, and the humidifier will automatically turn off.

1. Plug in the humidifier. All indicators will light on for 1 second, then turn off.
2. Press  to turn your humidifier on. The humidifier will start misting on the medium mist level.
3. Press  repeatedly to cycle through mist settings: Low, Medium, and High.
4. Rotate the nozzles to adjust the direction of the mist. Keep the mist directly away from walls, furniture, bedding and appliances.
5. Optionally, you can choose Auto Mode, Sleep Mode, Timer, Night light or turn off beeps. Please see the detailed instructions on the following pages.

Auto Mode

Auto Mode uses the humidifier's sensor to automatically adjust the mist level to maintain a target humidity level. The default target humidity level is 50%.

- Press  to turn Auto Mode on. Press repeatedly to choose an RH percentage between 40% and 80%.
- Once an RH percentage is selected, the humidity percentage indicator will flash 5 times and then start Auto Mode. The humidifier automatically produces mist based on the room humidity level.
- When the humidity percentage of the environment reaches the target RH percentage, it will automatically stop misting.
- When the humidity drops to 5% below the target RH percentage, it will start misting again.

Note:

Changing the mist level while in Auto Mode will exit the Auto Mode.




Intelligent Sleep Mode

Intelligent Sleep Mode uses a humidity sensor to automatically adjust the mist level to maintain a 50%–60% relative humidity [RH] while you sleep. It won't bother you at night with beeping or bright lights.

OPERATING YOUR HUMIDIFIER

- Press  to start Sleep Mode.
- Optionally, press  to set a timer or press  to turn on/off the night light if needed.
- When the control panel is light on, press  button can exit sleep mode.



Timer Setting

- Press  repeatedly to choose a time setting between 1 hour to 16 hours.
- Once a time was set, the timer will start.
- Press  to know the remaining time.
- The humidifier will automatically power off once the timer is over.
- Press  to 0 to close the timing.

Night Light

- The humidifier features a night light. You can press  to turn it on/off.

Turning Off the Display

- To turn off the display, press and hold  for 5 seconds (Press  on the remote control).
- To turn the display back on, press any button.



Turn Off Beeps

- Press and hold  for 5 seconds to turn on/off the beeps.

Memory Function

- The humidifier will remember your settings for Mist Level, Beeps when turned off or unplugged, and will resume those settings when turned back on.
- The humidifier will remember Sleep Mode or Auto Mode settings, and the display will automatically turn back on when the humidifier is turned back on.

Automatic Shutoff

- The humidifier will automatically shut off when all of the water in the tank has been diffused.  will show on the display and you will hear "beep beep beep" sound.
- If the tank has been removed from the base, the humidifier will automatically stop misting.  will show on the display and you will hear "beep beep beep" sounds.
- The humidifier will start working once the tank is placed properly back on the base.

CARE & MAINTENANCE

Note:

- All maintenance should be done on a water resistant surface near a faucet, such as a kitchen counter.
- Change the water daily to avoid bacteria grows.
- Do not wash any components of this humidifier in the dishwasher.
- If not using the humidifier for 1 week or longer, do not leave water inside. Clean the humidifier and keep it dry.
- Clean your humidifier water tank and base chamber every 3 days, or when you need to store it.

1. Unplug the humidifier.
2. Remove the water tank from base. Empty water from the water tank and base.
3. Add 3 US cups / 710 ml of distilled white vinegar to the water tank. Replace the top cover and swish the vinegar around the tank.
4. Place the water tank on base. Soak for 15-20 minutes.
5. Remove the water tank from base, pour out any vinegar solution. Use a soft cloth and the cleaning brush to clean all parts. *[Figure 5.1]*

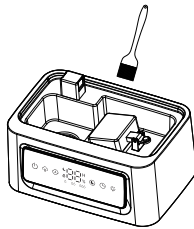


Figure 5.1

6. Rinse the tank, top cover and base chamber with room temperature water.
7. Remove the water filter from the tank by rotating it counterclockwise and rinse it. *[Figure 5.2]*

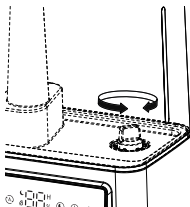


Figure 5.2

CARE & MAINTENANCE

8. Flip the water tank over. Remove the noise silencer by pressing the release tab and gently pulling it off. [Figure 5.3]

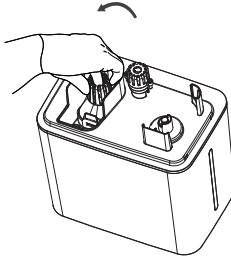


Figure 5.3

9. Remove the float from the base chamber by pulling the shaft out from the float brackets and rinse it.

Note: One side of the brackets is open to allow removal and installation. [Figure 5.4]

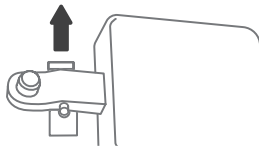


Figure 5.4

10. Rinse all parts until any vinegar smell is completely gone.

11. Dry all parts with a cloth. Make sure all parts are completely dry before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Solution
Humidifier doesn't turn on.	<ul style="list-style-type: none"> • Make sure the plug is securely inserted into the outlet. • Insert the plug into a different outlet for checking. • Fill the water tank and placed it properly onto the base.
Little or no mist comes out.	<ul style="list-style-type: none"> • Turn the mist level to a higher setting. • There may be too much water in the base chamber. Empty the base chamber. Refill the water tank (not the base chamber) and place the water tank properly onto the base. Clean the humidifier. • Make sure the nozzles are not blocked or clogged. • Make sure the humidifier is on a level surface. • If the water tank or base was washed with detergent, rinse thoroughly with clean water to remove any detergent. • The water temperature may be too low. • Turn on the humidifier and let it run for a while, then adjust to the desired setting. • In Auto Mode, when the humidity percentage of the environment reaches your target RH percentage, it will automatically stop misting.
Humidifier uses water too quickly.	<ul style="list-style-type: none"> • The humidifier uses up water based on the environmental temperature and humidity. If your environment is cold and/or dry, the humidifier will run out of water faster.
Humidifier produces an unusual smell.	<ul style="list-style-type: none"> • If the humidifier is new, unplug and rinse all parts, then place in a cool, dry place for 12 hours. • If essential oils were placed on the aroma pad, rinse the pad under clean water and allow it to dry. • Clean the humidifier.
Humidifier makes a loud or unusual noise.	<ul style="list-style-type: none"> • Make sure the water tank is properly in place. • Set the mist level to a lower setting. • Empty the base chamber. Refill the water tank (not the base chamber) and place the water tank properly onto the base.
Water leaks from the humidifier.	<ul style="list-style-type: none"> • Make sure to place the humidifier on a flat, level surface. • Make sure the silicone sealing ring around the water outlet valve is secure. • Make sure the water tank is properly in place. • Do not remove the water tank from base when it is full. • Wipe any excess water of the top and bottom of the base. • Avoid running the humidifier in a room with over 65% relative humidity. • Do not shake the humidifier. • Check the water tank for leaks. If there are leaks, contact customer support.

TROUBLESHOOTING

Problem	Possible Solution
White dust appears around the humidifier.	<ul style="list-style-type: none"> • We recommend using purified or distilled water to fill the humidifier. • Avoid using tap water or other water with high mineral content. • Clean the humidifier.
The area around the humidifier is damp or wet from condensation.	<ul style="list-style-type: none"> • Humidity may be too high. Turn down the mist or turn off the humidifier, and open a door or window. • Open a window to ensure proper airflow for the humidifier, or move the humidifier to a more well-ventilated room. • Make sure the water tank is properly in place. • When replacing the water tank, wipe of excess water from the water tank and base.
Mold grows inside the humidifier.	<ul style="list-style-type: none"> • Clean the water tank and base chamber regularly.
⊘ lights up red	<ul style="list-style-type: none"> • Fill the water tank. • Place the water tank properly on the base.
Essential oil has little or no smell.	<ul style="list-style-type: none"> • Add more essential oil. For best results, use pure essential oil.
Display shows an incorrect humidity percentage.	<ul style="list-style-type: none"> • The room may be larger than the humidifier's effective range. • Move to a room smaller than 430-645 ft² / 40-60 m². • Moisture may have built up inside the humidity sensor. Make sure the nozzles are facing away from the aroma box so that mist does not settle on the sensor inside the aroma box. Turn off the humidifier, remove the aroma box, and allow the sensor to air dry. • If the humidifier is placed within 6 inches / 15 cm of a wall or in a corner, the humidity sensor cannot provide a proper reading for the relative humidity in the room. <p>The humidity sensor will give an improper reading if it is exposed to dust. Avoid using the humidifier in dusty rooms. Avoid using tap water in the humidifier as this can increase dust in the air.</p>
The humidity level isn't changing in my room.	<ul style="list-style-type: none"> • Use a higher mist level setting. • Depending on your environment, the humidifier may take longer to humidify your air. • The room may be larger than the humidifier's effective range. If the room is larger than 430-645 ft² / 40-60 m², the humidifier will not be as effective.

**Have any other questions?
Please immediately contact customer support !**

WARRANTY

The One-Year Limited Warranty is valid for products purchased from our ASAKUKI only, starting from the date of original retail purchase against defects in quality and materials under normal, non-commercial use. According to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.

What Is Covered

The repair or replacement of your ASAKUKI appliance if your ASAKUKI appliance is found to be defective due to faulty materials, workmanship or function within one year of purchase or delivery [if any part is no longer available or out of manufacture, ASAKUKI will replace it with a functional replacement part]. This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

What Is Not Covered

Under your ASAKUKI guarantee, ASAKUKI shall not be liable for costs of repair or replacement of a product incurred as a result of: Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the ASAKUKI appliance which is not in accordance with this ASAKUKI Operating Manual. Machines purchased from an unauthorized dealer. Use of parts and accessories other than those produced or recommended by ASAKUKI. Repairs or alterations carried out by unauthorized parties or agents. Use of the machine other than for normal domestic purposes within the United States, e.g. for commercial or rental purposes.

Extend Warranty

If you have a query about your ASAKUKI appliance, please contact the ASAKUKI customer service email: **support@asakuki.com**

Register your product within 60 days of purchase to extend your 1-year warranty by an additional year. Register your product at <https://asakuki.com/pages/warranty> Please inform us of your model name/number, purchase date, order number, machine problem and your requirement. Your model number can be found on the rating plate. Please keep your purchase receipt in a safe place to ensure you have this information. Service under this warranty will not extend the period of this warranty.

If you have any questions about our products, please contact our customer support team.

support@asakuki.com

Brand: ASAKUKI

Product Name: Humidifier

Model Number: AH001

Power Supply: AC 100-240V, 50/60Hz

WEEE-Reg. -Nr: DE: DE 41980660 FR: FR031399 05UERI

Manufacture: Chongqing ChuangHong Dian Zi Shang Wu You Xian GongSi

Address: 1 zhuang 11-3, jin kai da dao 1228 hao, bei bu xin qu, Chongqing,
401120, China

Email: support@asakuki.com



UK Responsible Person: JunBright Ltd

Address: 51 Chalton Street London, England, NW1 1HY

Email: yldyx112@outlook.com



EU Responsible Person: C&E Connection E-Commerce (DE) GmbH

Address: Zum Linnegraben 20, 65933, Frankfurt am Main, Germany

Email: info@ce-connection.de



MADE IN CHINA



ASAKUKI®

あさのくうき



ASAKUKI-Direct



asakuki_official



ASAKUKI.com