| Model Name | GA-MLi8TPoE+ | | 401-260893H-NZ-SP02 |
|---------------|--------------|-----------------------|---------------------|
| Model No. | PN260893H-NZ | Product Specification | Page 1 of 17 |

1. Summary

GA-MLi8TPoE+ is an Ethernet Switch with management function having 10ports of 10/100/1000BASE-T and SFP extension slot, one of which is selectable.

Ports 1 to 8 support IEEE802.3at/af PoE power supply function.

2. Feature

- (1) Ports 1 to 8 are 10/100/1000BASE-T ports corresponding to auto negotiation.
 Also their speed and communication mode can be switched by configuration.
 Ports 9 and 10 can be used as a 10/100/1000BASE-T port corresponding to auto negotiation or an SFP extension slot exclusively.
- (2) Ports 1 to 8 can supply power conforming with IEEE802.3at and 802.3af. Supplying power up to 30 W per port, and up to 124 W in total is possible.
- (3) Equipped with PoE auto reboot function, and monitoring, and the switching of the power supply OFF/ON to ports is possible via Ping, LLDP, and the 3 traffic volume methods.
- (4) Equipped with silent fan control functions, which can be set to match the operating environment temperature and power supply, and be used with any of the fan rpm, "High" and "Low".
- (5) All twisted pair ports support straight/cross cable auto sensing function. Simply connect devices with straight cables, whether it is a terminal or a network device. (This function does not work if the port communication configuration is set at Fixed or Link Aggregation. Ports 1 to 8 are set at MDI-X. (default))
- (6) Telnet/SSH allows remote configuration changes and verifications of the Ethernet Switch. Remotely configure the PoE settings for each port (Ports 1 to 8).
- (7) The connection status for each port is detected by the power saving mode, and it can reduce the power consumption to required levels when not linked up. (Factory default: disabled)
- (8) Rapid Spanning Tree Protocol is supported, allowing to build a system with redundancy.
- (9) The IEEE802.1p compatible QoS function is supported.
- (10) Supports triple authentication that can simultaneously wait on IEEE802.1X authentication, MAC authentication, and WEB authentication via one port, and an authentication network which is matched to the kinds of connection terminals can be constructed.
- (11) Equipped with step authentication functions, and can prevent illegal access of the terminals.
- (12) Since it is equipped with authentication supplicant functions, a more robust security configuration can be configured in combination with the upper switch's IEEE802.1X authentication function.
- (13) Due to the loop detection/shutoff function, a port where loop has occurred can be automatically shut off to prevent loop failures. When a port is shut off and recovered automatically, SNMP trap can be sent to notify the incident to the administrator. Moreover, the port with a loop can be identified by loop notification on the LEDs on the main unit and referring the history of loop on the setting screen.
- (14) The PoE scheduler function enables scheduling of PoE power supply control.
- $(15) \ \ \text{Supports ZEQUO assist Plus. Processes from introduction to maintenance can be performed easily.}$

| Date issued | Nov. 15, 2019 | Panasonic Electric Works Networks Co., Ltd. |
|--------------|---------------|---|
| Date revised | Apr. 14, 2022 | Tanasome Licetife Works Networks Co., Lta. |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model No. | PN260893H-NZ |

401-260893H-NZ-SP02

Page 2 of 17

3. Rated/Environmental Conditions

| 3-1. Power supply | AC100-240V, 50/60Hz, 4.0A (with a built-in power supply) | | |
|-----------------------------|--|--|--|
| 3-2. Power consumption | Normally, Max.154W (16.9W when not supplying power), Min.12.1W | | |
| 3-3. Operating environment | Temperature: 0 - 60°C Humidity: 20 - 80%RH (no condensation) | | |
| | (Note) Please note that if the aforementioned conditions are not satisfied, it may caused fire, electrical shock, malfunctions or misoperations, which are not covered by the warranty. *If it is used beyond the operating environmental temperatures, then the protective devices will start working and the Ethernet Switch power will be shut off. *The upper limit for the operating environmental temperatures may be altered by changing the settings for the silent fan control functions. For details, check "7-11. The Silent Fan Control Functions". | | |
| 3-4. Storage environment | Temperature: −20 - 70°C Humidity: 10 - 90%RH (no condensation) | | |
| 3-5. EMC compliance | CISPR 32 Class A EN 55032 Class A AS/NZS CISPR32 Class A VCCI Class A EN 61000-3-2, EN 61000-3-3 EN 55024 IEC 61000-4-2, IEC 61000-4-3, IEC 61000-4-4, IEC 61000-4-5, IEC 61000-4-6, IEC 61000-4-8, IEC 61000-4-11 * Electrical surges (lightning-induced surges in wiring): 10 kV (Depending upon the twisted pair ports, and Panasonic's proprietary evaluations) | | |
| 3-6. Safety compliance | IEC 62368-1 EN 62368-1 | | |
| 3-7. Environment compliance | RoHS compliant | | |

4. Form

| 4-1. Form and materials/colors | Dimensions | :44mm(Height) ×210mm(Width) ×260mm(Depth) (Excluding protruding sections) |
|--------------------------------|------------------------|---|
| | Case material Color | :SECC : Main unit: Green 03, Front face: Black 03, Face plate label: Black 04 |
| 4-2. Mass(Weight) | 2,400g | race plate label. Diack 04 |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model | PN260893H-NZ |

401-260893H-NZ-SP02

Page 3 of 17

5. Hardware Specifications

| 5−1. Interface | Twisted pair port 1-8 | :RJ45 connector (*1) | | |
|----------------|---|---|--|--|
| | Transmitting and receiving networ | k system: | | |
| | | IEEE802.3 10BASE-T IEEE802.3u 100BASE-TX | | |
| | | IEEE802.3ab 1000BASE-T | | |
| | Energy Efficient Ethernet (*2) | :IEEE802.3az(LPI) | | |
| | Transmission speed | :10/100/1000Mbps, full/half duplex | | |
| | Compatible cable | :Twisted pair cable | | |
| | | (At least equivalent to EIA/TIA568 category 5e) | | |
| | Maximum transmission distance | :100m | | |
| | Auto-Negotiation | :Communication speed and full/half duplex | | |
| | Tido Togodaton | are automatically recognized. | | |
| | | The setting can be fixed to 10Mbps, 100Mbps | | |
| | PoE power supply function | or 1000Mbps and full duplex or half duplex. :IEEE802.3af/at | | |
| | | Up to 124 W of power can be supplied to | | |
| | | ports 1 to 8 in total. | | |
| | | (Maximum power supplied to | | |
| | | a single port: 30 W) | | |
| | PoE power supply method | :Alternative A | | |
| | | (Cable signal lines 1, 2, 3, and 6 are used.) | | |
| | Twisted pair port 9,10 | :RJ45 connector | | |
| | Transmitting and receiving networ | k system: | | |
| | | IEEE802.3 10BASE-T | | |
| | | IEEE802.3u 100BASE-TX | | |
| | | IEEE802.3ab 1000BASE-T | | |
| | energy efficient Ethernet | :IEEE802.3az(LPI) | | |
| | Transmission speed | :10/100/1000Mbps, full/half duplex | | |
| | Compatible cable | :Twisted pair cable | | |
| | | (At least equivalent to EIA/TIA568 category 5e) | | |
| | Maximum transmission distance | :100m | | |
| | Auto-Negotiation | : Communication speed and full/half duplex are automatically recognized. | | |
| | | | | |
| | | The setting can be fixed to 10Mbps, 100Mbps or 1000Mbps and full duplex or half duplex. | | |
| | *1 Embedded power saving mode | e detects the connection status automatically | | |
| | and saves power consumption | | | |
| | *2 Energy Efficient Ethernet (EEE) conforming to IEEE802.3az (LPI). | | | |
| | | nission at link up, the energy-saving state | | |
| | automatically starts so that p | ower consumption can be reduced on each port. | | |
| l | SFP extension slot 9,10 | | | |
| | o o | k system: IEEE802.3z 1000BASE-X | | |
| | * Select either of RJ45 or SFP | for use | | |
| | SFF-8472 (DMI: Diagnostic Monit | oring Interface) | | |
| | 1 | 000BASE-SX SFP Module(i) (PN54022-NZ) 000BASE-LX SFP Module(i) (PN54024-NZ) | | |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ | | 401-260893H-NZ-SP02 |
|---------------|--------------|-----------------------|---------------------|
| Model No. | PN260893H-NZ | Product Specification | Page 4 of 17 |

5. Hardware Specifications

| 5-2. Switching mode | Switching method Switching capacity | :Store and Forward :20.0Gbps |
|------------------------|-------------------------------------|---|
| | Packet transfer capability | :Non-blocking Max. 1,488,000pps/port(1000Mbps) Max. 148,800pps/port(100Mbps) Max. 14,880pps/port(10Mbps) |
| | MAC Address table | :Max. 16K entry/unit Automatic learning can be enabled/disabled for each port. Fixed registration is enabled. |
| | Buffer memory | :2.0M Bytes/unit |
| | Flow control | :half-duplex Back pressure full-duplex IEEE802.3x |
| | Aging timeout | :10 to 1,000,000 sec. (Default: 300 sec.) |
| | Jumbo frame supported | :9KB |
| | Transmittable frames | :EAP,BPDU |
| 5-3. Terminal emulator | Console port | :RJ45 connector 1 port |
| connection | Transmission mode | :RS-232C (ITU-TS V.24) |
| | Emulation mode | :VT100 |
| | Communication configuration | :9,600bps, 8bit, None Parity control, Stop bit 1 bit |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model | PN260893H-NZ |

401-260893H-NZ-SP02

Page 5 of 17

5. Hardware Specifications

| 5-4. LED display | (1) POWER (Power) LED | | | | |
|------------------|---|--|--|--|--|
| | Green Light : Power is ON | | | | |
| | Off :Power is OFF | | | | |
| | (2) PoE LIM. (PoE limit) LED | | | | |
| | For silent fan control high-speed (High) * For factory default | | | | |
| | Off : Supplying power in the range from 0 to 109 W. | | | | |
| | Green Light : Supplying power in the range from 109 to 124 W. | | | | |
| | Orange Blink: A single port's power supply is exceeding the upper limit, or | | | | |
| | the total power supply of the Ethernet Switch is exceeding 124 V | | | | |
| | For silent fan control low-speed (Low) | | | | |
| | Off : Supplying power in the range from 0 to 47 W. | | | | |
| | Green Light : Supplying power in the range from 47 to 62 W. | | | | |
| | Orange Blink: A single port's power supply is exceeding the upper limit, or | | | | |
| | the total power supply of the Ethernet Switch is exceeding 62 W | | | | |
| | (3) TEMP (Temperature sensor) LED | | | | |
| | Green Light : The system is normally operating. | | | | |
| | Orange Blink: The temperature exceeded the set threshold of the internal | | | | |
| | temperature sensor. | | | | |
| | Set threshold of the internal temperature sensor: 74°C | | | | |
| | (factory default) | | | | |
| | (4) FAN (Fan sensor) LED | | | | |
| | Green Light: The system is normally operating. | | | | |
| | Orange Blink : Fan failure | | | | |
| | (5) STATUS/ECO (Status/ECO mode) LED | | | | |
| | Green Light : Operating in status mode. | | | | |
| | Green Blink : Operating in ECO mode. | | | | |
| | All port LEDs are turned off. | | | | |
| | Orange Light :Starting. | | | | |
| | Orange Blink: Malfunction (Contact the seller). | | | | |
| | (6) GIGA (GIGA mode) LED Refer to table 1 | | | | |
| | Green light : Operating in GIGA mode. on page 7 for the | | | | |
| | (7) Full (DUPLEX mode) LED | | | | |
| | Green light : Operating in DUPLEX mode. | | | | |
| | (8) LOOP HISTORY (Loop History mode) LED | | | | |
| | Green Light : Operating in loop History mode | | | | |
| | Green Blink : Loop is occurring, | | | | |
| | or occurred within 3 days. | | | | |
| | 0.00 | | | | |

: No loop detection.

Off

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

Panasonic Electric Works Networks Co., Ltd.

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model No | PN260893H-NZ |

401-260893H-NZ-SP02

Page 6 of 17

5. Hardware Specifications

5-4. LED display

Following items can be displayed using the LED display change button:

Display for the connection with a connected terminal (Status mode),

Display for the 1000 Mbps transmission rate (GIGA mode),

Display for the full-duplex or half-duplex transmission system (DUPLEX mode),

Display for ports with a loop history (Loop history mode), or

All port LED lamps to be turned OFF (ECO mode).

The mode at the start is called "Base mode".


There are two types of Base modes : Status mode (factory default setting) and ECO mode.

You can change the Base mode by holding down the LED display change button (for at least $3\ {\rm sec.}$).

When the Base mode is changed normally, all STATUS/ECO , GIGA and FULL LED lamps light up at the same time. When you release the button, the Base mode is changed to the selected mode.

If the mode is changed to the GIGA mode, DUPLEX mode, or Loop History mode and the LED display switch button is not used for one minute or longer, the mode automatically returns to the Base mode (Status mode or ECO mode).


The Base mode is maintained even after the power is turned OFF.

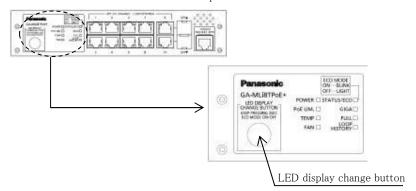

Switch two types of Base modes and their LEDs by following:

When Base mode is Status mode (factory default setting)

the following states. (Table 1)

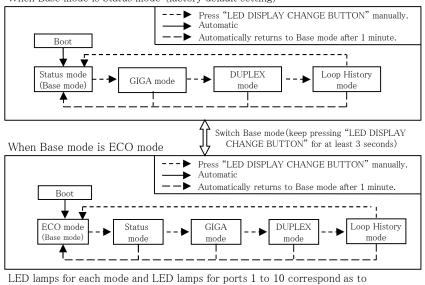

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

Panasonic Electric Works Networks Co., Ltd.

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model No | PN260893H-NZ |

401-260893H-NZ-SP02

Page 7 of 17

5. Hardware Specifications

| 5-4. LED display | | | | Table 1 | |
|--------------------------|--|-----------------|--|---|--|
| | Port LED | Display mode | Behavior | Description | |
| LED (Left) | | STATUS/ECO | Green Light Green Blink Orange Light Orange Blink | Link is established. Transmitting and receiving data. Shut off via the loop detection and shut off function/storm control or the BPDU guard Sending and receiving just the control packet. No device connected or the ECO mode is set. | |
| | Left | GIGA | Green Light Off | Link is established at 1000 Mbps. Link is established at 100 Mbps or 10 Mbps, or no device is connected. | |
| LED (Right) | | FULL | Green Light Off | Link is established at full-duplex Link is established at half-duplex or no device is connected. | |
| _ | | LOOP HISTORY | Green Light Off | Loop has been detected within 3 days. No loop detection history. | |
| | Right | | Green Light Orange Blink Off | PoE are being supplied power. Single port overload. Or an overload of the Ethernet Switch overall, and the ports displayed cannot be supplied power. Power is not being supplied, or the PoE receiving equipment are not connected. or it is set in the ECO mode. | |
| 5-5. Cascade connections | Port 1-10 corresponding to the Auto MDI / MDI-X (Allowed change by the setting for the application) Ports 1-8 are set to "Disable" at factory default setting. | | | | |
| 5-6. FAN | installed | | | | |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model No. | PN260893H-NZ |

401-260893H-NZ-SP02

Page 8 of 17

6. Software Specifications

| 6−1. Configuration | Control parameters can be set by the following procedures: (1) Configuration from an asynchronous terminal connected to the console port. (2) Configuration from a remote terminal connected via TELNET and SSH. (3) Configuration from a remote terminal via Web screen. |
|------------------------------|--|
| 6-2. Ethernet Switch Control | ZEQUO assist Plus can confirm the management/operation status of Ethernet Switch. Ethernet Switch can be controlled by the following procedures: (1) Control from an asynchronous terminal connected to the console port. (2) Control from a remote terminal using SSH/TELNET and TCP/IP network connection (3) Control using SNMP Manager The Ethernet Switch operation status can be checked using the following functions. (1) Internal temperature sensor function (2) Function to display the CPU usage and memory usage (3) SFP module status checking function (DDM: Digital Diagnostic Monitoring) |
| 6-3. Rebooting | The system can be reset from the software in the following two modes: Warm start. Reset back to the factory default settings. |
| 6-4. Supported Agent | Management protocol :SNMP v1/v2c /v3 (RFC 1157, RFC 1901, RFC 3411, RFC 3412, RFC 3413, RFC 3414, RFC 3415, RFC 3416) TELNET (RFC 854, RFC 855) SSH v2 (RFC 4252, RFC 4253, RFC 4254, RFC 4716, RFC4419) Data transfer protocol :TFTP (RFC 783, RFC 1350) |
| 6-5. Supported MIB | RFC1213-MIB (MIB II) (RFC 1213) (%1) BRIDGE-MIB (RFC 4188) (%2) SNMPv2-MIB (RFC 1907) RMON-MIB (RFC 2819) only etherStatsTable SNMP-FRAMEWORK-MIB (RFC 2571) SNMP-MPD-MIB (RFC 2572) SNMP-NOTIFICATION-MIB (RFC 2573N) SNMP-TARGET-MIB (RFC 2573T) SNMP-USER-BASED-SM-MIB (RFC 2574) SNMP-USER-BASED-ACM-MIB (RFC 2575) SNMP-VIEW-BASED-ACM-MIB (RFC 2576) IP-MIB (RFC 4293) (%3) IF-MIB (RFC 2863) excluding IfMIB IEEE8021-PAE-MIB excluding dot1xPaeSupplicant *1 Excluding following items At , ipRouteTable, icmp, egp *2 Excluding following items dot1dStp, dot1dSr, dot1dStatic *3 Excluding following items ipDefaultRouterTable, ipv6RouterAdvertTable |
| 6-6. System log | Maximum number to be kept: 10,000 Transfers system logs to the Syslog server (IPv4/IPv6) |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ | _ |
|---------------|--------------|---|
| Model No | PN260893H-NZ | |

401-260893H-NZ-SP02

Page 9 of 17

6. Software Specifications

| 6-7. Loop detection | Turns on the port LED with an orange light when a loop occurs in the corresponding port. At this time, the relevant port automatically shuts down (default setting: 60 set prevent loop from occurring. While loop is occurring, or if loop has occurred within 3 days, LOOP HISTORY LED blinks to notify this. | | | | |
|---------------------|---|--|--|--|--|
| | Enabled (factory default setting) Enabled/disabled can be switched by configuring a setting using the console. The setting is kept even when the power is turned OFF. Loop detection port Enabled: Ports 1 to 8 (factory default setting) Disabled: Ports 9 and 10 (factory default setting) Loop shutoff time 60 to 86,400 sec. (Factory default setting: 60 sec.) The Set Time Port LED lights up orange and the port shuts off. Loop history retention time 3 days The LOOP HISTORY LED blink for three days. The Port LED also remains lit for three days after the loop is eliminated. Loop shutoff mode has the following 2 types of modes. Block mode (factory default setting) When loops are detected, the port statuses are automatically blocked, and just the specified packets which include the loop detection packets will be transmitted and received. Shut-down mode When loops are being detected, the ports will be automatically linked down, and none of the packets will be transmitted and received. | | | | |
| 6-8. Others | *Just the loop detection packets from 30 seconds before the set restoration time will automatically be transmitted and received. Syslog Client (Transfers system logs to the Syslog server.) TFTP Client (Upgrades the software and saves/loads configuration information.) SNTP Client TELNET Client DHCP Client LLDP LLDP-MED DNS Resolver DHCP Snooping DDM Statistics sFlow Ethernet OAM CFM UDLD (Scheduled to be supported) | | | | |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model No. | PN260893H-NZ |

401-260893H-NZ-SP02

Page 10 of 17

7. Layer 2 Switching Functions

| 7-1. Spanning Tree | IEEE 802.1D Spanning Tree Protocol, Rapid Spanning Tree Protocol IEEE 802.1Q Multiple Spanning Tree Protocol BPDU guard |
|--------------------------------|---|
| 7-2. VLAN | IEEE802.1Q Private VLAN MAC-based VLAN Subnet based VLAN Protocol-based VLAN Number of VLAN registrations: 4,094 (including default) Asymmetric VLAN Voice VLAN (LLDP-MED) Dynamic VLAN Guest VLAN Internet mansion function |
| 7-3. Link aggregation | IEEE802.3ad Link Aggregation function (LACP/Manual) Up to 5 groups can be created (up to 8 ports per group). |
| 7-4. SPAN,RSPAN | Subject port traffic can be copied and transmitted to designated ports (multiple subject ports can be designated) Remote switching packets can be monitored via RSPAN. |
| 7-5. Port grouping | Members of the port group can communicate only among member ports in the same group. (Number of group registrations: 256) |
| 7-6. QoS | IEEE802.1p 8 levels of Priority Queue supported Scheduling Method: Strict Priority Queuing (SPQ:Strict priority queuing) Weighted Round Robin (WRR:Weighted round robin scheduling) Weighted Deficit Round Robin (WDRR: Weighted Deficit Round Robin scheduling) |
| 7-7. Authentication Function | IEEE802.1X Port-based authentication Mac-based authentication using IEEE 802.1X Dynamic VLAN function using IEEE 802.1X Guest VLAN using IEEE 802.1X (EAP-MD5/TLS/PEAP Authentication method) IEEE802.1X supplicant Force Authorized MAC Address Configuration EAP Packet Forwarding function (Enable/disable EAP transmission can be specified for each port.) MAC authentication WEB authentication Triple authentication (*1) Step authentication (*2) *1 IEEE802.1X MAC-based/MAC/WEB authentication can be received simultaneously *2 2 authentications can be combined in phases MAC-WEB authentication MAC-802.1X authentication 802.1X-WEB authentication |
| 7-8. PoE power supply function | IEEE802.3af/at power supply function. Up to 124 W of power can be supplied to ports 1 to 8 in total. (Maximum power supplied to a single port: 30 W) Supply method: Alternative A(Cable signal lines 1, 2, 3, and 6 are used.) |
| 7-9. PoE scheduler function | PoE power supply control can be scheduled. The setting can be configured by the month, week, day or specific date. The maximum number of schedules to be registered: 32 |
| 7-10. PoE auto reboot function | Monitoring, and the switching of the power supply OFF/ON to ports is possible via Ping, LLDP, and the 3 traffic volume methods. |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ | D. 1 C |
|---------------|--------------|-----------------------|
| Model No. | PN260893H-NZ | Product Specification |

401-260893H-NZ-SP02

Page 11 of 17

7. Layer 2 Switching Functions

| 7—11. Silent fan control | The fan rpm can be set in accordance with the usage environments. If the fan rpm are set, the available power supply will be automatically restricted. If the fan rpm (Fan Speed) are set to Low, the device's overall available power supply (Power Budget) will be automatically restricted, and it can be used with the fan noise reduced. | | | | | |
|-------------------------------|---|------------------------------|------------------------|--------------------|--|--|
| | Fan Speed Operating environment temperature | | Available PoE power | Comments | | |
| | High | 0.0000 | 124W | Factory default | | |
| | Low | 0−60℃ | 62W | | | |
| 7-12. Ring redundant protocol | Redundancy is e | nabled by ring configuration | . (Up to 8 group c | an be registered.) | | |
| 7—13. Multicast | IGMP snooping (IGMPv1/v2/v3) function (can be up to 1,024 groups of registration) IGMP Querier function MLD snooping (MLDv2) function (can be up to 1,024 groups of registration) Multicast filtering function | | | | | |
| 7—14. Access control | Access control can be controlled by the following parameters: (1) IP address, IPv6 address (Source or Destination) (2) MAC address (Source or Destination) (3) TCP/UDP port number (Source or Destination) (4) VLAN ID (5) IEEE 802.1p Priority (6) DSCP,DSDP6 (7) Protocol (8) ICMP type (9) TCP SYN Flag | | | | | |
| 7-15. Time setting | SNTP settings, time manual setting | | | | | |
| 7-16. Storm control function | Unknown unicast, Broadcast, Multicast control of the storm is possible | | | | | |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model No | PN260893H-NZ |

401-260893H-NZ-SP02

Page 12 of 17

8. WEB Browser-based Control (WEB control screen)

| 8-1. System Requirements | | | | | | | |
|-------------------------------|--|--|--|--|--|--|--|
| 8-1-1. WEB Browser | Microsoft Internet Explorer 11 | | | | | | |
| 8-2. Configuration Function | | | | | | | |
| 8-2-1. Switch Configuration | Administration IP Address SNMP SNTP Port System Security ID/Password Change Forwarding Database(FDB) Time(SNTP) LLDP VLAN Link Aggregation QoS Storm Control Access control ARP entry manual registration Port grouping Port monitoring Port counter | Authentication IGMP Querier IGMP Snooping Spanning Tree MSTP (Multiple Spanning Tree) Loop Detection DDM Ring protocol PoE Statistics System Log Syslog Transmission | | | | | |
| 8-3. Monitoring Configuration | Firmware upgrade, Reboot, Save current, Configuration file transfer, Ping execution | | | | | | |

9. Connector Pin Arrangement

| 9- | 9-1. Port 1 - 10 | | | | | | | | | | |
|----|------------------|-----------|--------|--------|--------|--------|--------|--------|--------|--------|-------------------------|
| | Status | Pin No. | 1 | 2 | 3 | 6 | 4 | 5 | 7 | 8 | Pin No. 1 2 3 4 5 6 7 8 |
| | MDI-X | Signal | BI_DB+ | BI_DB- | BI_DA+ | BI_DA- | BI_DD+ | BI_DD- | BI_DC+ | BI_DC- | |
| | MDI | Signal | BI_DA+ | BI_DA- | BI_DB+ | BI_DB- | BI_DC+ | BI_DC- | BI_DD+ | BI_DD- | |
| | | | | | | | | | | | |
| 9- | -2. Con | sole port | | | | | | | | | |
| | | Pin No. | S | ignal | Pin N | lo. | Signal | | | | Pin No. 1 2 3 4 5 6 7 8 |
| | | 1 | | NC | 5 | | GND | | | | 1 m No. [12345678] |
| | | 2 | | NC | 6 | | RXD | | | | '' |
| | | 3 | | ΓXD | 7 | | NC | | | | |
| | | 4 | (| GND | 8 | | NC | | | | |
| | | | | | | | | | | | |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ |
|---------------|--------------|
| Model | PN260893H-NZ |

401-260893H-NZ-SP02

Page 13 of 17

10. Installation Procedures and Accessories

| 10-1. Installation Procedures | (1) Mounting to wall(2) Mounting to rack | |
|-------------------------------|---|--|
| 10-2. Accessories | (1) Installation Guide (2) Rubber foot (3) Rack mount bracket (for 19-inch rack) (4) Wall mount bracket (5) Connection bracket (for connection two Ethernet Switches) (6) Screw (for 19-inch rack) (7) Screw (for fixing the mount brackets to the Ethernet Switch) (8) Screw (for fixing the wall mount brackets to the Ethernet Switch) (9) Screw (for fixing the connection bracket) (10) Power cord (AS/NZS 3112) (*) * The attached power cord is dedicated for AC 100 - 240 V use. | :1 :4 :2 :2 :2 :4 :8 :8 :8 |

11. Optional Accessories

| 11-1. 1000BASE-SX | Fiber optic port connector type: LC connector (Duplex) | | |
|------------------------|--|---------------------------------------|--|
| SFP Module(i) | Standards | :IEEE802.3z 1000BASE-SX | |
| (Model No.:PN54022-NZ) | Transmission speed | :1000Mbps, full duplex | |
| | Compatible cable | :Fiber cable | |
| | | $50/125\mu$ m Multi Mode Fiber | |
| | | $62.5/125\mu$ m Multi Mode Fiber | |
| | Maximum transmission distance | :550 m at 50/125 μ m | |
| | | 220 m at 62.5/125 μ m | |
| | Operating Temperature | :0 - 60°C | |
| 11-2. 1000BASE-LX | Fiber optic port connector type :LC o | connector (Duplex) | |
| SFP Module(i) | Standards | :IEEE802.3z 1000BASE-LX | |
| (Model No.:PN54024-NZ) | Transmission speed | : 1000Mbps, full duplex | |
| | Compatible cable | :Fiber cable | |
| | | $10/125\mu$ m Single Mode Fiber | |
| | | $50/125\mu$ m Multi Mode Fiber | |
| | | $62.5/125\mu$ m Multi Mode Fiber | |
| | Maximum transmission distance | :10 km when Single Mode Fiber is used | |
| | | 550 m when Multi Mode Fiber is used | |
| | Operating Temperature | :0 - 60°C | |

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ | | 401-260893H-NZ-SP02 |
|---------------|--------------|-----------------------|---------------------|
| Model No. | PN260893H-NZ | Product Specification | Page 14 of 17 |

12. Prohibitions when Using the Product to Guarantee Safety

Denotes that "Death or serious injuries might be caused".

The manufacturer assumes no responsibility for any problems occurring when the following conditions are not satisfied. Observe the following items when using the product.

- Do not use power supply other than AC 100 240 V.
 Deviation could lead to fire, electric shock, and/or equipment failure.
- (2) Do not handle this Ethernet Switch and connection cables during a thunderstorm. Deviation could lead to electric shock.
- (3) Do not disassemble and/or modify this Ethernet Switch. Deviation could lead to fire, electric shock, and/or equipment failure.
- (4) Do not damage the power cord. Do not bend too tightly, stretch, twist, bundle with other cord, pinch, put under a heavy object and/or heat it.
 - Damaged power cord could lead to fire, short, and/or electric shock.
- (5) Do not unplug nor plug in the power plug with wet hands. Deviation could lead to electric shock, and/or equipment failure.
- (6) Do not insert or drop foreign objects, such as metal or combustible things into Ethernet Switches through the openings, twisted pair port, console port and SFP extension slot.
 Deviation could lead to fire, electric shock, and/or equipment failure.
- (7) Do not store or use the Ethernet Switch in places where it might get splashed with liquids such as water, in places with high humidity, with conductive dusts, or in places where there are corrosive and combustible gases. Deviation could lead to fire, electric shock, and/or equipment failure.
- (8) Do not store or use the Ethernet Switch in places where it will be exposed to direct sunlight or high temperature. The temperature inside will rise, which may cause fire.
- (9) Do not store or use the Ethernet Switch in places where there are lots of vibrations and impacts, or in unstable areas. It might fall, which may cause injuries and/or equipment failure.
- (10) Do not put the Ethernet Switch into fire. Deviation could lead to explosion and/or fire.
- (11) If the device is going to be used in high temperature environments, do not perform the following operations with bare hands.
 - Relocating the installation area, transporting, and attaching, and removing attachment brackets, etc.
 - Connecting and disconnecting twisted pair cables, fiber optic cables, SFP modules and console cables
 - Attaching, and removing power cords
 - Operating LED display change buttons

Deviation could lead to injuries or burns, etc. because of high temperatures.

(12) Do not use the Ethernet Switch in very dusty areas such as in floors, underneath floors, the backside of ceilings, or wiring panels. Deviation could lead to fire, electric shock, and/or equipment failure. It is recommended that the Ethernet Switch be operated in environments such as the inside of racks where it is difficult for dust to be generated.

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

13. Cautions when Using the Product to Guarantee Safety

Denotes that "Minor injuries may be caused, or property damage might occur".

The manufacturer assumes no responsibility for any problems occurring when the following conditions are not satisfied. Observe the following items when using the product.

- Use the bundled power cord (AC 100 240 V specifications).
 Deviation could lead to electric shock, malfunction, and/or equipment failure.
- (2) Unplug the power cord in case of equipment failure. Deviation, such as keep connecting for a long time, could lead to fire.
- 3) Be sure to connect the ground cable. Otherwise this might cause electrical shocks, misoperations, and malfunctions. Connect the Ethernet Switch via the supplied power cord to the outlet, which is connected to the ground. If the outlet is not connected to the ground, connect the ground cable to the ground terminal screw.
- (4) Connect the power cord firmly to the power port. Otherwise this might cause electrical shocks and malfunctions.

being used.

- (5) Unplug the power cord if the STATUS/ECO (Status/ECO mode) LED or FAN (Fan sensor) LED blinks in orange (system fault).
 Deviation, such as keep connecting for a long time, could lead to fire.
- (6) Handle the Ethernet Switch carefully to prevent fingers and hands from being damaged by twisted pair port, SFP extension slot, console port, or power cord hook block.
- (7) When mounting the Ethernet Switch on a wall, mount it securely using wall mount brackets to prevent the Ethernet Switch from falling due its weight and that of the connection cables.
 Deviation could lead to falling, injury and/or equipment failure.
- (8) If the device is going to be mounted onto a rack, use the 2 installation brackets(for 19-inch rack mounting) which include the 19 inch rack mounting brackets (for 1 rack) and the 8 screws (for the rack installation brackets and for the main unit connections), and install the installation brackets into each of the 4 horizontal holes in the device, then securely secure it and set it up.
- (9) Up to two Ethernet Switches can be connected by using the connection brackets and connection bracket screws.

 Attach the connection brackets to the connection bracket screw holes on the front and back panels to securely fix the Switching
 - Hubs before installation.

 If the Ethernet Switches are not fixed securely, they may fall, leading to injury and/or equipment failure.

If it is not firmly secured, then deviation could lead to falling, injury and/or equipment failure.

- (10) Check whether the optical fiber cable connectors are not contaminated with dust, etc.

 Dust might cause the optical signal to not be transmitted normally, and cause misoperations and malfunctions. If they are contaminated, make sure to clean them off, then connect them to the optical fiber ports.
- (11) This Ethernet Switch is to be periodically serviced in order to maintain its performance.

 Please assign a product administrator, and have him/her be sure to implement periodic maintenance. When doing maintenance, check the inspection chart that is posted on our website, which has the requisite items listed on it.
- (12) When using this Ethernet Switch to design systems, use it after applying appropriate measures such as setting up redundant configurations.

 Communications failures might be generated due to causes such as malfunctions or misoperations while the Ethernet Switch is
- (13) When using this Ethernet Switch for applications which require extremely high reliability, be careful to expend all possible means to ensure safety and reliability.
 - This Ethernet Switch is not designed nor manufactured with the intention that it be used for applications (in use with railways, aviation, and medical care, etc. where the influence rate due to communications failures is extremely high in regard to systems that directly affect systems and human lives) which require extremely high reliability.

| Date issued | Nov. 15, 2019 | Panasonic Electric Works Networks Co., Ltd. |
|--------------|---------------|---|
| Date revised | Apr. 14, 2022 | Tanasome Licetife Works Networks Co., Ltd. |

| Model Name | GA-MLi8TPoE+ | | 401-260893H-NZ-SP02 |
|---------------|--------------|-----------------------|---------------------|
| Model No. | PN260893H-NZ | Product Specification | Page 16 of 17 |

- (14) Be aware of glitches which are caused in the usage environments such as age-related degradation, etc.

 This may vary depending upon conditions such as utilization rates and usage environments, but performance might decrease due to the age-related degradation, etc. of components. It is recommended that this Ethernet Switch be replaced about five years after it was installed.
- (15) Be careful in regards to environmental restrictions whereby the Ethernet Switch can be used. Please isolate the business power lines and communications lines. Isolate distribution lines and other distribution lines, and low current power lines, optical fiber cables, metallic water conduits, and gas conduits, etc. Noise may be generated in the communications lines which might cause communications glitches.
- (16) Do not connect any other devices except for 10BASE-T/100BASE-TX/1000BASE-T devices to the twisted pair ports. Deviation could lead to equipment failure.
- (17) Do not insert any other modules into the SFP expansion slots other than our optional SFP modules (PN54022-NZ/PN54024-NZ). Deviation could lead to equipment failure. Check our website for the latest information on supported SFP modules.
- (18) Do not connect the console ports with any other device except for Serial communication terminal.

 Deviation could lead to equipment failure.
- (19) To connect a power receiving equipment supporting IEEE802.3at to this Ethernet Switch, use a cable rated Cat5e or higher. Using other cables may result in heat generation, ignition, and/or equipment failure.
- (20) It is strongly recommended that a lightning arrester (SPD) be installed on the twisted pair port side and the power supply side of this Ethernet Switch.
 Malfunctions might be caused from overcurrent and overvoltage due to the effects of lightning strikes.
- (21) Be careful when performing the following operations since the device will be at high temperatures immediately after it has been energized or the power has been shut off.
 - Relocating the installation area, transporting, and attaching, and removing attachment brackets, etc.
 - Connecting and disconnecting twisted pair cables, fiber optic cables, SFP modules and console cables
 - Attaching, and removing power cords
 - Operating LED display change buttons

Deviation could lead to injuries or burns, etc. because of high temperatures.

| Date issued | Nov. 15, 2019 |
|--------------|---------------|
| Date revised | Apr. 14, 2022 |

| Model Name | GA-MLi8TPoE+ | | 401-260893H-NZ-SP02 |
|---------------|--------------|-----------------------|---------------------|
| Model No. | PN260893H-NZ | Product Specification | Page 17 of 17 |

14. Basic Instructions for the Use of This Product

- (1) For inspection and/or repair, consult the retailer.
- (2) Use commercial power supply from a wall socket closeby, which is close and easily accessible to this Ethernet Switch.
- (3) Unplug the power cord when installing or moving this Ethernet Switch.
- (4) Unplug the power cord when cleaning this Ethernet Switch.
- (5) Use this Ethernet Switch within the specifications. Deviation could lead to malfunction.
- (6) Do not touch the twisted pair cable modular metal terminals which are connected to RJ45 connectors (twisted pair ports) or the connectors, nor place them near electrically-charged objects. Static electricity could lead to equipment failure.
- (7) Do not put the modular plug of the connected twisted pair cable on objects that can carry static charge, such as carpet. Do not place it in the proximity. Static electricity could lead to equipment failure.
- (8) Do not put a strong shock, including dropping, to this Ethernet Switch. Deviation could lead to equipment failure.
- (9) Before connecting a console cable to the console port, discharge static electricity, for example by touching metal appliance (do not discharge by touching this Ethernet Switch).
- (10) Please use this Ethernet Switch in place where ambient temperature is from 0 to 60°C and, do not store and/or use this Ethernet Switch in the environment with the characteristics listed below. (Store and/or use this Ethernet Switch in the environment in accordance with the specification.)
 - High humidity. Possible spilled liquid (water).
 - Dusty. Possible static charge (such as carpet).
 - Under direct sunlight.
 - Possible condensation. High/low temperature exceeding the specifications environment.
 - Strong vibration and/or strong shock.

Failure to satisfy the conditions above may result in a fire, electric shock, equipment failure, and/or malfunction. Such events are not covered by the warranty.

- (*) If it is used beyond the operating environmental temperatures, then the protective devices will start working and the Ethernet Switch power will be shut off.
- (11) Do not block the ventilator of the Ethernet Switch.

 Blocked ventilator induces the heat accumulation inside, causing equipment failure and/or malfunction.
- (12) Operation is not guaranteed if a module other than the optional SFP extension modules (PN54022-NZ/PN54024-NZ) is inserted into the SFP extension slot.
 For the latest information about compatible SFP extension modules, check our website.
- (13) When using two Ethernet Switches, do not stack them. When you place them side by side, allow for a space of 20 mm or more between them. This space is not necessary if you use supplied connection brackets.
- (14) When mounting Ethernet Switches to rack, leave a minimum of 20mm space between them.

| Date issued | Nov. 15, 2019 | D: |
|--------------|---------------|-----|
| Date revised | Apr. 14, 2022 | ' ' |