

HOW TO CHANGE THE PLATEN TABLE RUBBER




REMOVE PLATEN TABLE FROM MACHINE.

REMOVE OLD PLATEN TABLE RUBBER AND ALL OLD ADHESIVE FROM PLATEN TABLE METAL BASE.




REINSTALL PLATEN TABLE TO MACHINE.

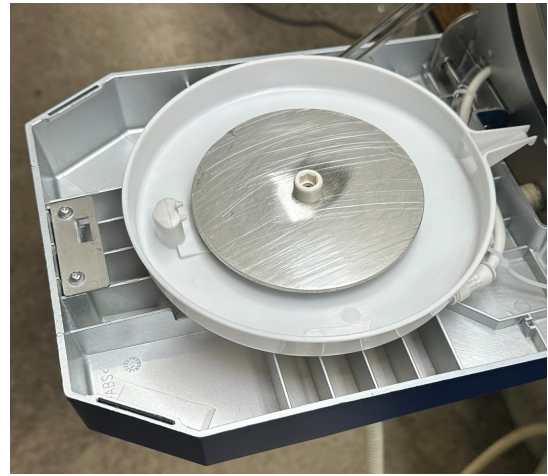

REMOVE WAX PAPER BACKING FROM DOUBLE-SIDED ADHESIVE AND AFFIX ONTO METAL BASE.

AFTER REMOVING WAX PAPER BACKING, FORM THE ADHESIVE INTO A "U-SHAPE" (WITH EXPOSED ADHESIVE FACING DOWN), AND PLACE HOLE OF ADHESIVE OVER CENTER PIN.

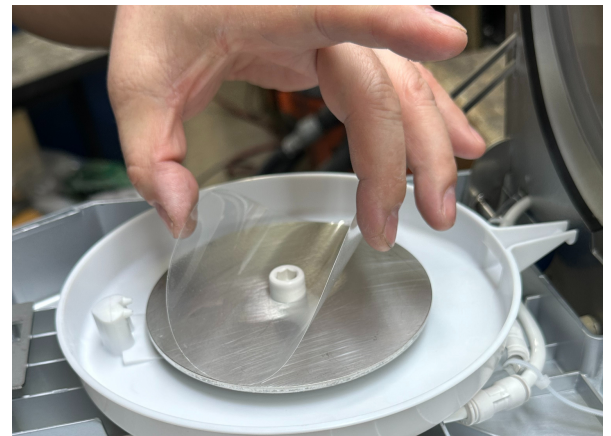

STARTING IN THE CENTER AND WORKING TOWARD THE OUTER EDGE, USE YOUR FINGERS TO SET THE ADHESIVE TO THE BASE MAKING SURE TO REMOVE ALL AIR BUBBLES.

REMOVE CLEAR COVERING FROM THE TOP OF THE ADHESIVE. USING YOUR FINGERNAIL OR SHARP EDGE, REMOVE THE CLEAR TOP COVER OF THE DOUBLE-SIDED ADHESIVE.



INSTALL NEW PLATEN TABLE RUBBER. FORM THE PLATEN TABLE RUBBER INTO A "U-SHAPE" AND PLACE HOLE OF PTR OVER CENTER PIN. STARTING IN THE CENTER AND WORKING TOWARD THE OUTER EDGE, USE YOUR FINGERS TO SET THE PTR TO THE ADHESIVE MAKING SURE TO REMOVE ALL AIR BUBBLES.



LET ADHESIVE CURE FOR 8 HOURS BEFORE USING MACHINE.