




DT-024 / KUKU-1

MANUAL - Ver 1.00

■ ITEMS INCLUDED


Please check the contents of the set before fully opening the tent. If you find something missing, please contact the store where you purchased it or us directly.



Fly sheet
×1




Inner tent
×1

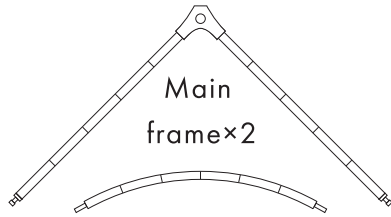

Main
frame×2




Ridge frame×1




Rear frame×1




Sub frame×2

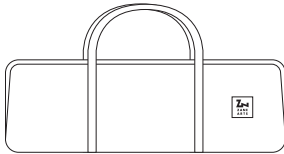


Carry bag×1



Pole bag×1




3m rope
×2



2m rope
×10



Stainless steel peg
×22



Peg/Rope
bag
×1

※Hammer is not included.

■ ABOUT THIS PRODUCT

Please take some time to understand the characteristics of this product before using it.

Fire is prohibited

Chemically treated fibers are used in the fabric of this product. Chemically treated fibers will liquefy when burned, and the liquefied fabric may cause serious burns to the skin when touched. Never use stoves inside the tents, shelters or tarps.

Water repellency is not permanent.

The surface is treated with silicone water repellent, but after use, the water repellent performance will deteriorate and rain will eventually penetrate the fabric. Please note that the water repellency cannot be maintained long term. Waterproof performance of the back side is not affected, so even if water repellency deteriorates, there is no issue using it as it is.

Dry and store securely after use.

If the product is stored in damp conditions, the polyurethane coating on the back side of the fabric will react with the moisture and may decompose or separate, causing the seam tape to peel off and diminish its waterproofness. After using, dry thoroughly and store away from hot or humid places. Be extra careful to wipe any moisture from the seam tapes.

For 3 season of use

This product is not designed to withstand snowfall nor low temperatures. Do not use in such situation where the zippers may freeze.

Do not remove the fire prohibition tag.

Do not cut or remove the fire prohibition tag sewn to the product. Products without the fire prohibition tag will not be guaranteed nor accept repairs.

■ PRECAUTIONS FOR SETUP AND USE

Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to the property.



**INDICATES CONTENTS THAT MAY
RESULT IN DEATH OR SERIOUS INJURY.**

DANGER

- Fire is prohibited in tents, shelters, and tarps. It is extremely dangerous as there is a risk of fire, oxygen deficiency, carbon monoxide poisoning, etc. Do not use firearms and keep fire away from the product.
- If bad weather such as a typhoon or storm is expected, please stop camping immediately.
- Do not set up in places that are easily affected by wind, or where there is a risk of falling rocks, avalanches, or flooding.



WARNING

INDICATES CONTENTS THAT MAY RESULT IN INJURIES OR PROPERTY DAMAGE.

- Not for permanent use. If this product is permanently installed, it will deteriorate and be damaged in a short period of time due to the effects of ultraviolet rays and other elements.
- Set up in a well-drained, flat area. Moisture and dirt lead to deterioration, and rough ground leads to damage due to product distortion.
- Remove any stones, twigs, or other objects that may damage the product before setting up.
- When setting up the product, be sure to do it with two or more people while paying attention to your surroundings.
- Do not set up in strong winds. The product may be blown away or damaged by the force of the wind.

- When setting up, be prepared for gusts of wind, and always be careful that the tent body and frame will not fly away, and work while supporting them.
- When extending poles or frames, make sure each section is inserted securely. Assembling the product incorrectly can lead to damage.
- When handling poles or frames, be careful not to hit or damage something around you and pay attention to your surroundings.
- After setup, secure the tent, shelter, and tarp to the ground with pegs and ropes to prevent them from being blown away by the wind.
- Do not leave the product unattended for long periods of time so that you can respond to sudden weather changes.

■ PRECAUTIONS FOR TAKING DOWN THE PRODUCT AND AFTER USE CARE


Be sure to read and understand the following contents before use to prevent harm to the user and others, and damage to the property.



INDICATES CONTENTS THAT MAY RESULT IN INJURIES OR PROPERTY DAMAGE.

WARNING

- When taking down the product, be sure to do it with two or more people.
- Please take down the product in the reverse order of the setup. Not following the instructions properly may damage the product.
- When removing poles or frames, pay attention to your surroundings and be careful not to hit or damage something around you.



- When folding a frame or pole with a built-in cord (bungee cord), begin folding from the centre, this will reduce the wear on the cord by not applying extra tension.
- After use, clean the fabric and allow it to dry thoroughly before storage. Storage with dirt and damp conditions may cause mold, bad odors, colour transfer, and deterioration.
- After use, also clean the frames, poles, and other metal parts and allow it to dry thoroughly before storage. Storage with dirt and damp conditions may cause corrosion damage.
- Salt will accelerate the deterioration of fabrics. If used near the sea, rinse the product with fresh water and dry well before storage.
- Use a soft towel to gently clean or wipe moisture off the fabric. Rubbing may damage the coating of the fabric.


- Do not use solvents such as paint thinners. There is a risk of detachment or discoloration of the water-repellent finish.
- Do not launder. It leads to deterioration of the fabric and breakage of parts.
- Please keep out of reach of infants and children while storage.

■ SETUP PROCEDURES

Follow the instructions in order to setup the product.

【Preparation】


※Prepare hammer

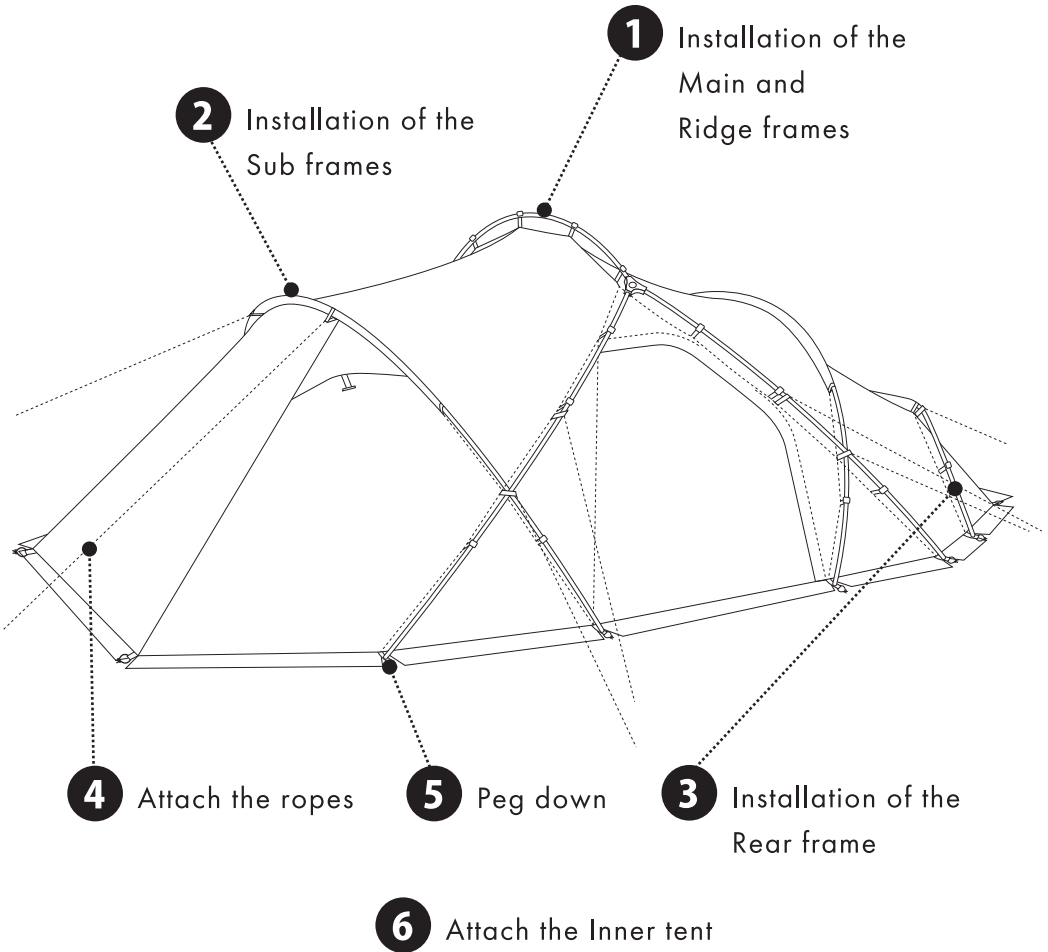

1 -1 INSTALLATION OF THE MAIN AND RIDGE FRAMES

A : Assemble the Main and Ridge frames

B : Insert the tips of the Main frames into the grommets located at the 4 corners with grey ropes, in numerical order below.

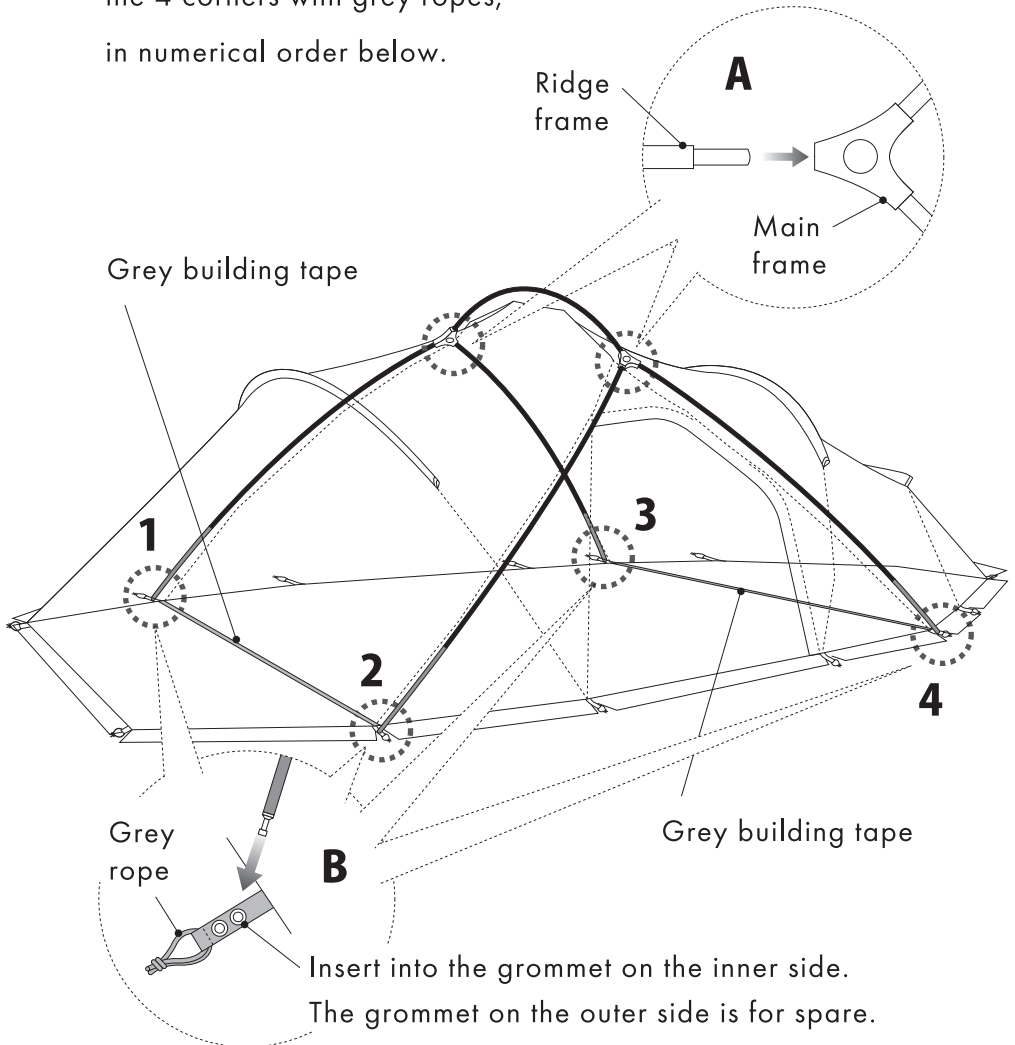


1 -2 INSTALLATION OF THE MAIN AND RIDGE FRAMES

C : Open the 2 zippers of the front panel.

D : Approach the Ridge frame through the opened front panel and attach the hooks to the Ridge frame.

E : Attach the hooks on the sides.


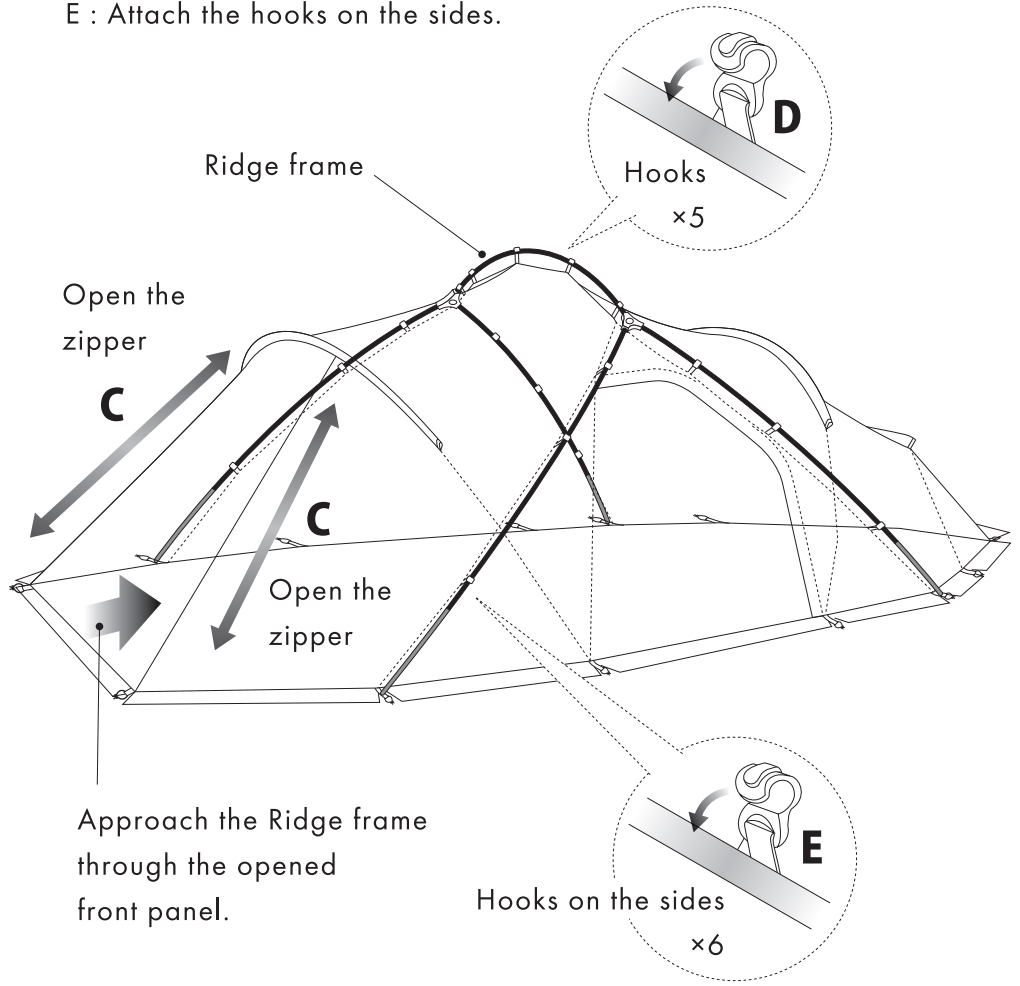


2 INSTALLATION OF THE SUB FRAMES

A : Insert the Sub frame into the front sleeve.

B : Insert the tips of the frame
into the grommet where
the black ropes are attached.

C : Repeat on the other Sub frame.

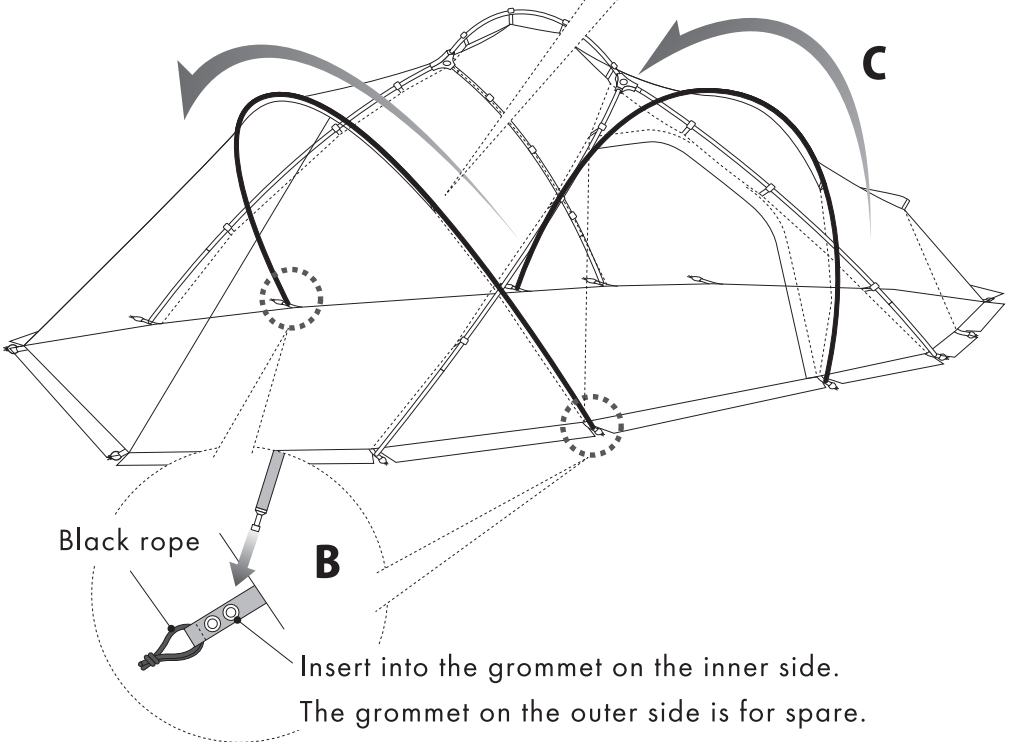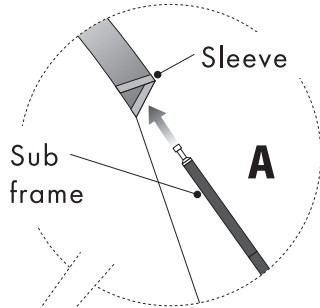


3 INSTALLATION OF THE REAR FRAMES

A: Insert the Rear frame into the rear sleeve.

B: Insert the tips of the frame into the grommets located at the corners.

C: Attach the hooks. (2 locations)


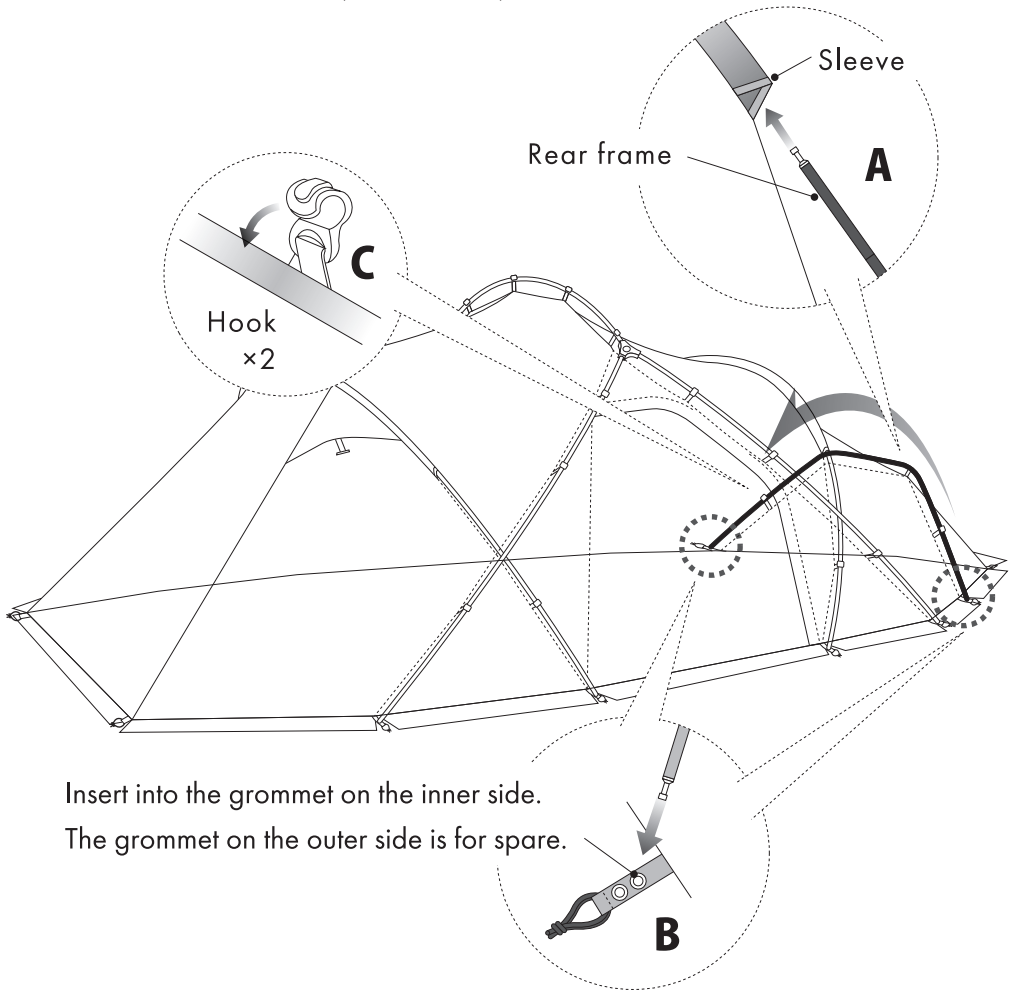


4 -1 ATTACH THE ROPES

Referring to below, attach the 2.5m and 1.5m ropes to each rings.

Rope installation

Ring

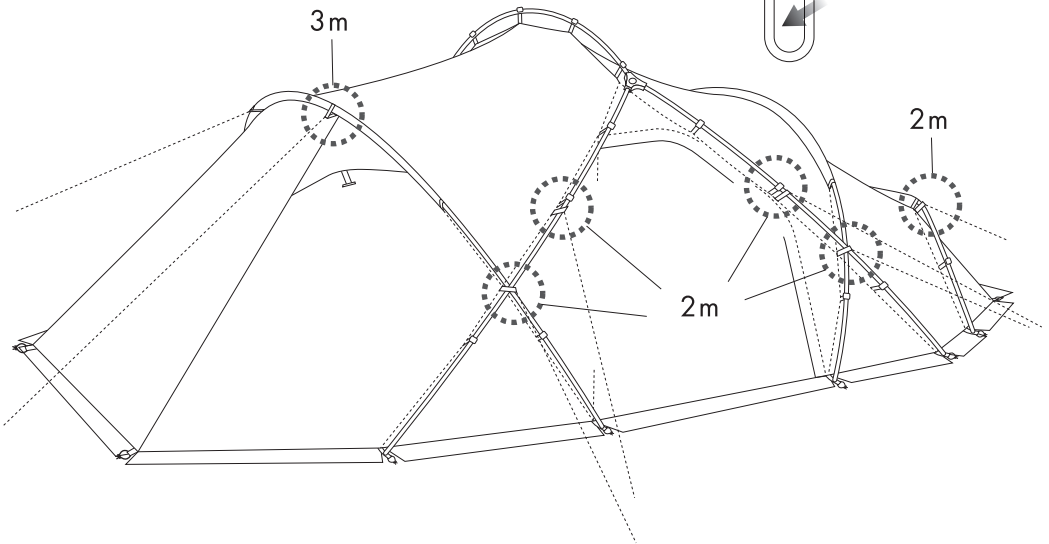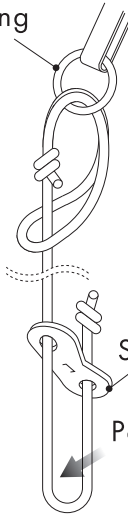


Repeat on opposite side.

4 -2 ATTACH THE ROPES

Referring to below, wrap the webbings around the frames.

Repeat on opposite side.

Wrap the webbing
around the frame

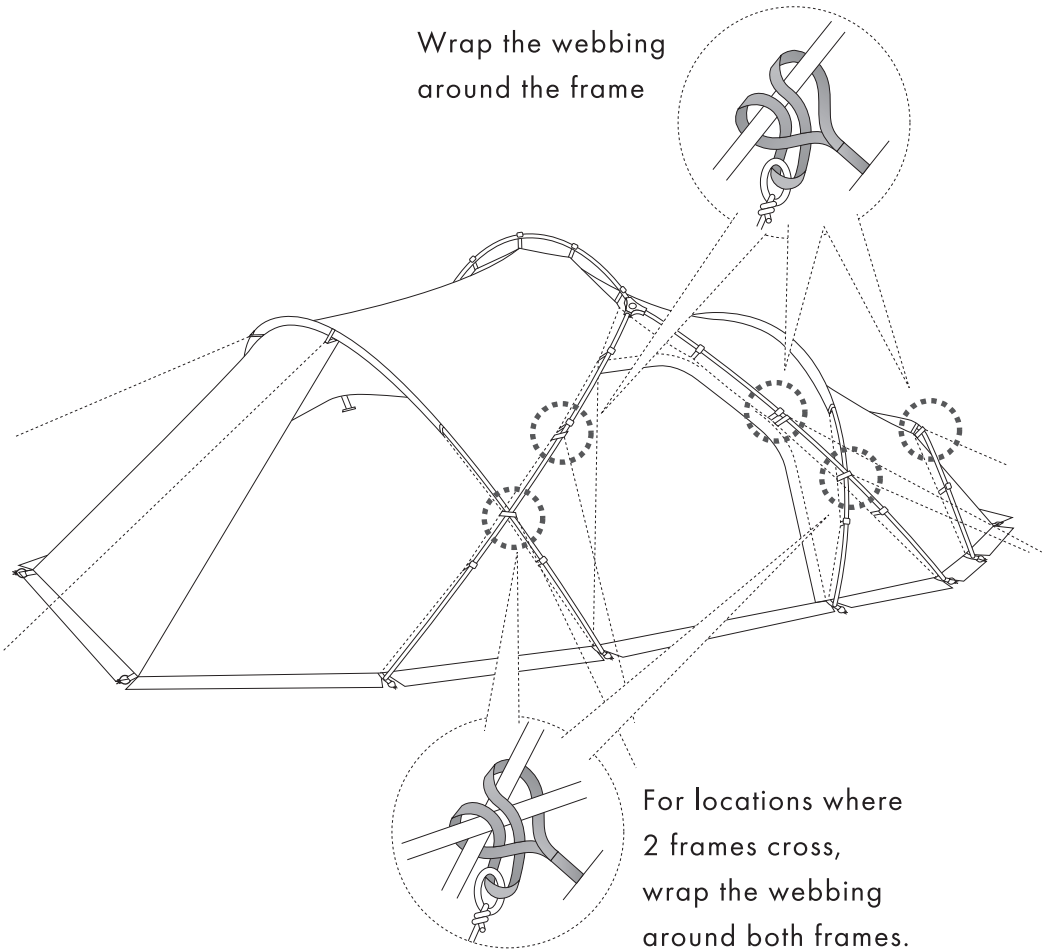

For locations where
2 frames cross,
wrap the webbing
around both frames.


5 PEG DOWN

A: Peg down the bottom corners in numerical order.



B: Peg down the the front and rear ropes. (4 locations)

C: Peg down the the side ropes.

D: Adjust the tension with the stoppers.

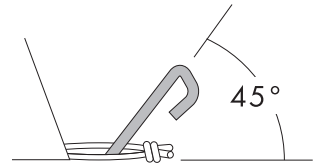


Peg down at 45° angle

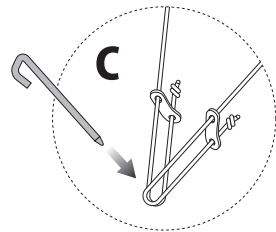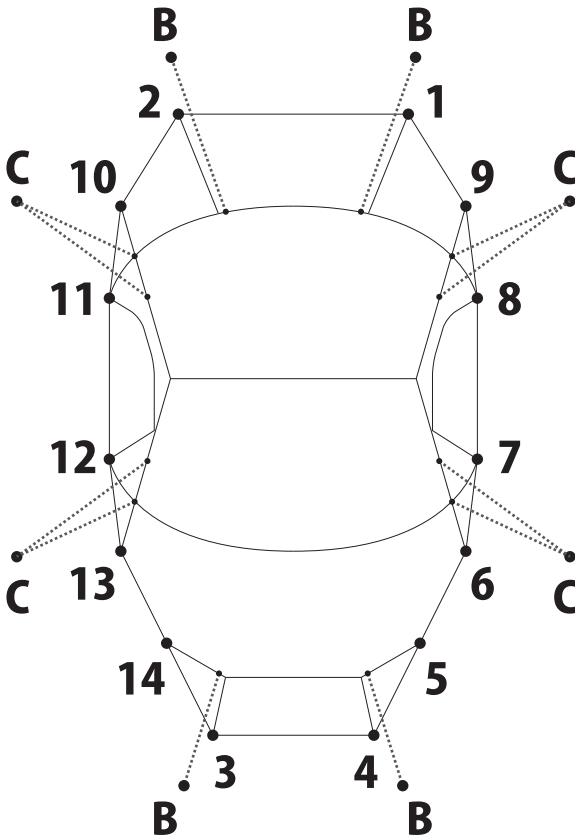

For "C", peg down 2 ropes with 1 peg.

Adjust the tension with the stoppers.

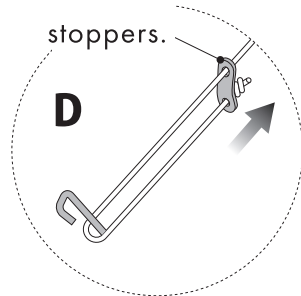

6 ATTACH THE INNER TENT

A : Attach the 2 hooks to the rings located at the upper rear side.


B : Attach the 2 hooks to the rings located at the bottom rear corners.

C : Attach the 3 hooks to the rings located at the upper middle area.

D : Attach the 2 hooks to the rings located at the bottom middle corners, and adjust the tension with the adjuster.

E : Attach the 3 hooks to the rings located at the upper front area.

F : Attach the 2 hooks to the rings located at the bottom front corners, and adjust the tension with the adjuster.

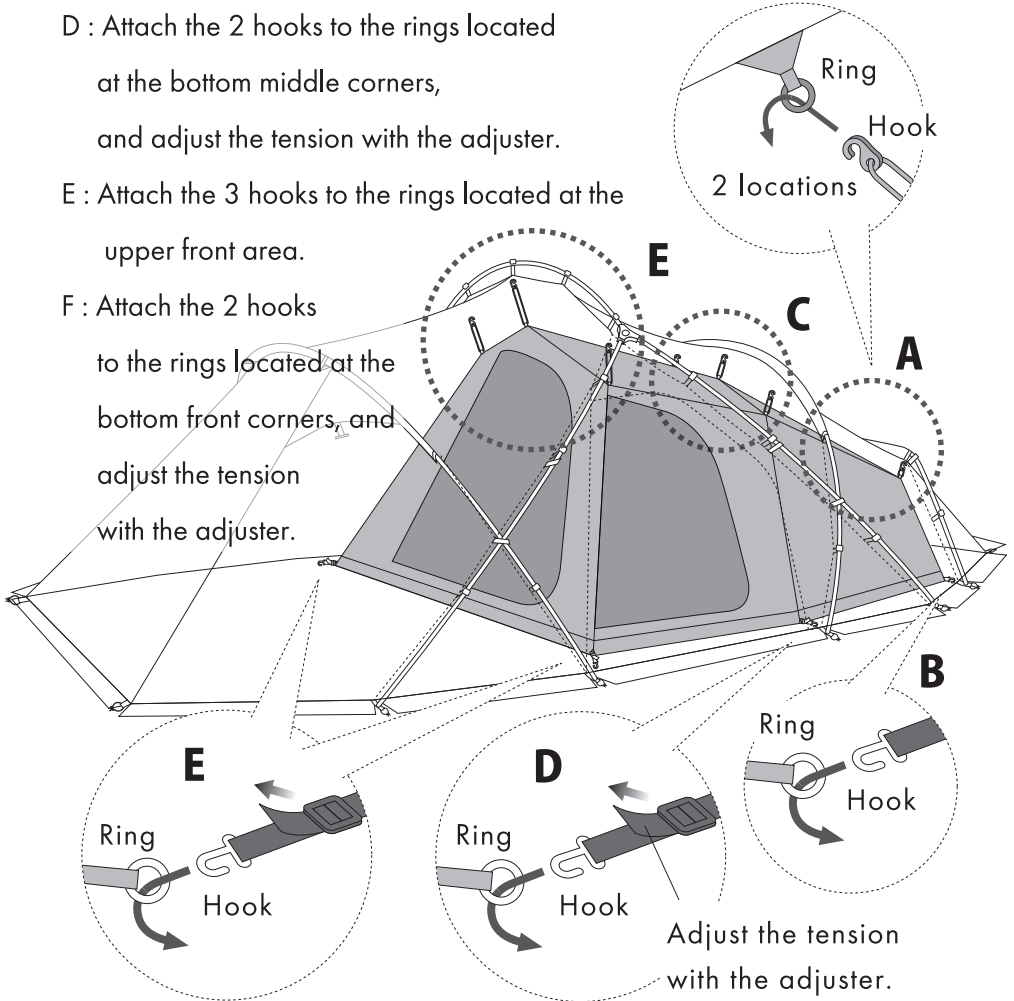

ZANE ARTS, Inc.

7190-2 Shimauchi, Matsumoto, Nagano 390-0851

global@zanearts.com