



WARING COMMERCIAL

208 Volt Panini Supremo®
Large Italian-Style Panini Grill
with Timer
WPG250TB

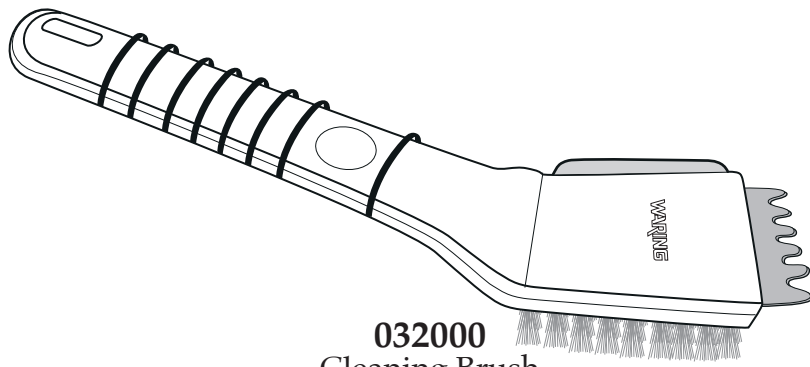

032000
Cleaning Brush

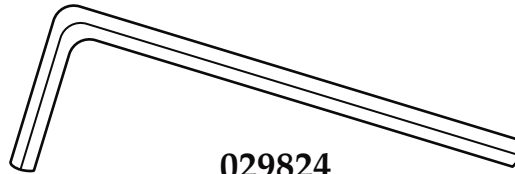

029824
5/32" Short Arm Hex Key


Unit Information

1800 Watts - 208 volt - 60Hz

Timer is a 20 minute reprogrammable
and requires 2 AAA batteries

Grill takes about 10 minutes to warm up.


14.5" x 11" Cooking Surface

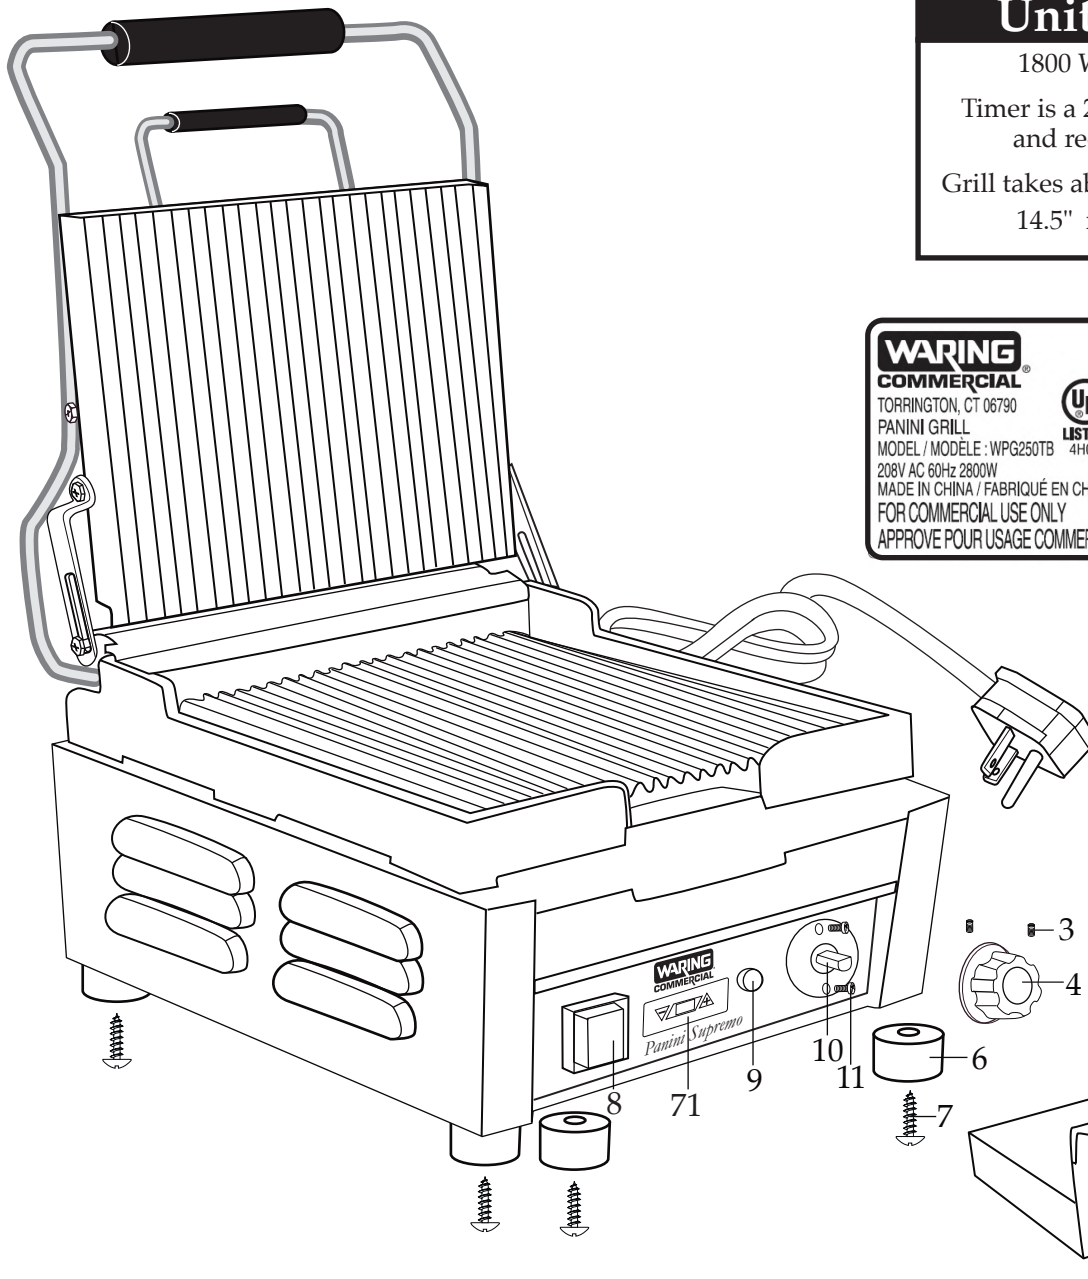

← Date Code Location
YY|MM|DD
year year | month month | day day

WARING COMMERCIAL®



WPG250TB Unit Components

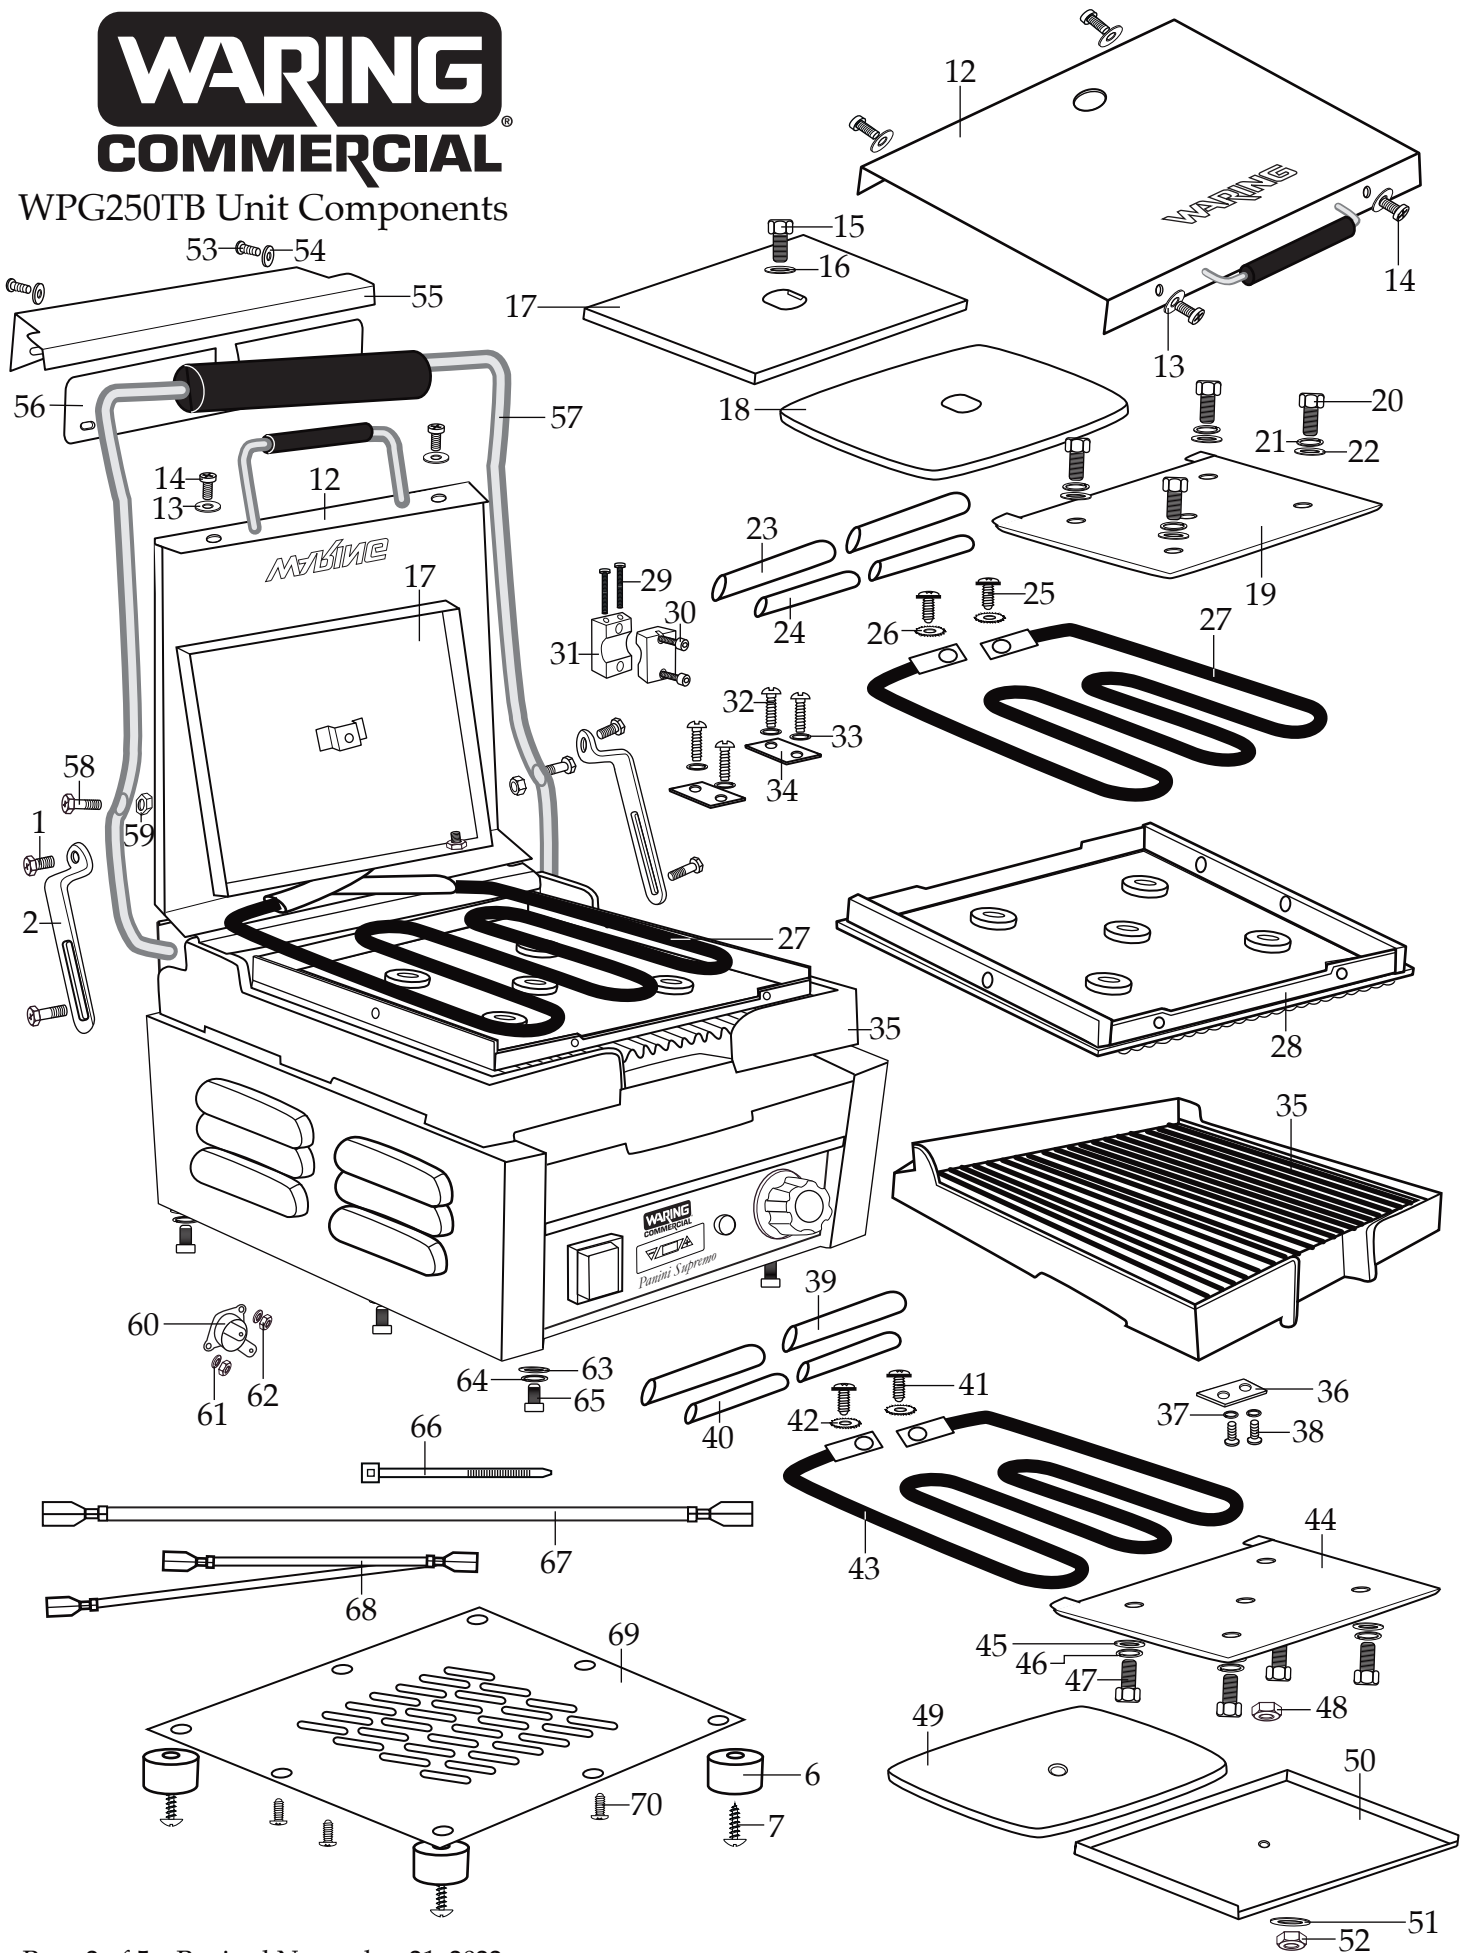


Illustration#	Part#	Description
1	028625	Pivot Bracket Screw Set (1 large & 1 small 2 sets required)
2	028624	Pivot Bracket (2 required)
3	028627	Set Screw (2 required)
4	028626	Control Knob
5	029503	Drip Tray
6	028622	Foot (4 required)
7	028623	Foot Screw (4 required)
8	029478	On-Off Switch
9	030018	Indicator Light
10	030013	Thermostat
11	029943	Thermostat Screw (2 required)
12	029945	Cover
13	029946	Washer (4 required)
14	029947	Screw (4 required)
15	029950	Hex Head Bolt
16	029951	Washer
17	029953	Top Insulation Plate
18	029949	Top Insulation
19	029955	Top Element Plate
20	029962	Hex Head Bolt (4 required)
21	029963	Spring Washer (4 required)
22	029964	Washer (4 required)
23	029956	Fiber Sleeve (4 required)
24	029957	Plastic Sleeve (4 required)
25	029958	Screw (2 required)
26	029959	Washer (2 required)
27	030020	Top Element
28	029967	Top Ribbed Grill Plate
29	036549 030054	Screw (2 required <i>on units after 11/10/2017</i>) Screw

Illustration#	Part#	Description
30	036550 030055	Tension Bolts (2 required <i>on units after 11/10/2017</i>) Tension Screw
31	036548 030056	2 Piece Tension Bracket (<i>on units after 11/10/2017</i>) Tension Bracket
32	029992	Screw (4 required)
33	029993	Spring Washer (4 required)
34	029995	Large Handle Bracket (2 required)
35	036554 029971	Bottom Ribbed Grill Plate (<i>on units after 11/10/2017</i>) Bottom Ribbed Grill Plate
36	029973	Thermostat Bracket
37	029974	Washer (2 required)
38	029975	Screw (2 required)
39	029956	Fiber Sleeve (2 required)
40	029957	Plastic Sleeve (2 required)
41	029958	Screw (2 required)
42	029959	Washer (2 required)
43	030021	Bottom Element
44	029979	Bottom Element Plate
45	029964	Washer (4 required)
46	029963	Spring Washer (4 required)
47	029962	Hex Head Bolt (4 required)
48	029980	Nut
49	029982	Bottom Insulation
50	029984	Bottom Insulation Plate
51	029951	Washer
52	029980	Nut
53	029985	Screw (2 required)
54	029986	Washer (2 required)
55	036551 030007	Rear Cover with Tension Cover (<i>on units after 11/10/2017</i>) Rear Cover with Tension Cover
56	036552 030008	Rear Cover Plate with Tension Hole (<i>on units after 11/10/2017</i>) Rear Cover Plate with Tension Hole

Illustration#	Part#	Description
57	036547 030009	Large Handle <i>(on units after 11/10/2017)</i> Large Handle
58	029990	Hex Head Screw (2 required)
59	029991	Nut (2 required)
60	030014	Thermal Cut-off
61	029997	Washer (2 required)
62	029998	Nut (2 required)
63	029999	Washer (4 required)
64	030000	Spring Washer (4 required)
65	030001	Bolt (4 required)
66	013731	Wire Tie (7 required)
67	030003	17" Red Lead
68	030004	Joined Red & White Lead
69	030002	Bottom Housing Plate
70	030006	Screw (4 required)
71	034202	Timer ONLY (2AAA batteries needed)

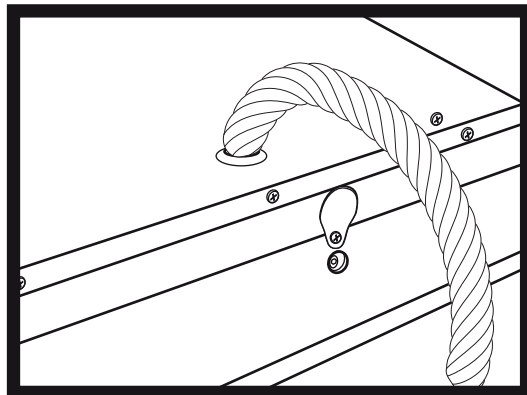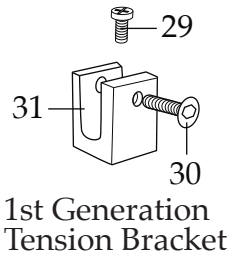

(on units after 11/10/2017)

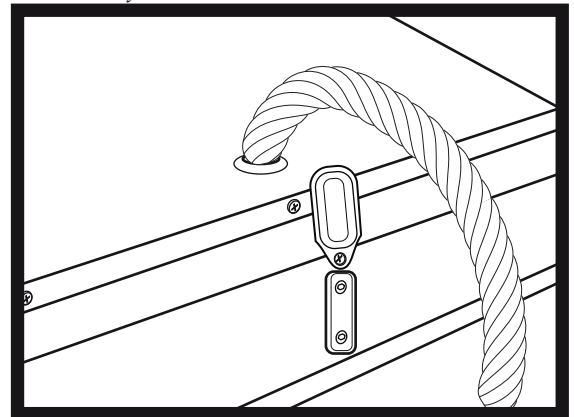

033682 - Cord 208 volt NEMA 6-20

*** Certified replacement of the cord set can only be performed by an Authorized Service Center or the Waring Factory Service Center.**