

**SANGSTRE SMART GLASSES
INSTRUCTION MANUAL**



Table of contents

01 / Packing List

02 / Product Composition

03 / Frame Basic Parameters

04 / Charging&storage Case Parameters

05 / Power ON / OFF

06 / Bluetooth Pairing Connection

07 / power prompts

08 / Charging operation

10 / DIY Accessories Assembling

11 / Button Controls


12 / Charging & Storage Case

13 / Reset

14 / Precautions

Packing List


- 1 Glasses * 1
- 2 Glasses case * 1
- 3 Eyeglass cloth * 1
- 4 Instructions * 1
- 5 Safety Book * 1
- 6 Warranty card * 1
- 7 screwdriver* 1 bag
- 8 Charge Cable * 1
- 9 Packing box* 1

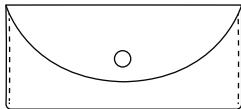

Product Composition

Carefully unpack the box and check if the following parts are included. If any part is damaged or missing, do not use it, contact Sangstre retailer or customer service immediately.

- 1) Audio Temples
- 2) Charging & Storage Case
- 3) Cleaning Cloth
- 4) Silicone Nose Pads
- 5) Polarized Paper

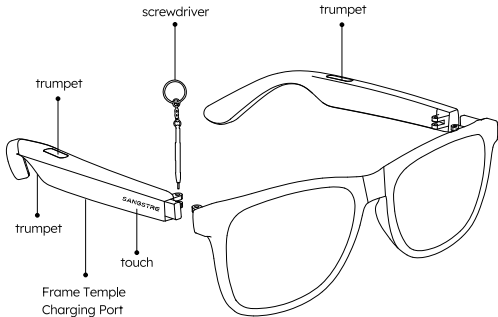

Frame Basic Parameters

Bluetooth Version: V5.1 multi-point connection

Bluetooth Distance: 10 meters

Waterproof Grade: IPX4

Talk Time: 4 hours

Working Frequency: 150Hz-8KHz

Net Weight: 43g

Battery Type: Lithium Polymer

Frames Battery Capacity: 150mAh


Charging Time: 40-50min

Volume Sync: Support

Audio Format: Support AAC

Glasses Size (Europe): Screw Spacing 125mm, Nose Pad Height 8mm

Component Materials: TR90, Aluminum Titanium Alloy, Silica Gel, etc

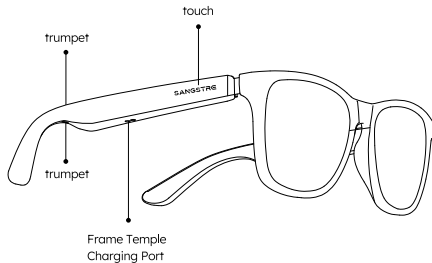

Charging&storage Case Parameters

Material: Two-layer cowhide

Charging case Battery capacity: 1350mAh

Charging case charging method: Tapy-C

Charging case charging time: 2.5 hours

Integrated standby: 15 days


Single play: 5.5 hours

Single call: 4 hours


Inner Charging case size: 197mm×85mm×75mm

Outer Charging case size: 210mm×100mm×90mm


Glasses Charging method: Put in Charging case

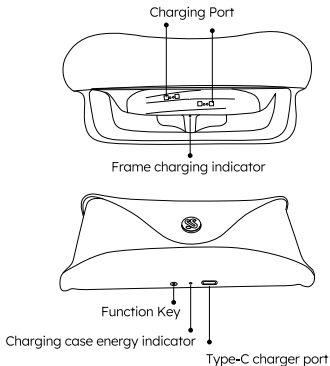

Power ON / OFF

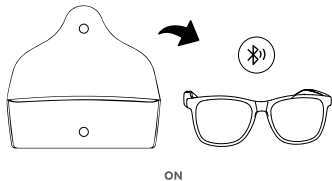


- Hadyn II Frames will automatically power on when you put them out of the charging box.
- when the glasses was put in the charging box or if the Bluetooth is unconnected within ten minutes, it will be turned off automatically.

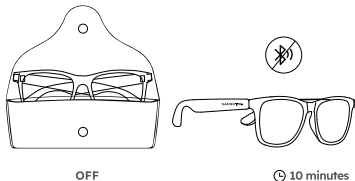

NOTE:

If they do not turn on or power off automatically, make sure the glasses were fully charged, put them in the charging case, and notice voice prompts again.

Bluetooth Pairing Connection

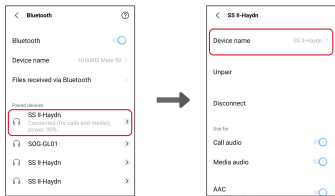

Connection: Sangster Frames will automatically enter pairing mode when powering on, then turn the Bluetooth button ON for your phone and search "SS II -Haydn" to pair, and the voice will notice "connected".

Disconnect: When the device is disconnected with Bluetooth, the voice is noted as "disconnected", If no device is connected for more than 10 minutes, the voice notice "power off"

- * After Bluetooth is connected to the phone, the Bluetooth device volume synchronizes with the phone.

- * Each time you power on your Sangstre Frames, they will automatically connect to your last successfully connected device if available within the Bluetooth range.

Multipoint connection:

1 Pairing with a New Device:

After the glasses are taken out of the glasses case and turned on, they will enter the pairing state automatically, until you hear the voice prompt.


2 Reset the Bluetooth Connection:

Turning off the Bluetooth of the device being paired Or put the glasses in the glasses case and press the glasses case function key for 3 seconds to re-establish the connection with the new device.

- * If they fail to connect the historical pairing device, They can be paired with the new device.

Note: Hadyn II audio glasses be paired only two device can be connected at one time, but it cannot support 2 devices working at the same time, you can switch 2 devices at any time. and the pairing records of 5 devices can be kept and they will delete the least used devices recently when paired with new devices.

power prompts

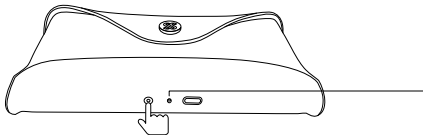

- Battery > 80%
- Battery: 20% - 80%
- Battery < 20%

Sufficient power: Long press the bottom of charging box touch button for 2-3 seconds, the LED indicator steady green. (Battery > 80%)

Power Available: Long press the bottom of charging box touch button for 2-3 seconds, the LED indicator steady blue. (Battery: 20% - 80%)

Low Battery: Long press the bottom of charging box touch button for 2-3

seconds, the LED indicator steady red. (Battery < 20%)

When you connect both audio temples to the charging port, the LED indicator in the charging box will turn red.

Charging operation


Please judge the charging box power by short-pressing the function key shows the color of the indicator. (The function key is located charging case bottom)

❶ Charging for frame separately

Step1. Align the charging pins in the magnetic charging glasses case with the charging port on the audio temples.
Step2. When you connect both audio temples to the charging port, the LED indicator in the charging box will turn red.
Charging: The red LED in the charge box keeps lighting.

❷ Charging for charging box separately

Step: Connect the end end of the charging cable to the charging glasses box USB charger.
Charging: The red LED keeps lighting.
Fully charged: The blue LED lighting up.

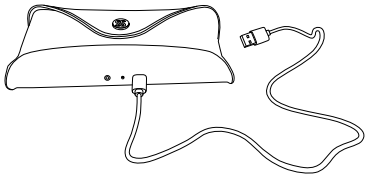

- 5 The frame is put in a Charging case and charged together

Step 1. Align the charging pins in the magnetic charging glasses case with the charging port on the audio temples.

Step 2. When you connect both audio temples to the charging port, the LED indicator in the charging box will turn red.


Step 3. Connect the end end of the charging cable to the charging glasses box USB charger.

Charging: The red LED keeps lighting.

Fully charged: The blue LED lighting up.

Note:


- * If correctly connected, the LED indicator located in the charging case and on the bottom of the charging function key will turn red.
- * Use the provided magnetic charging Case to prevent any damage.
- * Fully charge your Sangstre Frames before the first use.
- * Avoid wearing your Sangstre Frames while charging

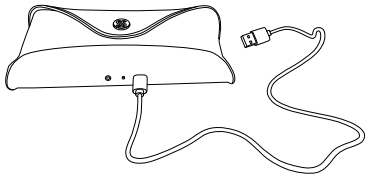

DIY Accessories Assembling





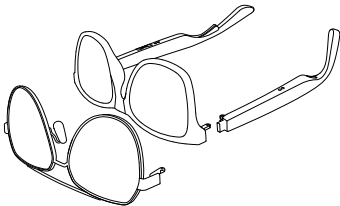




The Metal Frame/sunglass Frame replaceable solution
The Front frame can be replaced with our sunglasses front frame, our daily glasses front frame, our prescription glasses front frame, etc.



- As shown in the photo above, there are 2 screws. Just loosen the screws to replace the Front Frame when it needs to be replaced, then install another front frame with a screwdriver into the position on the temple hinge so they are secure. (attached).
- If you want to change the other style frame (sold separately), release the screws on the hinges and pull the audio temples slightly to disassemble.
- If the prescription lens needs to be replaced after you have completed your order, it is recommended to find the local optical shop for help.

Button Controls

	Answer/End a call	Continuous touch twice	(logo area)
	Play/Pause Music	Continuous touch twice	(Right logo area)
	Voice Assistant	Continuous touch twice	(Left logo area)
	The next track	Slide backward once	(Left logo area)
	Previous track	Slide forward once	(Left logo area)
	Reduce volume	Slide backward	(Right logo area)
	Increase volume	Slide forward	(Right logo area)

- Please make sure to touch the functions that are located in the logo area on the audio temples so that the touch controls are triggered.
- After connecting, adjust the volume by using the volume controls on your mobile device.

Charging & Storage Case


Storage& Charge

To ensure Hadyn II Frame can be charged by connecting with the charging port in a case successfully, please follow the below steps to complete the charging operation and storage operation of the frame.

Step1 Check the sequence of the glass's temples to be folded. Fold the left temple and then the right temple in sequence.


Step2 The frame is placed in the charging box, the indicator light in the charging box lights up red, and then the shutdown prompt sound will sound.

Step3 If the indicator light fails to light up, try to adjust the position of the glasses and check the reason why the charging cannot be successful.

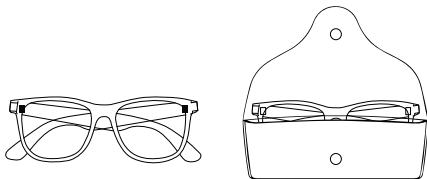

- * Make sure to fully charge the built-in battery before storing them for a long period of time.
- * Check if the frame is twisted and deformed and if the distance among the screws of the frame temple' pile head is changed.
- * Check whether the glasses case is squeezed and deformed so that the position of the glasses in the glasses case deviates.

Reset

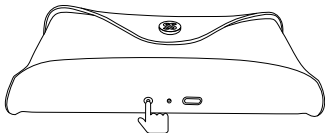

- Reset your Hadyn II Frames if you encounter any connection or function problems.
- Press and hold the function key area on the bottom of the charging box for 8 seconds until you hear the music prompt.
- Reset the Bluetooth Connection
Turn off the Bluetooth of the device being paired or put the glasses in the glasses case and Press and hold the function key

area on on the bottom of the charging box for 3 seconds until the indicator light turns red and blue alternately to enter pairing mode to re-establish the connection with the new device directly.

- * If they fail to connect the historical pairing device, they can be paired with the new device.

Precautions

1. Don't over-press and bend;
2. Don't put in 60 °C or above to avoid battery damage ;
3. Keep Frames in a dry environment. If they come into contact with liquid, use the "cool" setting on a hairdryer to dry them;
4. Do not immerse frames in water or expose them to seawater, salt water, chlorinated water, or other liquids (such as beverages);
5. Do not expose frames to pressurized water, high-velocity water, soapy water, or extremely humid conditions (such as a steam room);
6. Do not spill any food, oil, lotion, or other abrasive substances on Frames;
7. Don't use sharp knives to pierce or cut the glasses component to avoid damaging the circuit;
8. The shell of the frame temples can't be disassembled, in case of maintenance, you need to consult professionals first;
9. Please use a 5V adapter to charge, otherwise, Bluetooth glasses will be damaged;
10. The adjusting screw should not be tightened to prevent the screw from breaking due to excessive torque;
11. Users can choose the appropriate volume according to the use scene, such as outdoor or indoor, to achieve the best consideration of external sound and keep better privacy;
12. Clean frames with a soft, dry cloth. Do not use water, chemicals, or abrasive materials to clean the frames. To clean the lenses, use an alcohol-free lens cleaner and a soft cloth.





SANGSTRE

www.sangstre.com