—— Instruction Manual ——

BA980F/RS/RT



Height Adjustment System

Customer Service (402) 474 3353

PARTS LIST							
Item	Qty	Description	Item	Qty	Description		
A	1	Height Adjuster Frame	Е	8	3/8" Hex Nut		
В	1	Height Adjuster Hand Crank	F	16	3/8" Flat Washer		
С	1	Height Adjust Label	G	8	3/8" Lock Washer		
D	8	3/8" X 3" Hex Bolt					

Warning!!!


Wall structure must safely support additional weight of height adjuster. 980F = 90%, 980RS = 140%, 980RT = 160%

- Inspect all contents prior to installation. Report any missing parts to dealer immediately.
- Read all instructions before proceeding.
- 1. Mount *Height Adjuster Frame* (A) to wall structure with 3/8" X 3" Hex Bolts (D), 3/8" Hex Nuts (E), 3/8" Flat Washer (F) and 3/8" Lock Washer (G). See Figure A.
- 2. Level *Height Adjuster Frame* (A) to playing surface/wall structure. Tighten all hardware.

Note:

Never tighten the hardware in the lead screw nut block. See Figure B on page 2.

- 3. Mount backboard assembly to the *Height Adjuster Frame* (A) using mounting brackets shown. Hardware included in backboard packaging or existing in previously installed product. See Figure A.
- 4. Mount rim to backboard. Hardware included in rim packaging or existing in previously installed product.
- 5. Level backboard and rim to playing surface. Tighten all hardware.

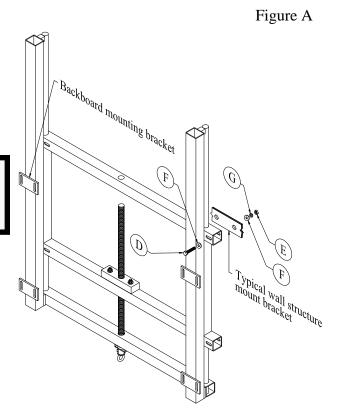

D	3/8" X 3" Hex Bolt	F	3/8" Flat Washer
Е	3/8" Hex Nut	G	3/8" Lock Washer

Date: 04/01/2015 Rev: 4 B.A. N.J.C. File: 980inst.pub; 980assm.dwg Ref#: 950259

- 6. Using the *Height Adjuster Hand Crank* (B) raise rim to the official 10' height, to the top of rim. Cut apart *Height Adjuster Label* (C) at the perforations. Attach "Rim Height" Label to the *Height Adjuster Frame* (A) 2" above horizontal tube as shown. Align "10.0 FEET" label to "Rim Height" label and attach to frame as shown. Adjust rim down to 9 1/2 feet, align "9.5 FEET" label to frame. Repeat this process for the remaining height labels. See Figure B.
- 7. Grease the screw assembly (through grease zerk) and slide assembly (by wiping a light film on the grease point) annually or as needed to insure smooth adjustment.

A	Height Adjuster Frame
В	Height Adjuster Hand Crank
С	Height Adjuster Label

Figure B

