
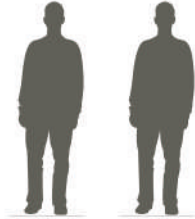


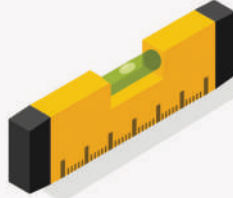

# A PLACE IN THE GARDEN

## Water Features Install Guide - Leaf Ball Water Feature

### What do you need for installation

Two People	
Spirit Level	
2x old thick Blankets or towels.	
Scissors	

### What comes with the Water Feature

Leaf Ball Base & Leaf Ball top Section  
Oase Pump  
Blue Pipe  
Small piece of Black Foam

## **Install Process**

Please follow the steps below to successfully install your water feature

- 1) Open the Oase pump box and assemble it. To construct the pump, please place the rubber gasket ring (Picture A) into the plastic threaded adapter (Picture B) and then screw this into the top of the pump until tight (Picture C)
- 2) Please remove the Filter (Picture D) and ensure the adjustable inlet valve (Picture E) is tightened to the pump. Please then test the adjustable blue water flow valve to ensure it opens and closes. Please reattach the filter.
- 3) With two people, place the blankets on the floor and tip the base carefully onto its side. Put the pump into the base and feed the electrical flex down and into the service tube (Picture F). Once the majority of the cable has come out of the other side, ensure the cable is located in the 'mouse hole', on the side of the water feature, to ensure the cable cannot get damaged. Please then lay the base back into its normal position. (Picture G)
- 4) With your spirit level, please make sure the fountain base is level. This is a handmade piece, so it may vary ever so slightly.
- 5) With two people, carefully lift the ball into the fountain base and place it onto the raised ring section in the middle of the round base. With the provided nuts and bolts, please ensure the raised ring is level by adjusting bolts in the four corners of the base frame.
- 6) Please connect the pump to the pipe (Picture H). To secure the pipework, please use the provided Jubilee clip (Picture I) and fasten it over where the pipe and valve meet on the correct section of the spigot. If the blue pipe is too long please cut it down with scissors to the correct size.
- 7) When the pump is installed, place the pump onto the black foam (Picture J) provided. Please ensure that there are no twists in the water hose, as this can effect the water flow and noise of the pump (Picture K)
- 8) Please turn all the power off and wire the pump cable into an outdoor electric box or circuit. **WE STRONGLY RECOMMEND THIS TO BE DONE BY A QUALIFIED ELECTRICIAN**
- 9) Once the pump has been connected to the electricity safely, start filling up the fountain trough with a garden hose. We recommend filling up to about 5cm below the top of the trough.
- 10) Once filled, please turn on the electricity and the water feature will begin working (Picture

## **Adjusting the Water Flow**

Every Oase pump has a blue dial located on the pump itself.  
This can be turned clockwise to increase or anti clockwise to reduce the flow.

## **Pump Warranty**

All Oase pumps arrive with a three year guarantee.

**If you register the pump online via the Oase website, you can get an additional free two year warranty.**

This warranty is valid from the date of purchase, not from the delivery date.

If you have an issue with the pump please let us know.

## **Winter Tips - Emptying the feature**

Our 2022 Versions of Water Features all come with a built in drainage system, to safely empty the water from the fountain. To do this, please unscrew the plate on the side of your water feature. Then connect a hose with a compatible Hozelock adapter to the tap and place the hose where you would like the water to be drained too. Finally, twist the nozzle on the tap to release the water.

**We recommend emptying the water features for the Winter months or in freezing temperatures.**

A		B	
C		D	
E		F	
G		H	
I		J	
K		L	

## **Sound & Tweaks / Pump Noise**

We have supplied the quietest available pumps on the market, however depending on various circumstances you can sometimes hear a pump noise. This can occur when the pipework get twisted, when the pipe and pump are touching some metal or if the pump is blocked or clogged up with fallen debris. Please empty the filter and check the access of the water hole is not blocked up.

**Please ensure the pump is sitting on the black foam matting provided.**

You can change the sound of the water by adjusting the flow on the pump. The water noise can also change depending on how full the water trough is. If you would like to soften the sound, you can place large pebbles into the trough to dull the sound or you can use floating aquatic foam that sits on the water which helps reduce the water sound.

## **Tips, Tricks & Maintenance**

**Please DO NOT clean the water with anything Caustic/Acidic e.g Chlorine based products, as it strips away the protective Zinc coating.**

**A Place In The Garden will not accept responsibility when such products have been used.**

**This will be down to the discretion of A Place In The Garden.**

Please use a Water Purifier such as Milton or an Eco friendly pond cleaner. This will safely prevent the water from turning green without damaging your fountain.

We Suggest using Water Feature Klear - [www.envii.co.uk/shop/water-feature- klear](http://www.envii.co.uk/shop/water-feature- klear)