


FIRST TEAM SPORTS, INC.
WARLORD™
DELUXE LACROSSE GOAL
ASSEMBLY INSTRUCTIONS



Congratulations on the purchase of this regulation deluxe lacrosse goal manufactured by First Team Sports, Inc. Please read and follow all instructions on the assembly and use of this product. If you have comments or questions, please call First Team Sports toll free, 1-888-884-6677 during normal working hours.

STEP 1:

Refer to (Photo 1) to confirm all components of your goal have been received. Basic parts should include: 1 each – Header bar; 2 each – Header bar net attachment rods; 2 each – vertical post; 2 each – Horizontal ground runner; 1 Each – Gusset plate; 1 each – Hardware package (2 carriage bolts, flat washers, lock washers, hex nuts); 50 each – Zip Ties; 2 each – Chain links, 1 each – 9/16” handle wrench.

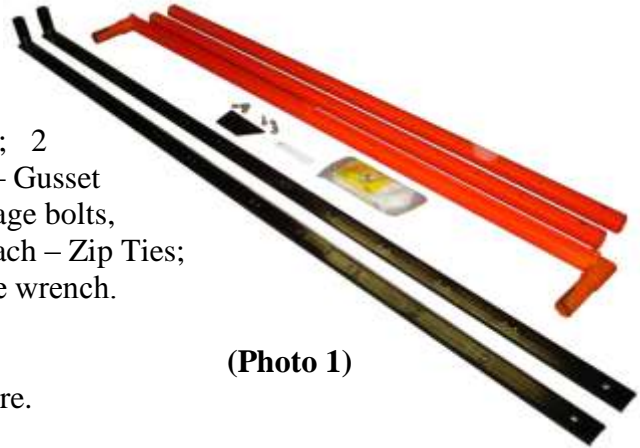

(Photo 1)

Net is shipped separately from goal structure.


STEP 2:

Refer to (Attached Drawing & Photo 2). Attach gusset plate to back end of channel iron ground runners as indicated. Note: Carriage bolts are inserted from bottom side of ground runners. Use flat washer, lock washer and hex nut on top side. Do not tighten nuts at this time.



(Photo 2)

STEP 3:

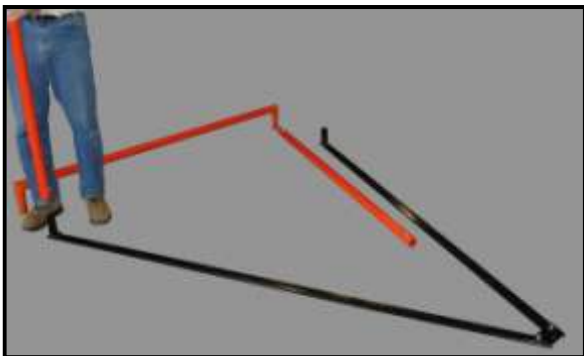

(Photo 3)

Spread ground runner assembly out on ground as indicated in (Photo 3). Next loosen (about 3 rotations) but do not remove the bolts at the top and bottom of each post. Note the “T” and “B” sticker at each end of the post as a reference to the top and bottom end of the post.

Insert each post over the ground runner stubs with the bolt in line with the slot on the back of each stub. Use the provided wrench and tighten the bottom bolts on each post. See (Photo 4). Use two persons to hold the post in the vertical position until the header bar is in place.



(Photo 4)

STEP 4:



(Photo 5)

Position each end of the header bar in to the tops of each post. Refer to (Photo 5). Tighten the bolts at the top end of each post as shown in (Photo 6).



(Photo 6)

Now go back and tighten nuts that secure the gusset plate.

STEP 5:

Insert the Zip Ties into the back of the post as shown in (Photo 7). Hint: Bend the end of each Zip Tie into the shape of a “J” to help push it through the double set of holes on the back of the post. Then pull the Zip Tie the rest of the way through. Do this for each set of holes on the back of each post.



(Photo 7)

STEP 6:



(Photo 8)

Lay the goal over on its front with the ground runners sticking up in the air. As shown in (Photo 8), insert each Zip Tie into each set of holes on the ground runners. Each Zip Tie should be positioned so the net can be attached on the top side of the ground runner. After each Zip tie is in place, sit the goal back up onto the ground runners.

STEP 7:

Attach net. Using a single Zip Tie, attach the tail end of the net to the top side of the ground runner gusset plate as shown in (Photo 9). Attach the provided chain links to each forward lower corner of the net. Then attach each chain link to its respective ring at the forward end of each ground runner as indicated in (Photo 10). Attach each top corner of the net to the outside end of the quick detach net rods on the back side of the header bar. See (Photo 11). With the net now attached at all corner locations, finish lacing the remaining Zip Ties as previously installed in Steps 5 & 6.

Attach the remaining top of net to quick detach rods using several additional Zip Ties evenly spaced. These Zip Ties need to be tight enough not to slide on the quick detach bar. **Goal is now ready for play.**



(Photo 10)



(Photo 11)

SUPPLEMENTAL INSTRUCTIONS FOR FOLDING YOUR LACROSSE GOAL

YOUR GOAL HAS BEEN DESIGNED TO QUICKLY FOLD AND STORE WITHOUT THE NEED FOR REMOVING THE NET FROM THE GOAL FRAME

First, disconnect the lower front of the net from the chain links and loosen the clamp bolts at the bottom end of each post. Next remove the quick detach net attachment rod from the back side of the header tube by pushing each rod to the center of the header tube. This action will release the outer end of each rod and free the rod from the header tube with the top of the net still attached to each rod. Then remove the header tube from the post by just loosening the clamp bolts at the top end of the post and lifting the header tube off the goal. Pull up on each post and lay each post back onto its respective ground runner. Loosen one of the bolts on the ground runner gusset plate and fold the ground runners together. Lay the header tube on top of the net and ground runners and strap the entire bundle together to provide for easy transport and storage.



Reverse the procedure to set the goal back up for play.