

**You must read through the following care and use instructions before using your new Heavy Duty Face Shield.**

**TIP:** We have also created a helpful how-to assembly video. You can find it at [www.nocry.com/instructions](http://www.nocry.com/instructions) or simply by scanning the QR code on the side with your phone camera.



▶ SCAN ME

## 1 Meet your new NoCry Heavy Duty Face Shield




Comes with a toric PC visor, adjustable headgear with a crown strap, and four sweatbands. Metal free.

## 2 Assemble your visor



Align the slots on top of the visor with the headgear's locking system. Position the visor behind the plastic nibs in front. Carefully push the rest of the slots into place. Turn the knobs to secure it together.

## 3 Get the right fit

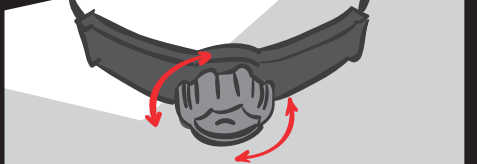


To adjust the fit, hold the shield to your face; the headband should sit on your forehead. To tighten, turn the ratchet knob at the back clockwise. To loosen, turn it counterclockwise. Do not over-tighten.

## 4 Secure the pin lock strap



To adjust the strap height, unpin the lock, align it with one of the five holes and lock it in place.

## 5 How to use the knobs

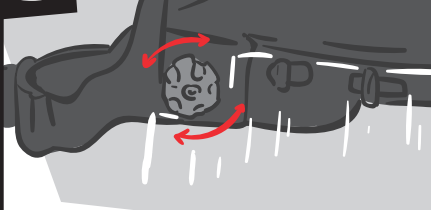

To adjust your visor, turn the knobs on either side of the face shield. Clockwise loosens it; counterclockwise tightens it. Check if the knobs are tightly enough so the visor could not move from its position.

## 6 How to change the angle of the visor




To adjust the angle, loosen the side knobs of the headgear and move the visor to your desired position. Remember to tighten the knobs to lock the visor in place. Excessive loosening of the knobs may cause them to detach completely.

## 7 Cleaning your face shield



Use a dry soft cloth to clean the visor. **DO NOT** use soap, water or sanitizer: they can damage the anti-fog coating. Handwash sweatbands with mild detergent. Rise the headgear in warm soapy water and dry with a soft cloth, do not use abrasive materials.

## 8 How to change the sweatband

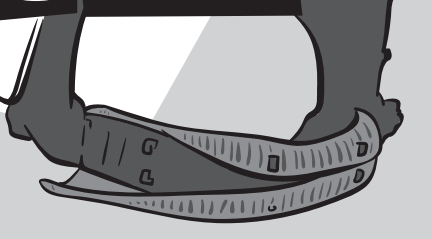

Remove the sweatband by detaching it from the hooks. To replace, simply align the new band and hook in place.

## 9 Contact us



Poor fit?

Need help?

Any questions?

Drop us a line at  
[wecare@nocry.com](mailto:wecare@nocry.com)  
We'll help you out!



[www.nocry.com/mywarranty](http://www.nocry.com/mywarranty)

**YOU HAVE 30 DAYS TO TRY THIS OUT. WOULD YOU LIKE 60 INSTEAD?**

Scan this QR code with your camera app and get premium customer support and an extended warranty on any NoCry product. (If you have any issues, we'll replace it or refund you over the next 60 days.)



## BECAUSE KEEPING YOU SAFE IS OUR TOP PRIORITY...

We care a lot about your safety and satisfaction; that's why we've put together a few precautions for you to follow while using your NoCry Heavy Duty Face Shield.

- ✓ The NoCry Heavy Duty Face Shield is designed to protect your face, eyes, and the crown of your head against injuries from impact (ANSI Z78+) and liquid/chemical splashes.
- ✓ The visor is clear; it's treated with anti-fog and scratch-resistant coatings on both sides and offers UV385 protection. However, this face shield **DOES NOT** provide unlimited protection and it must be worn the whole time you're exposed to hazards.
- ✓ You can wear beanies, disposable hair caps and other types of hats with this face shield, as long as it does not have a brim.
- ✓ The face shield is **NOT** fire resistant. Leave the work area if dizziness or irritation occurs, or if your face shield shows any signs of damage, replace it. Inspect for damage regularly. To replace the visor only, you should ensure the compatibility of marking and that the right visor is fitted.
- ✓ When not in use, store the face shield in a clean and dry poly-bag or case for visor protection. Avoid storing it in high temperatures or humidity environments. **DO NOT** leave the face shield exposed to direct sunlight.

## SAFETY WARNINGS



Read warnings before use; failure to follow these instructions and warnings may result in serious personal injury, including blindness or death.

- ✓ Examine this face shield frequently and replace it immediately if there is any sign of damage.
- ✓ Exposure to or contact with chemical vapors or liquids may cause surface cracks or other damage.
- ✓ Do not make any modifications to this product. Do not use it if the product is damaged or altered.
- ✓ Do not use this product for any athletic games, paintball, or other recreational activities.
- ✓ Do not use this product for protection against laser light.
- ✓ Please refer to ANSI Z87.1 to your supervisor, or a safety specialist to ensure that you are wearing proper protection. Protective devices do not provide unlimited protection. Some operations may require machine guards or other safety equipment.

**LIMITED LIFETIME WARRANTY** - If you're not happy with your NoCry product, please contact us at [wecare@nocry.com](mailto:wecare@nocry.com). Each NoCry non-electric product is warranted to be free of defects in material and workmanship for as long as the consumer owns the product.

Warranty does not cover normal wear and tear, environmental factors, accidental damage, or misuse. At NoCry's discretion, a defective product will be repaired or replaced. This warranty gives you specific legal rights but may be superseded by any other rights or warranties in effect, which may vary from state to state. More info at <https://nocry.com/warranty>.

If the face shield you received is not a great fit, or you have any questions or concerns, feel free to contact our customer support at [wecare@nocry.com](mailto:wecare@nocry.com). We're always here to help.