

T40 Parts Diagram

March 2024

RANTIZO[®]

Confidential: Do Not Distribute



Introduction

1. Front Shell

2. Front Frame

3. Middle Frame

4. Load Sensor Bracket

5. Battery Fixing Piece

6. Rear Frame

7. Landing Gear

8. Spray Tank

9. M1 Arm

10. M3 Arm



11. Spray Rod

12. Cable Distribution Board

13. Impeller Pump

14. Flow Meter

15. Upper Propeller

16. Lower Propeller

17. Cables



Front Shell

No.	Material Number	Material Name
1	YC.JG.MY000776	Spraying Adaptive Cable Sleeve
2	YC.JG.ZS002432	Front Lower Shell 2
3	FL.SC.BB000001	Acetate Fabric
4	YC.JG.ZS002283	Front Lower Shell
5	YC.JG.ZS002282	Front Upper Shell
6	YC.WJ.L00870	Screw M30-HC060060-55-85
7	YC.JG.ZS002422	Outer Shell Buckle
8	YC.ST.LL000235	T30-HC00800080-057030-5103-N
9	YC.JG.ZS000998	Rear Shell Small Buckle Base
10	YC.ST.LL000236	T20-PC00400040-040010-5103-N



Front Frame


No.	Material Number	Material Name
1	YC.ST.LL000226	M30-HC01450080-100020-5103-Y
2	BC.AG.SS000576	Front Frame Aluminum Tube
3	YC.JG.MQ001382	Front Frame Insulation Sheet
4		N/A
5	YC.WJ.L00871	Screw M30-HC100100-55-85
6	YC.WJ.L01549	M25-HC060060-45-85
7	YC.JG.MY000719	Dual Vision Sensors Sealing Ring
8	YC.JG.MY000380	Damping Pad
9	YC.ST.LL000226	M30-HC01450080-100020-5103-Y
10	YC.JG.MQ001384	FPV Bracket Decorative Piece (Right)
11	YC.JG.MQ001383	FPV Bracket Decorative Piece (Left)
12	YC.JG.QX002208	Front Shell Bracket (Right)
13	YC.ST.LL000235	T30-HC00800080-057030-5103-N
14	YC.JG.ZS002455	Propulsion Cable Clip
15	YC.WJ.L00870	Screw M30-HC060060-55-85
16	YC.WJ.L00870	Screw M30-HC060060-55-85
17	YC.JG.ZS002279	FPV Bracket
18	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
19	YC.JG.QX002209	Front Shell Bracket (Left)
20	BC.AG.SS000549	FPV Module
21	YC.WJ.L00870	Screw M30-HC060060-55-85
22	YC.WJ.L00876	Screw M40-HC060060-55-85
23	YC.JG.QX002207	Radar Crossbeam
24	YC.JG.MY000691	Omnidirectional Radar Fixing Base Heat Sink Part Sealing Ring
25	YC.ST.LL000122	Screw M25-HC00780040-040020-5108-N
26	YC.JG.YZ000498	Omnidirectional Radar Fixing Base
27	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
28		N/A
29	YC.JG.MY000691	Omnidirectional Radar Fixing Base Heat Sink Part Sealing Ring
30	YC.XC.XX000844	Omnidirectional Radar Signal Cable
31	YC.JG.MQ000710	Radar Fixing Base Thermal Pad
32	YC.WJ.L00870	Screw M30-HC060060-55-85
33	BC.AG.SS000551	Omnidirectional Radar Module (Including Signal Cable)
34	YC.JG.MY000746	Radar Hood Sealing Ring (Outer)
35	BC.AG.SS000562	Forward Vision Sensor Module
36	YC.JG.MY000745	Omnidirectional Radar Fixing Base Sealing Ring
37	BC.AG.SS000548	Auxiliary Bottom Light Module (Including Signal Cable)
38	YC.JG.ZS002476	Front Frame Cable Bracket (Left)
39	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
40	YC.XC.XX000853	Auxiliary Bottom Light Signal Cable
41	YC.XC.XX000842	Spraying Adaptive Cable
42	YC.JG.ZS002415	Front Frame Cable Bracket (Right)
43	YC.JG.ZS002304	Side Arm
44	YC.ST.LL000228	M20-PC00400040-040010-5103-Y
45	YC.JG.QX002407	Enhanced Supporting Piece

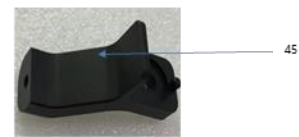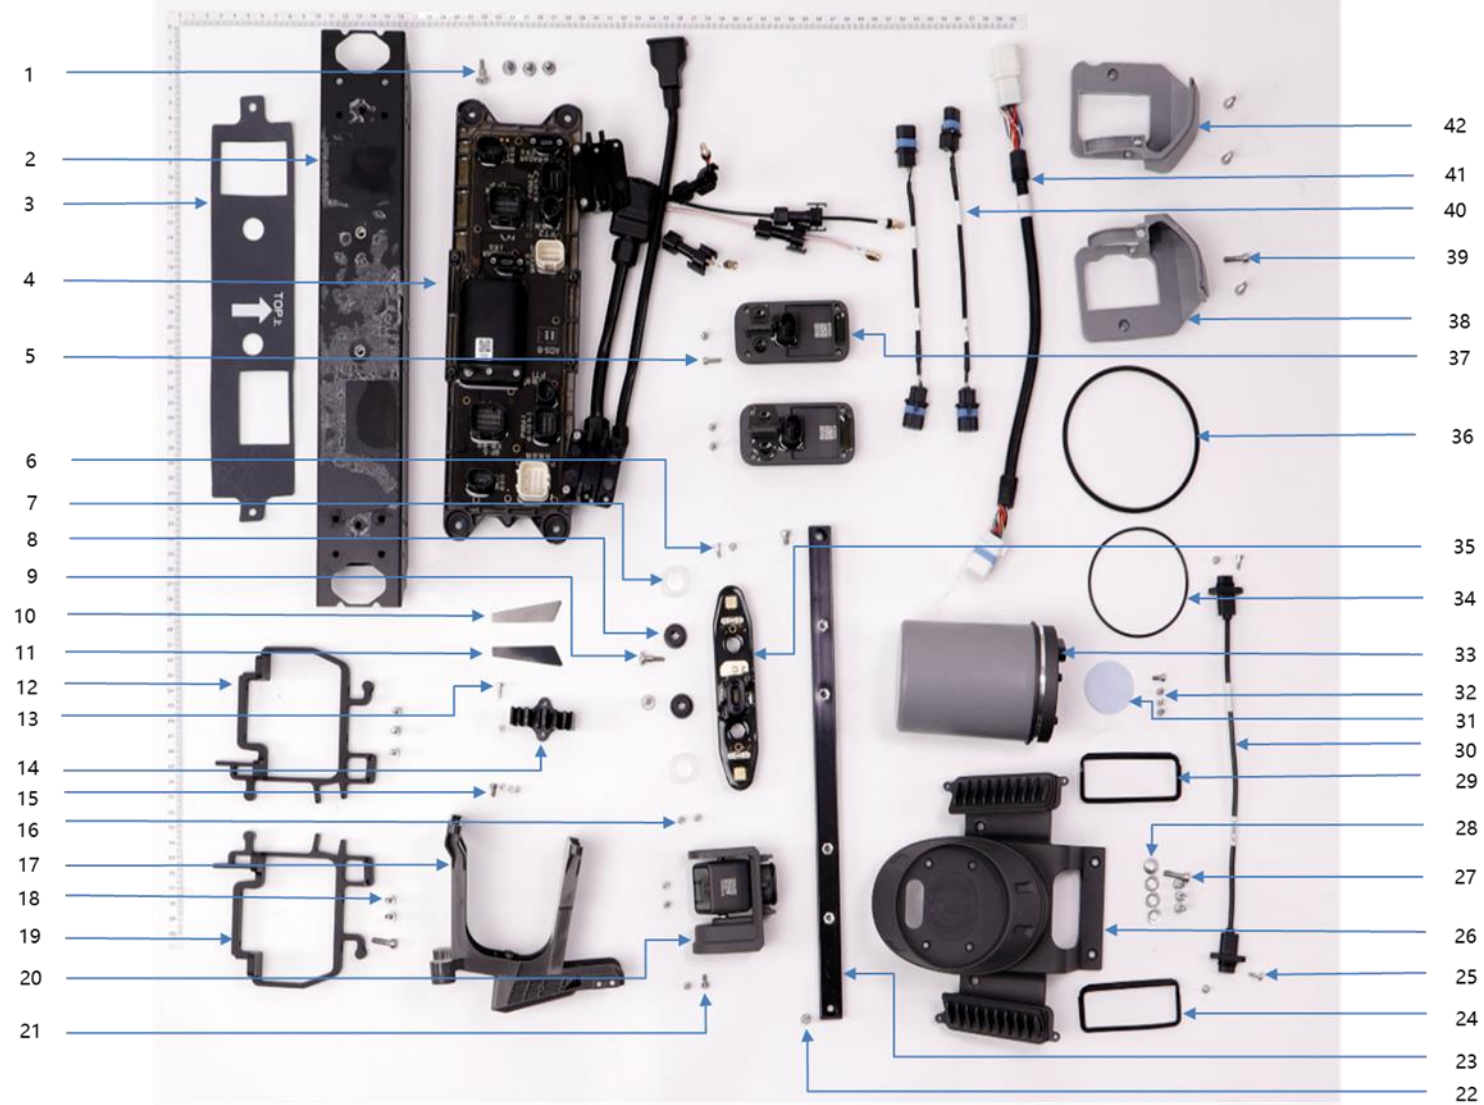

Confidential: Do Not Distribute


Middle Frame

No.	Material Number	Material Name
1	YC.JG.QX002085	Cable Tube
2	YC.JG.QX002258	M4 Aircraft Arm Connector
3	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
4	YC.JG.QX002257	M3 Aircraft Arm Connector
5	BC.AG.SS000579	Middle Frame Aluminum Tube (Right)
6	BC.AG.SS000578	Middle Frame Aluminum Tube (Left)
7	YC.JG.QX002136	M2 Aircraft Arm Connector
8	YC.JG.QX002135	M1 Aircraft Arm Connector
9	BC.AG.SS000550	Load Sensor Module
10	YC.JG.QX002110	Middle Frame Insert Part
11		N/A
12	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
13	YC.JG.BJ000942	Weight Sensor Module Fixing Piece
14	YC.JG.MY000790	Load Sensor Rubber Cover
14	YC.JG.MY001011	Load Sensor Rubber Cover
15	YC.JG.ZS002259	Hose Clip
16	YC.WJ.L00871	Screw M30-HC100100-55-85
17		N/A
18	YC.JG.ZS002229	Load Sensor Cable Clip
19		N/A
20	YC.JG.MY000686	Cable Tube Rubber Stopper
21	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
22	YC.JG.ZS002191	Aircraft Arm Fixing Piece (Left)
23		N/A
24		N/A
25	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
26	YC.JG.ZS002192	Aircraft Arm Fixing Piece (Right)

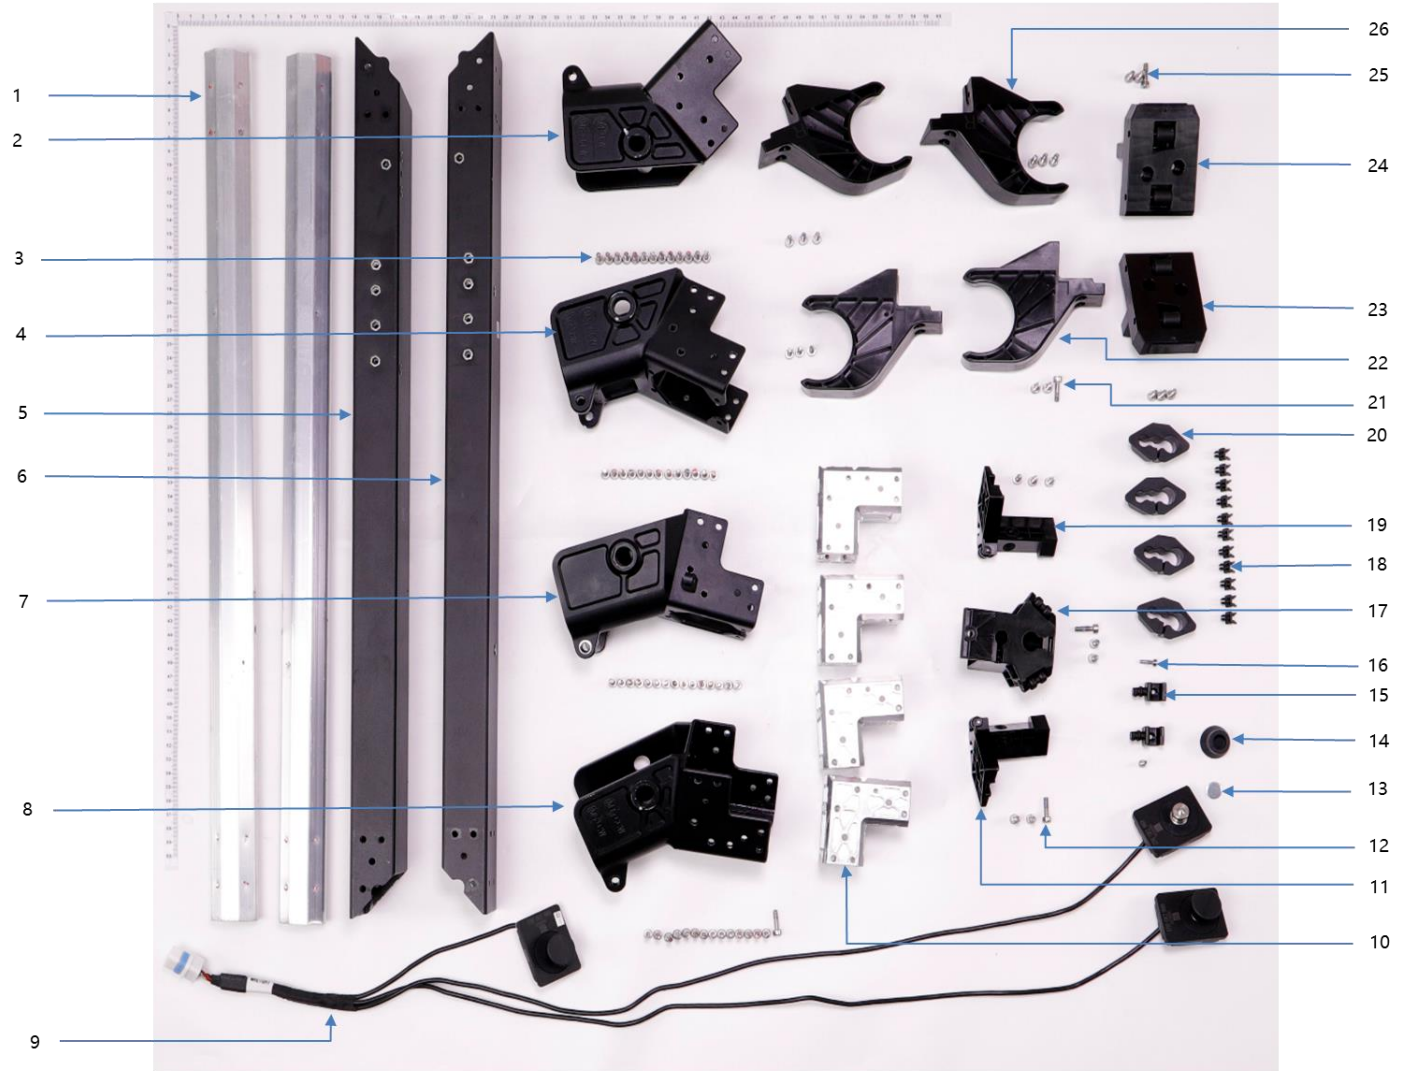


Load Sensor Bracket

No.	Material Number	Material Name
1	YC.JG.ZS002397	Load Sensor Bracket Roller
2	YC.JG.ZS002224	Load Sensor Bracket (Front)
3	YC.WJ.ZZ002618	Spray Tank Fixing Piece Roller Shaft
4	YC.JG.ZS002226	Load Sensor Bracket (Right)
5	YC.JG.ZS002225	Load Sensor Bracket (Left)

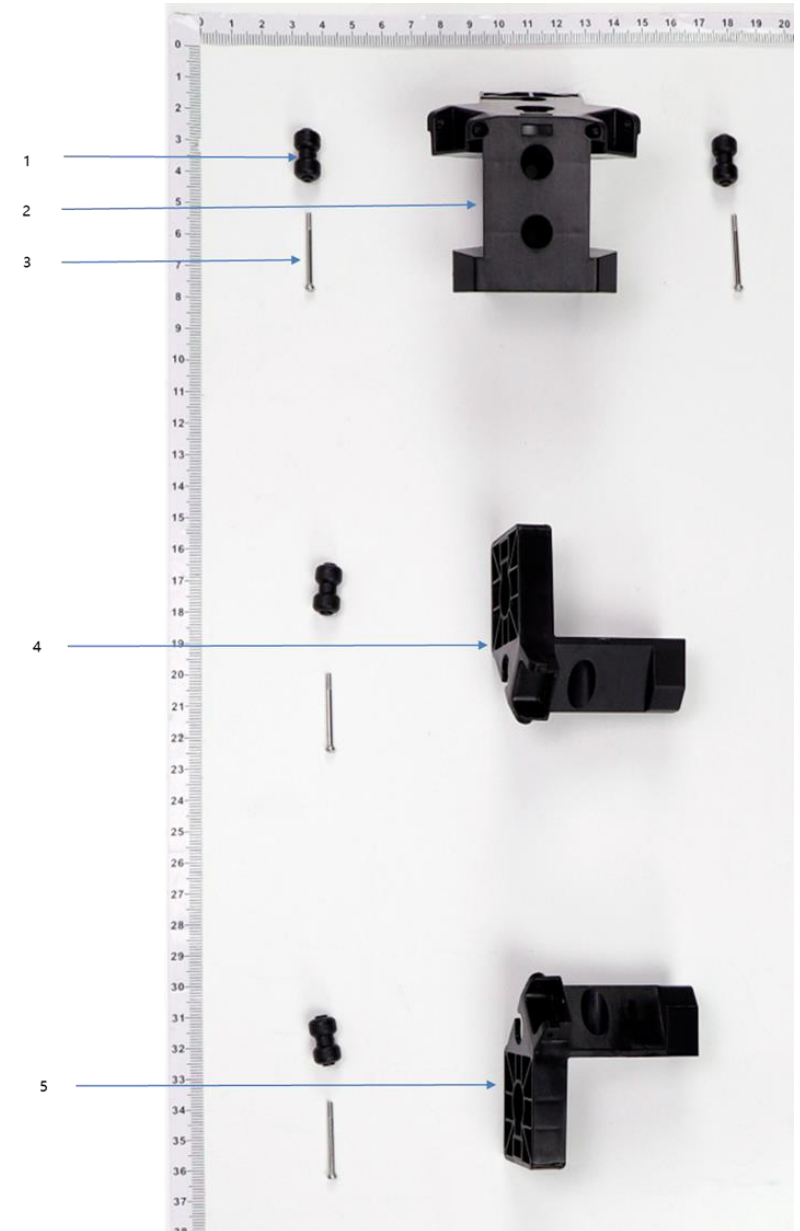


Battery Fixing Piece

No.	Material Number	Material Name
1	YC.JG.MQ001386	Battery Supporting Piece Patch (Right)
2	YC.XJ.QT000247	Battery Fixing Piece External Roller
3	YC.SJ.WS002500	Spray Tank Fixing Piece Internal Roller
4	YC.JG.ZS002295	Battery Supporting Piece (Right)
5	YC.WJ.ZZ002618	Spray Tank Fixing Piece Roller Shaft
6	YC.JG.ZS002294	Battery Supporting Piece (Left)
7	YC.JG.MQ001385	Battery Supporting Piece Patch (Left)

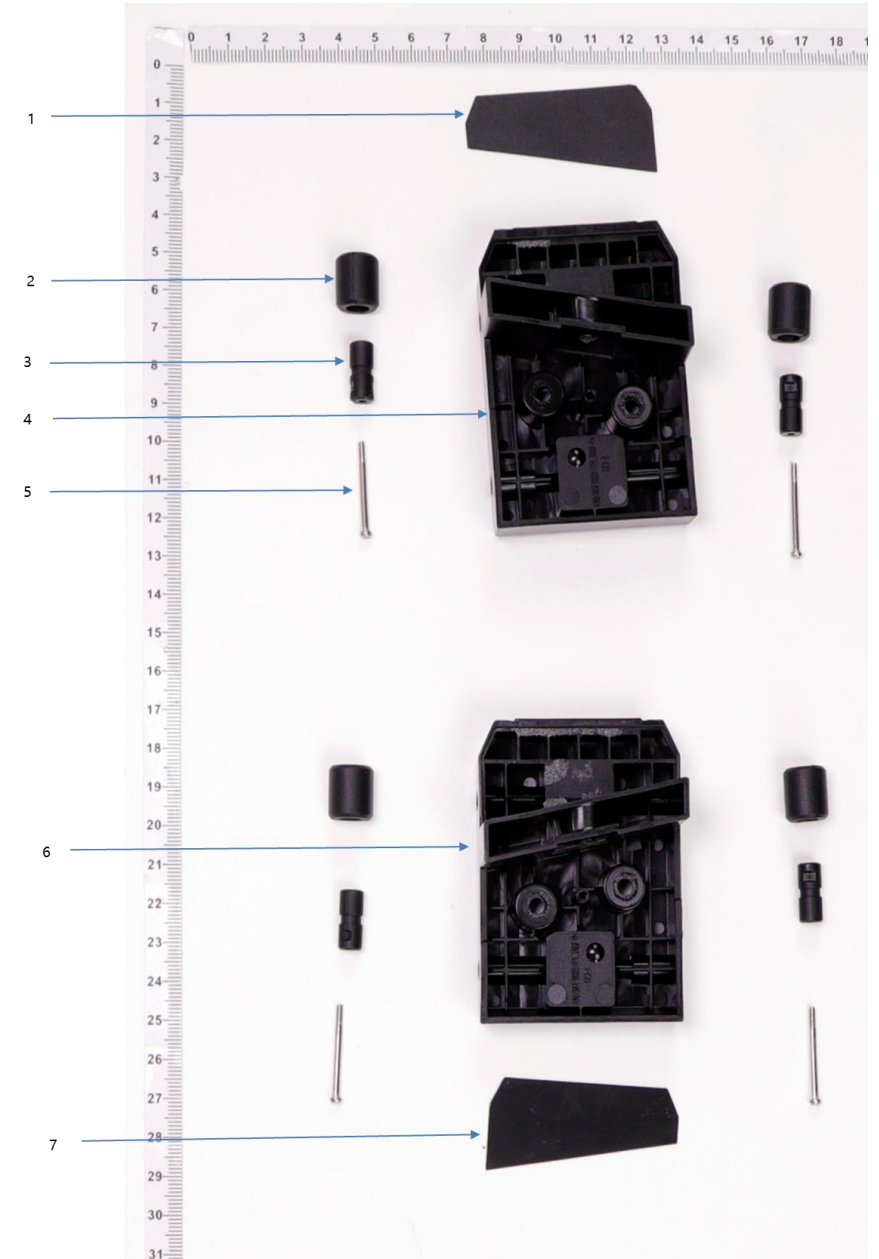


Rear Frame

No.	Material Number	Material Name
1	BC.AG.SS000577	Rear Frame Aluminum Tube
2	YC.JG.ZS002422	Outer Shell Buckle
3	YC.JG.ZS002298	Rear Upper Cover
4	YC.ST.LL000235	T30-HC00800080-057030-5103-N
5	YC.JG.ZS000998	Rear Shell Small Buckle Base
6	YC.JG.ZS002299	Rear Lower Cover
7	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
8	YC.JG.MY000380	Damping Pad
9	YC.WJ.L00871	Screw M30-HC100100-55-85
10	BC.AG.SS000558	Power Distribution Board Module
11	BC.AG.SS000560	RTK Antenna Module
12	YC.ST.LL000226	M30-HC01450080-100020-5103-Y
13	BC.AG.SS000561	Backward Vision Sensor Radar Module
13	BC.AG.SS000655	Backward Vision Sensor Radar Module
14	YC.WJ.L00870	Screw M30-HC060060-55-85
15	YC.JG.ZS002284	Downward Vision Radar Bracket
16	YC.WJ.L00871	Screw M30-HC100100-55-85
17	YC.JG.FM000083	Battery Buckle
18	YC.JG.MY000736	Battery Buckle Sealing Ring
19	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
20	YC.WJ.L00871	Screw M30-HC100100-55-85
21	YC.WJ.L00871	Screw M30-HC100100-55-85
22	YC.JG.QX002224	Rear Frame Crossbeam
23	YC.WJ.L00871	Screw M30-HC100100-55-85
24	YC.JG.ZS002482	Buckle
25	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
26	YC.JG.ZS002222	Real Shell Bracket

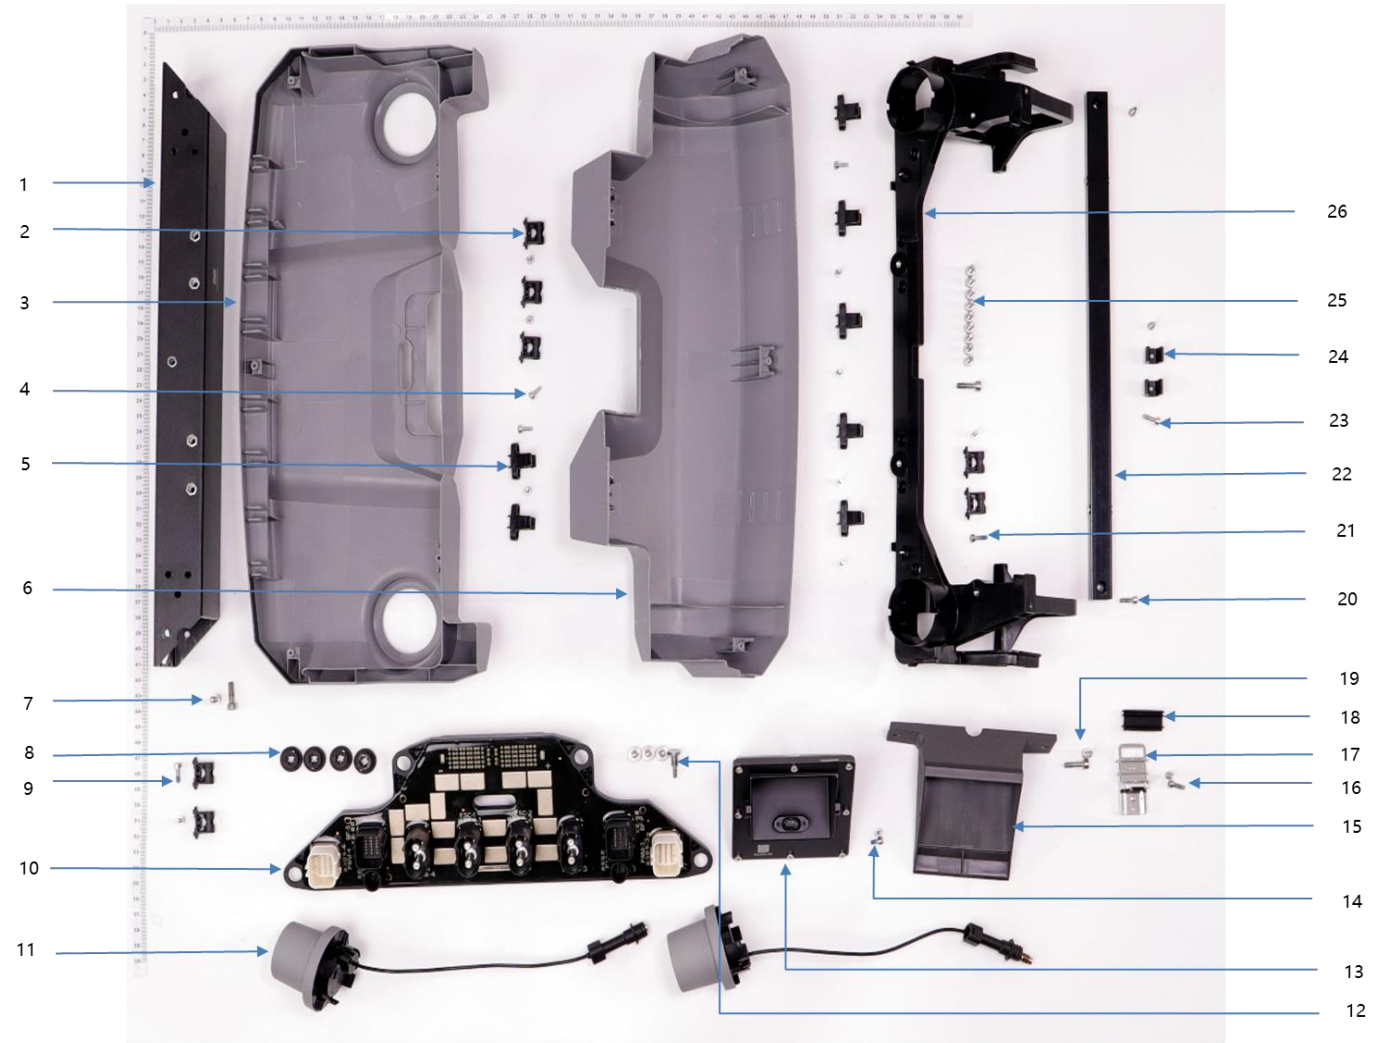

Landing Gear

No.	Material Number	Material Name
1	YC.JG.BJ001168	Landing Gear Aluminum Tube
2	YC.JG.FP000013	Buffer Bottom Pad
3	YC.JG.ZS002190	Landing Gear Fixing Piece (Rear Right)
4	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
5	YC.JG.ZS002189	Landing Gear Fixing Piece (Rear Left)
6	YC.JG.XW000089	Landing Gear Crossbeam
7	YC.JG.ZS002188	Landing Gear Fixing Piece (Front Left)
8	YC.JG.ZS002187	Landing Gear Fixing Piece (Front Right)
9	YC.JG.ZS002285	Landing Gear Y-tee Part
10	YC.ST.LL000017	Screw M30-HC02800070-055030-0003-Y
11	YC.WJ.L00877	M3 Nut
12	YC.WJ.L00873	Screw M30-HC1880-55-85

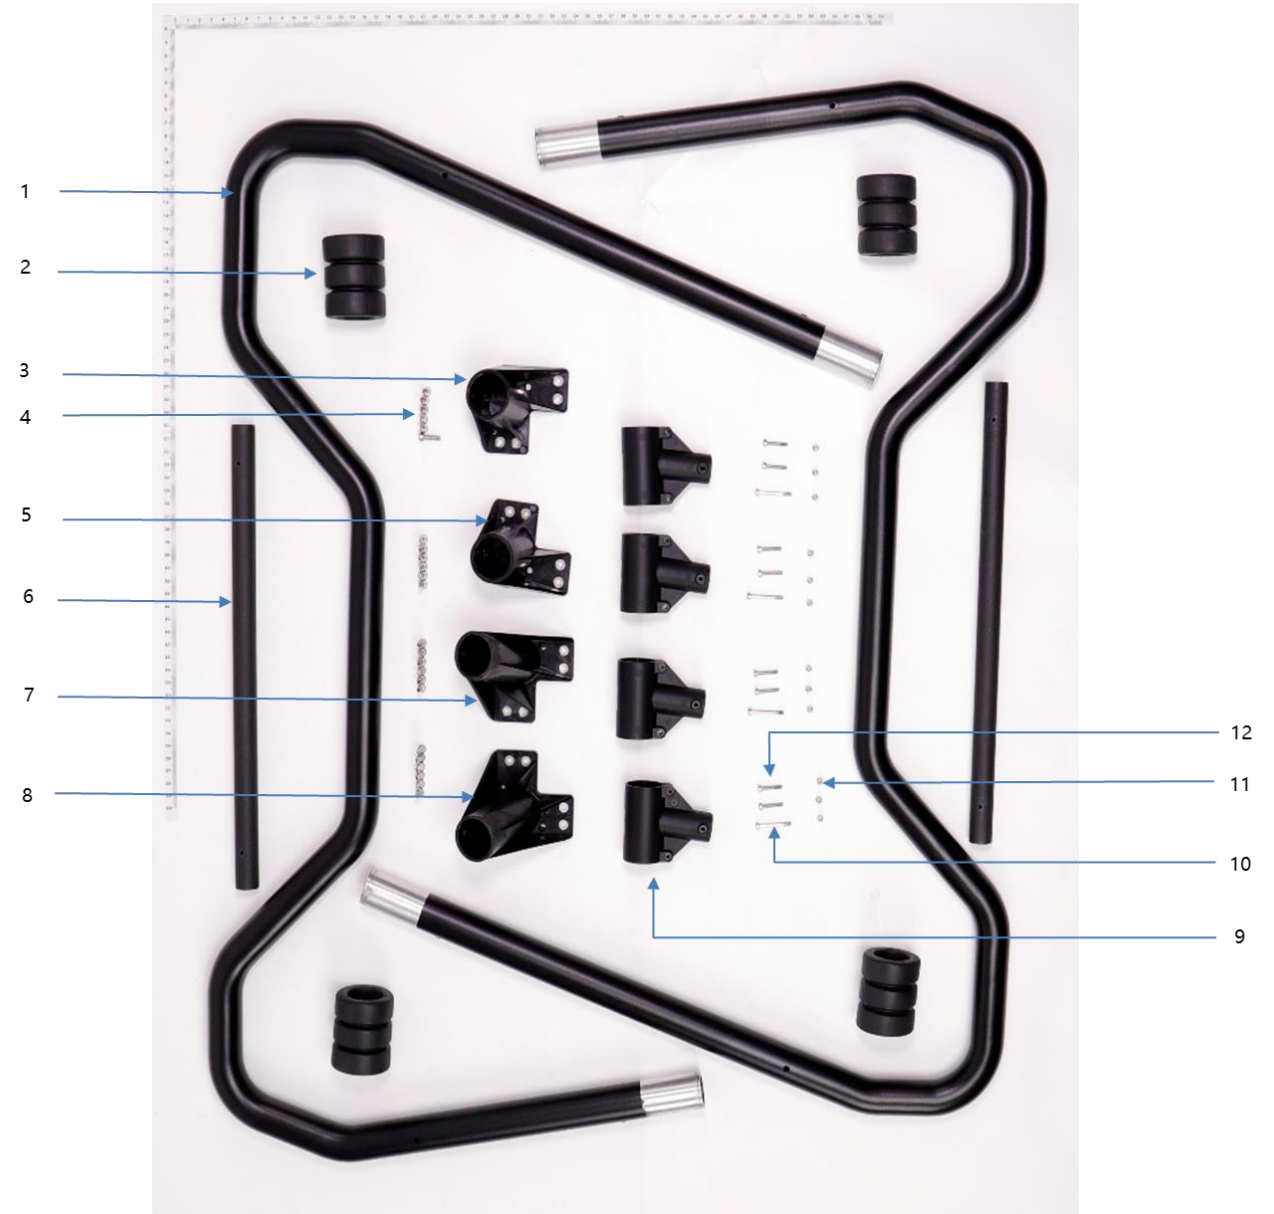


Spray Tank

No.	Material Number	Material Name
1	YC.JG.ZS002307	Spray Tank Outer Shell
2	YC.JG.CS000012	Spray Tank (40L)
3	YC.WJ.LL000424	T30-HC00600060-057030-0323-N
4	YC.JG.ZS000998	Rear Shell Small Buckle Base
5	YC.JG.ZS002250	Spray Tank Cover Waterproof Permeability Cover
6	YC.JG.ZS002251	Spray Tank Cover
7	YC.JG.ZS001085	Spray Tank Inlet Filter
8	YC.JG.MY000678	Spray Tank Cover Waterproof Permeability Film
9	YC.JG.MY000679	Spray Tank Cover Sealing Ring
10	YC.BZ.RB000011	Spread Tank Lanyard
11	YC.SJ.WS002423	Spray Tank Spray Tank Cover Ring
12	YC.WJ.LL000211	Screw M30-HC02050080-070020-5103-Y
13	YC.JG.ZS002389	Impeller Pump Protective Hood
14		N/A
15	YC.JG.ZS000984	Flow Meter Bracket
16	YC.WJ.LL000232	M40-HC01000100-072028-5103-N
17	YC.JG.ZS002235	Quick-Release Filter
18	YC.SJ.J01186	Filter Rubber Ring
19	YC.WJ.L00876	Screw M40-HC060060-55-85
20	YC.JG.ZS002234	Impeller Pump Bracket
21	BC.AG.SS000547	Liquid Level Meter Module
22	YC.XC.XX000835	Spraying Signal Cable
23	YC.XC.XX000857	Impeller Pump Signal Cable
24	YC.JG.ZS002237	Liquid Level Meter Bracket
25	YC.WJ.L00876	Screw M40-HC060060-55-85
26	YC.SJ.WS002412	Spray Tank Liquid Level Meter Installation Nut
27	YC.XJ.QT000194	Spray Tank Liquid Level Meter Installation Nut Sealing Ring
28	YC.JG.ZS002232	Spray Tank Y-tee Part
29	BC.AG.SS000471	Spray Tank Liquid Level Meter
30	YC.JG.MY000687	Spray Tank Y-tee Part Sealing Ring
31	YC.JG.ZS002233	Water Outlet Rotation Cover
32	YC.JG.ZS002429	Filter With 50 Holes
33	YC.WJ.L00870	Screw M30-HC060060-55-85
34		N/A
35	BC.AG.SS000546	Spraying Adapter Module
36	YC.WJ.L00876	Screw M40-HC060060-55-85



M1/M2 Arm

No.	Material Number	Material Name
1	YC.JG.MY000758	Aircraft Arm Rubber
2	YC.ST.LL000122	Screw M25-HC00780040-040020-5108-N
3	YC.ST.LL000215	M50-HC01200120-087050-5103-Y
4	YC.JG.QX002151-M4	Motor Fixing Base-M4 (Integrated)
4	YC.JG.QX002151-M5	Motor Fixing Base-M5 (Integrated)
4.1	YC.JG.QX003454	Motor Fixing Base (Upper)-M5 (Separate Type)
4.2	YC.JG.QX003455	Motor Fixing Base (Lower)-M5 (Separate Type)
4.3	YC.JG.QX003209	Motor Fixing Base (Upper)-M4 (Separate Type)
4.4	YC.JG.QX003210	Motor Fixing Base (Lower)-M4 (Separate Type)
5	BC.AG.SS000567	M1 Aircraft Arm (Front Right)(Without Arm Sleeve)
5.1	BC.AG.SS000776	M1 Aircraft Arm (Front Right)(With Arm Sleeve)
5.3	BC.AG.SS000568	M2 Aircraft Arm (Front Left)(Without Arm Sleeve)
5.4	BC.AG.SS000777	M2 Aircraft Arm (Front Left)(With Arm Sleeve)
6	YC.JG.ZS002379	Motor Upper Cover
7	YC.XC.XS000011	M1&M2 Aircraft Arm ESC Composite Cable
8	BC.AG.SS000566	10033 Propulsion Motor-M4
8	BC.AG.SS000668	10033 Propulsion Motor-M5
9	YC.ST.LL000148	M40-HC01400140-070039-4105-Y
10	YC.WJ.L000870	Screw M30-HC060060-55-85
11	YC.WJ.L00871	Screw M30-HC100100-55-85
12	YC.XC.XX000834	Aircraft Arm In-Position Detector Signal Cable
12	BC.AG.SS000645	Aircraft Arm In-Position Detector Signal Cable
13	YC.JG.ZS002278	In-Position Detector Bracket
14	FL.SC.BB000001	Acetate Fabric
15	YC.DZ.AA000275	SDR Antenna
16	YC.JG.ZS002394	Aircraft Arm Friction Plate
17	YC.JG.ZS002416	SDR Protective Sleeve
18	BC.AG.SS000575	Locking Piece Handle
19	YC.JG.MY000720	Locking Piece Handle Rubber Sleeve
20	YC.JG.QX002088	Locking Piece Connection Rod
21	YC.JG.QX002089	Locking Piece Aircraft Arm Shaft
22	YC.JG.QX001243	Locking Piece Handle Connecting Rod Shaft
23	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
24	YC.JG.LD000039	Aircraft Arm Fixing Screw
25	YC.JG.TT000095	Locking Piece Spring
26	YC.JG.QX002314	Aircraft Arm Fixing Screw Bolt
27	YC.JG.LD000041	Locking Piece Fixing Screw Bolt
28		N/A
29	YC.WJ.LL000213	M30-HT01930060-110025-5103-Y
30	YC.WJ.LM000044	M60-HX100060-5103 01
31	YC.JG.FP000018	Motor Cover
32	YC.ST.LL000208	M20-TC00700060-033010-0004-Y
33	BC.AG.SS000563	ESC Module
34	YC.JG.LD000032	Motor Locating Pin
35	YC.WJ.L000870	Screw M30-HC060060-55-85
36	YC.JG.QX002788	Motor Base Locking Piece
37	YC.JG.MQ002459	Acetate Tape

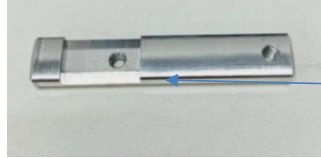



36

37



Confidential: Do Not Distribute


M3/M4 Arm

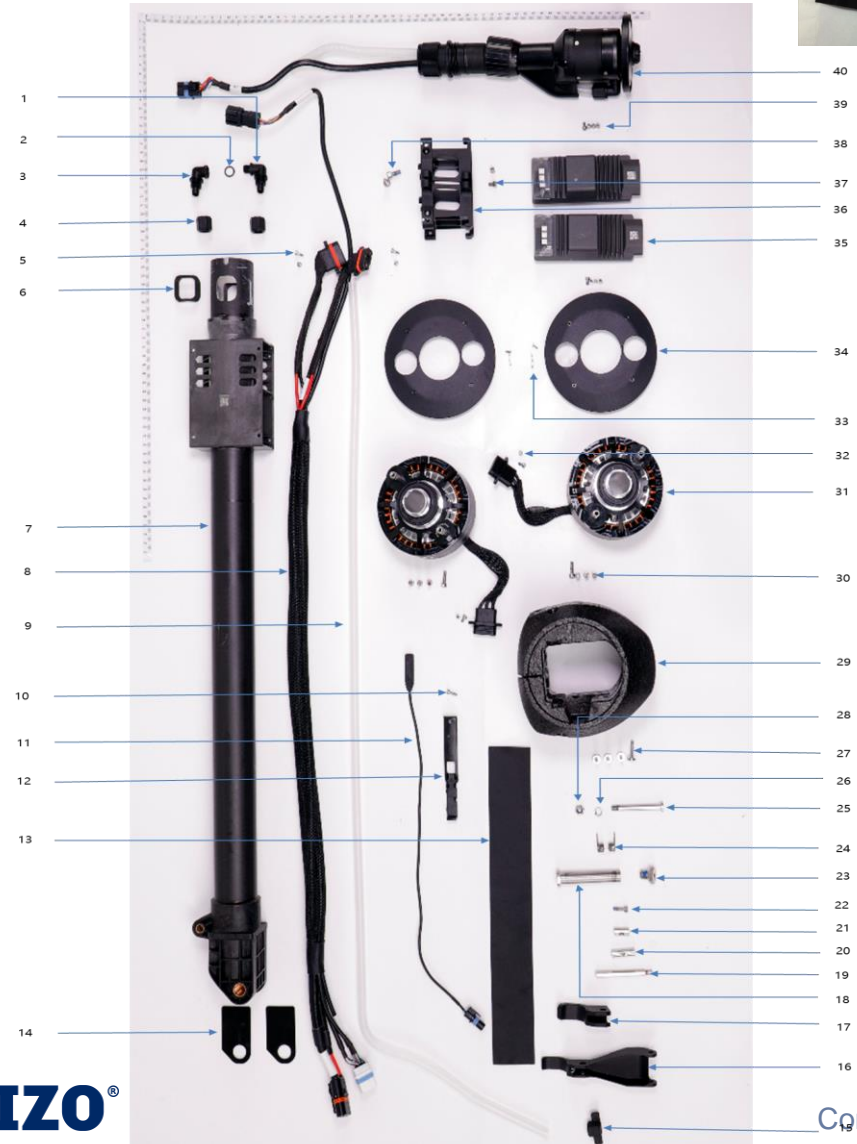

No.	Material Number	Material Name
1	YC.JG.ZS002257	Hose Curving Connector (Outer Thread)
2	YC.XJ.QT000350	Pump Connector Sealing Ring
3	YC.JG.ZS002258	Hose Curving Connector (Inner Thread)
4	YC.JG.ZS002255	Hose Nut
5	YC.ST.LL000122	Screw M25-HC00780040-040020-5108-N
6	YC.JG.MY000758	Aircraft Arm Rubber
7	BC.AG.SS000569	M3 Aircraft Arm (Rear Left)(Without Arm Sleeve)
7.1	BC.AG.SS000778	M3 Aircraft Arm (Rear Left)(With Arm Sleeve)
7.2	BC.AG.SS000570	M4 Aircraft Arm (Rear Right)(Without Arm Sleeve)
7.3	BC.AG.SS000779	M4 Aircraft Arm (Rear Right)(With Arm Sleeve)
8	YC.XC.XS000012	M3&M4 Aircraft Arm ESC Composite Cable
9	YC.JG.JS000018	Aircraft Arm Hose
10	YC.WJ.L00871	Screw M30-HC100100-55-85
11	YC.XC.XX000834	Aircraft Arm In-Position Detector Signal Cable
11	BC.AG.SS000645	Aircraft Arm In-Position Detector Signal Cable
12	YC.JG.ZS002278	In-Position Detector Bracket
13	FL.SC.BB000001	Acetate Fabric
14	YC.JG.ZS002394	Aircraft Arm Friction Plate
15	YC.JG.ZS002534	Thumb Nut
16	BC.AG.SS000575	Locking Piece Handle
17	YC.JG.MY000720	Locking Piece Handle Rubber Sleeve
18	YC.JG.QX002314	Aircraft Arm Fixing Screw Bolt
19	YC.JG.QX002088	Locking Piece Connection Rod
20	YC.JG.QX002089	Locking Piece Aircraft Arm Shaft
21	YC.JG.QX001243	Locking Piece Handle Connecting Rod Shaft
22	YC.ST.LL000013	Screw M40-HC01400140-070039-0003-Y
23	YC.JG.LD000039	Aircraft Arm Fixing Screw
24	YC.JG.TT000095	Locking Piece Spring
25	YC.JG.LD000041	Locking Piece Fixing Screw Bolt
26		N/A
27	YC.WJ.LL000213	M30-HT01930060-110025-5103-Y
28	YC.WJ.LM000044	M60-HX100060-5103
29	YC.JG.FP000018	Motor Cover
30	YC.ST.LL000148	M40-HC01400140-070039-4105-Y
31	BC.AG.SS000566	10033 Propulsion Motor-M4
31	BC.AG.SS000668	10033 Propulsion Motor-M5
32	YC.WJ.L00870	Screw M30-HC060060-55-85
33	YC.ST.LL000208	M20-TC00700060-033010-0004-Y
34	YC.JG.ZS002379	Motor Upper Cover
35	BC.AG.SS000563	ESC Module
36	YC.JG.QX002151-M4	Motor Fixing Base-M4 (Integrated)
36	YC.JG.QX002151-M5	Motor Fixing Base-M5 (Integrated)
36.1	YC.JG.QX003454	Motor Fixing Base (Upper)-M5 (Separate Type)
36.2	YC.JG.QX003455	Motor Fixing Base (Lower)-M5 (Separate Type)
36.3	YC.JG.QX003209	Motor Fixing Base (Upper)-M4 (Separate Type)
36.4	YC.JG.QX003210	Motor Fixing Base (Lower)-M4 (Separate Type)
37	YC.JG.LD000032	Motor Locating Pin
38	YC.ST.LL000215	M50-HC01200120-087050-5103-Y
39	YC.WJ.L00870	Screw M30-HC060060-55-85
40		N/A
41	YC.JG.QX002788	Motor Base Locking Piece
42	YC.JG.MQ002459	Acetate Tape


Spray Rod

No.	Material Number	Material Name
1	YC.JG.ZS002289	Centrifugal Sprinkler Spring Bracket
2	YC.WJ.LL000244	Screw M30-HCW00600060-055020-5103-N
3	YC.JG.ZS001879	Centrifugal Sprinkler Spinner Disk Lower Disk
4	YC.XC.XX000841	Centrifugal Sprinkler Signal Cable
5	YC.JG.JS000019	Spray Rod Hose
6	YC.JG.MY000712	Centrifugal Valve Rubber Pad
7	YC.ST.LL000224	M25-PF00500035-047015-5103-N
8	BC.AG.SS000604	Centrifugal Sprinkler Lower Cover
9	YC.JG.ZS002483	Centrifugal Spray Rod
10	YC.JG.ZS002254	Spray Rod Quick-Release Sleeve
11	YC.JG.ZS002262	Spray Rod Fixing Nut
11	YC.JG.QX002877	Spray Rod Fixing Nut
12	YC.JG.ZS002253	Spray Rod Adaptive Shaft
12	YC.JG.ZS003383	Spray Rod Adaptive Shaft
13	YC.WJ.L00870	Screw M30-HC060060-55-85
14	YC.JG.ZS002258	Hose Curving Connector (Inner Thread)
15	YC.JG.ZS002255	Hose Nut
16	YC.XJ.QT000350	Pump Connector Sealing Ring
17	BC.AG.SS000565	Centrifugal Motor
18	YC.JG.MY000704	Motor Sealing Ring
19	YC.WJ.LL000138	Screw M25-HC00400040-050020-0003-N
20	YC.JG.ZS001878	Centrifugal Sprinkler Spinner Disk Upper Disk
21	YC.JG.ZS002288	Centrifugal Sprinkler Friction Piece
22	YC.JG.TT000100	Centrifugal Sprinkler Spring
23	YC.JG.MY000715	Centrifugal Sprinkler Sealing Ring

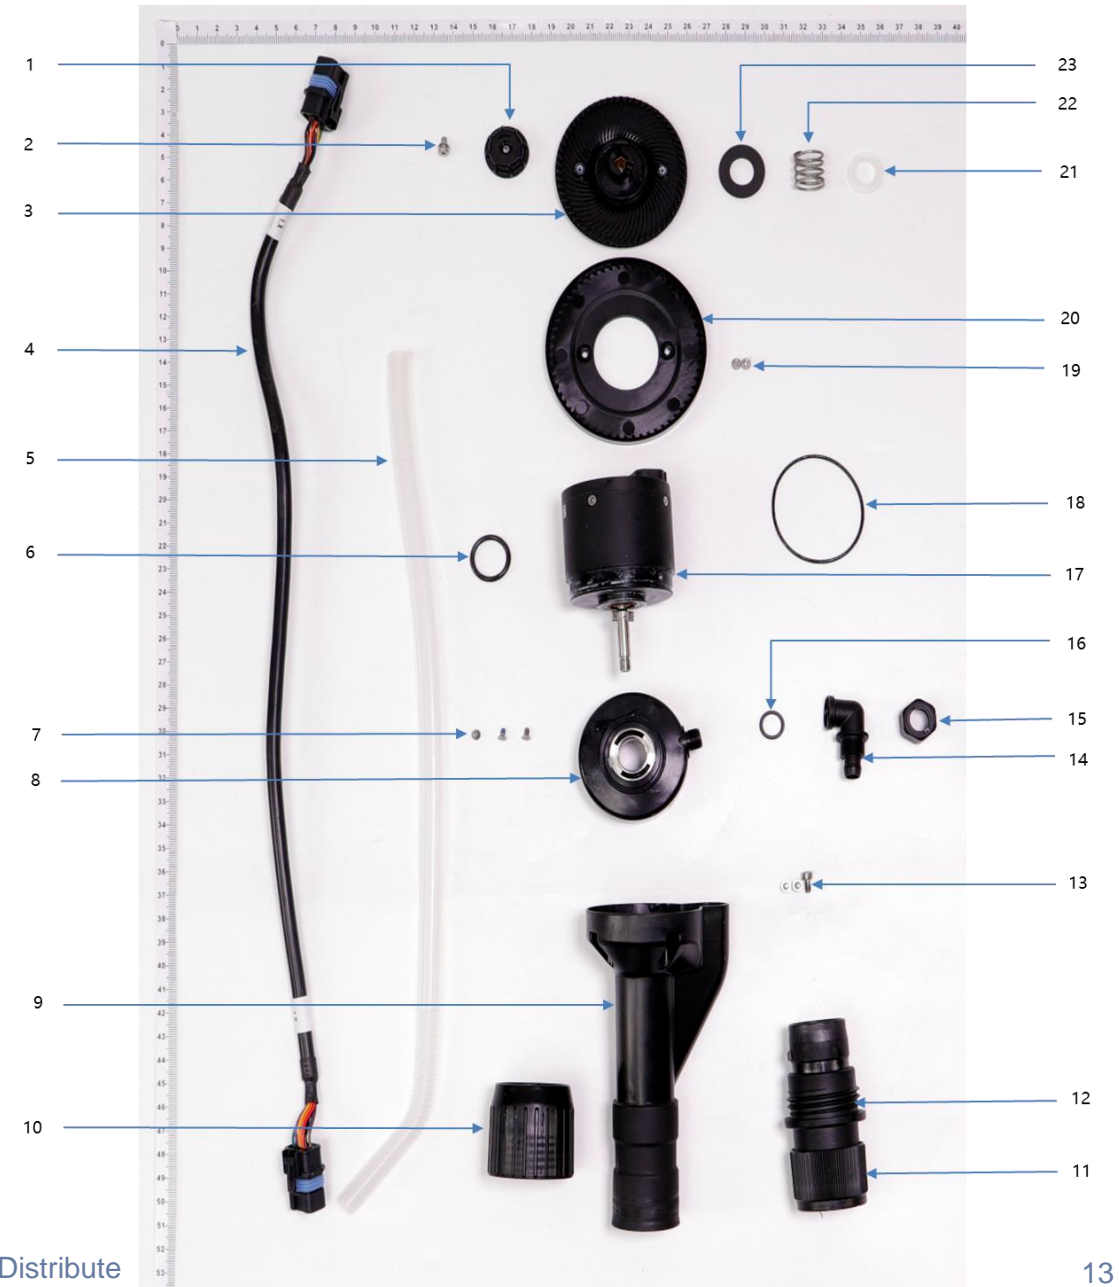


Cable Distribution Board

No.	Material Number	Material Name
1	YC.ST.LL000226	M30-HC01450080-100020-5103-Y
2	YC.JG.QX002311	Damping Pad A
3	YC.JG.QX002312	Damping Pad B
4	YC.JG.MY000688	RF Sealing Ring
5	BC.AG.SS000552	RF Board
6	YC.JG.MY000690	Aerial-Electronics Module and Spraying Module Sealing Ring
7	YC.WJ.L00870	Screw M30-HC060060-55-85
8	BC.AG.SS000617	Aerial-Electronics Module
9	BC.AG.SS000554	Spraying Module
10	YC.JG.MQ001294	Aerial-Electronics Module RF Thermal Conductive Pad
11	BC.AG.SS000556	Cable Distribution Board Module
12	YC.WJ.LL000235	M20-HPW00600060-065016-5103-Y
13	YC.JG.ZS002451	RF Cable Clip
14	YC.WJ.L00870	Screw M30-HC060060-55-85
15	YC.ST.LL000122	Screw M25-HC00780040-040020-5108-N
16	YC.JG.MY000389	Type-C Port Waterproof Cover
17	YC.SJ.S00717	Vent Trap

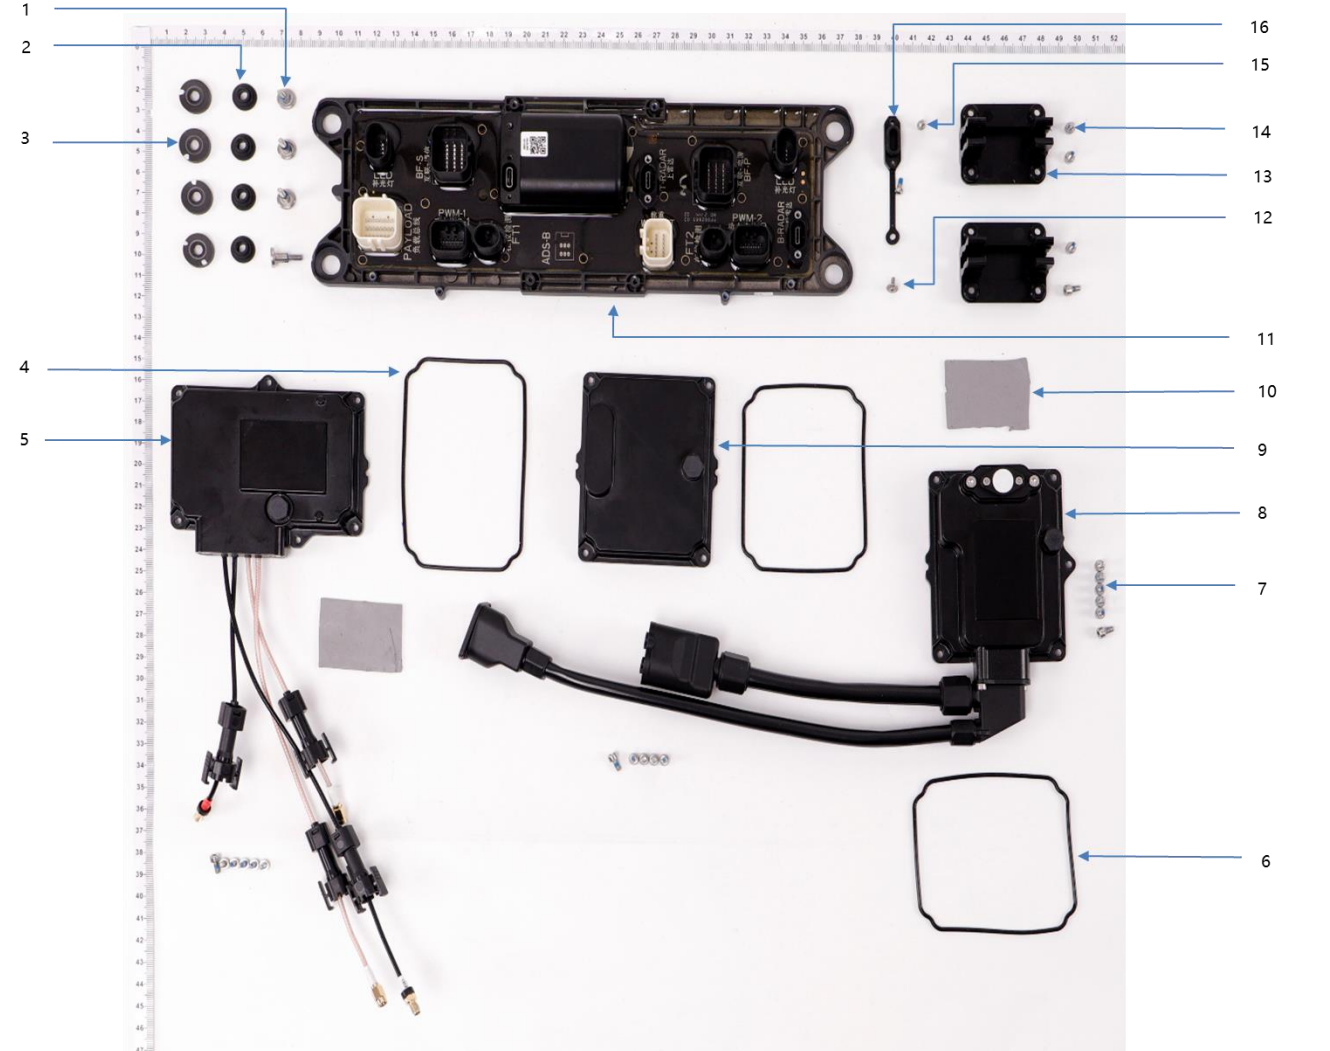


Impeller Pump

No.	Material Number	Material Name
1	YC.JG.ZS002233	Water Outlet Rotation Cover
2		N/A
3	YC.JG.ZS002214	Impeller Pump Shell
4	YC.XJ.QT000350	Pump_Connector Sealing Ring
5	YC.JG.ZS002348	Impeller Pump Curving Connector
6	BC.AG.SS000544	Impeller
7	YC.JG.ZS002216	Impeller Pump Spacing Sleeve
8	YC.ST.LL000224	M25-PF00500035-047015-5103-N
9	YC.JG.MY000703	Pump Sealing Ring
10	YC.JG.MY000704	Motor Sealing Ring
11	YC.JG.MY000712	Centrifugal Valve Rubber Pad
12	BC.AG.SS000543	Impeller Pump Motor

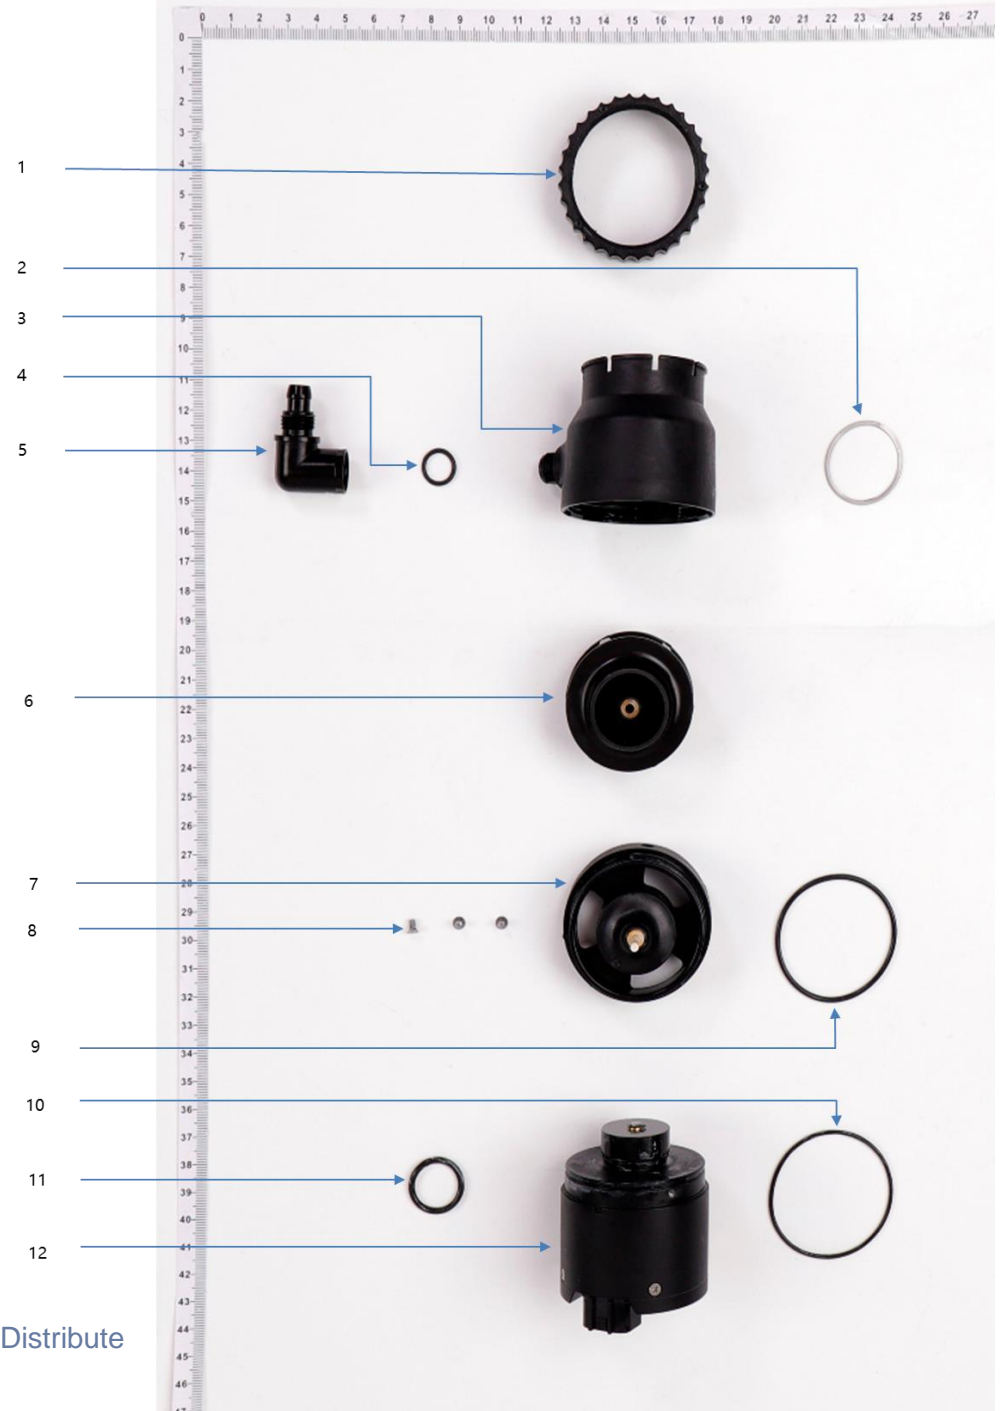



Flow Meter

No.	Material Number	Material Name
1	YC.ST.LL000122	Screw M25-HC00780040-040020-5108-N
2	YC.XC.XX000839	Flow Meter Signal Cable
3	YC.JG.ZS002255	Hose Nut
4	YC.JG.JS000022	Impeller Pump Right-Angle Connector
5	BC.AG.SS000545	Flow Meter Module (Including Signal Cable)
6	YC.JG.JS000027	Flow Meter Water Outlet Curving Connector
7	YC.JG.ZS002534	Thumb Nut
8	YC.JG.ZS002428	Hose Right-Angle Connector
9	YC.XJ.QT000350	Pump Connector Sealing Ring
10	YC.JG.MY000705	Sealing Ball
11	YC.JG.TT000098	Spring
12	YC.JG.ZS002348	Impeller Pump Curving Connector

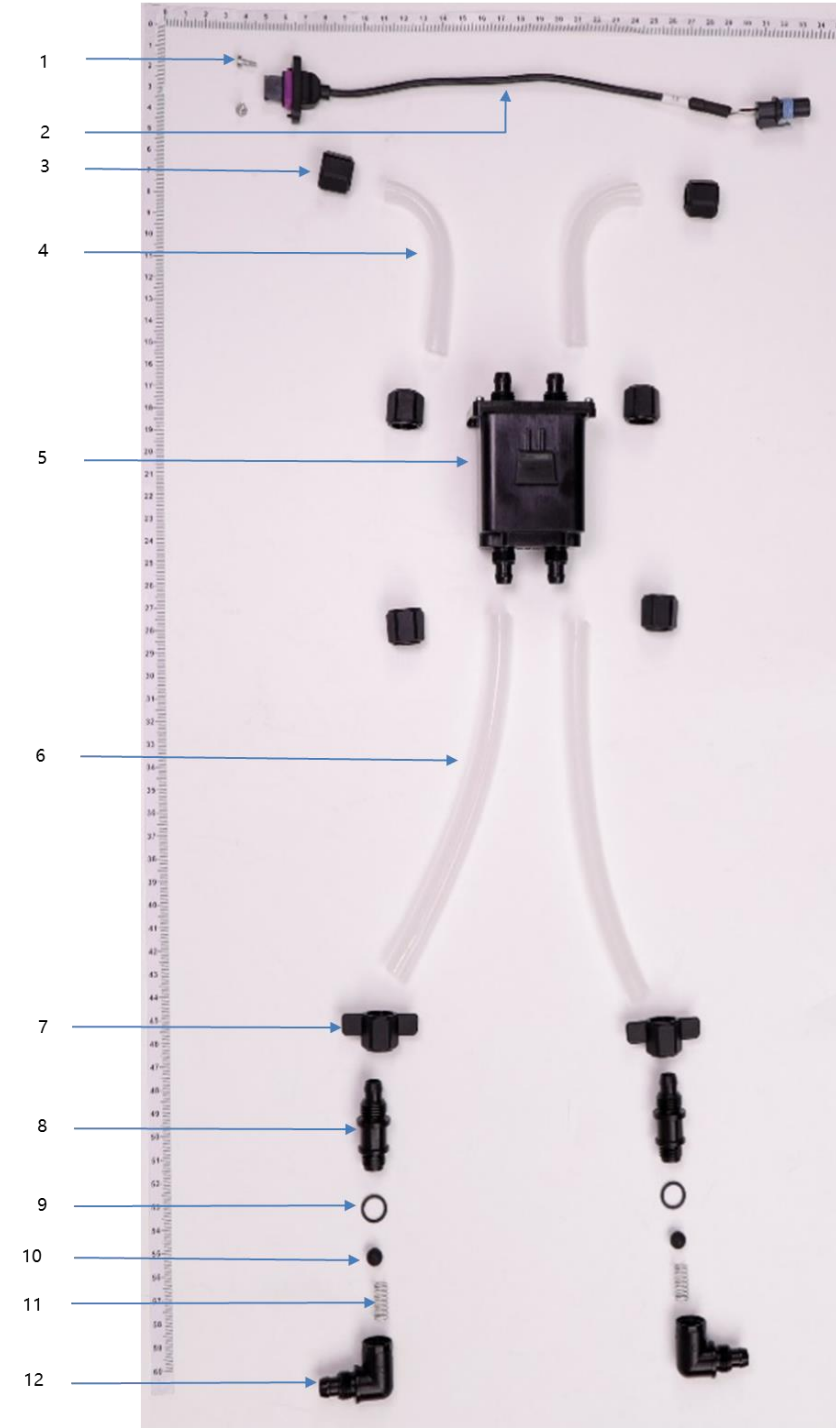


Upper Propellers

No.	Material Number	Material Name
1	YC.JG.ZS001963	Upper Propeller (CCW)
2	YC.JG.ZS001964	Upper Propeller (CW)
3	YC.JG.ZS002292	Motor Shaft Cover
4	YC.ST.LL000209	M50-HF01430102-116041-0003-Y
5	YC.JG.MQ001280	Rubber Pad
6	YC.JG.MQ001292	Teflon Pad
7	YC.JG.QX002177	Lower Propeller Adapter
8	YC.JG.ZS003829	Propeller Gasket
9	YC.JG.QX002715	Upper Propeller Adapter

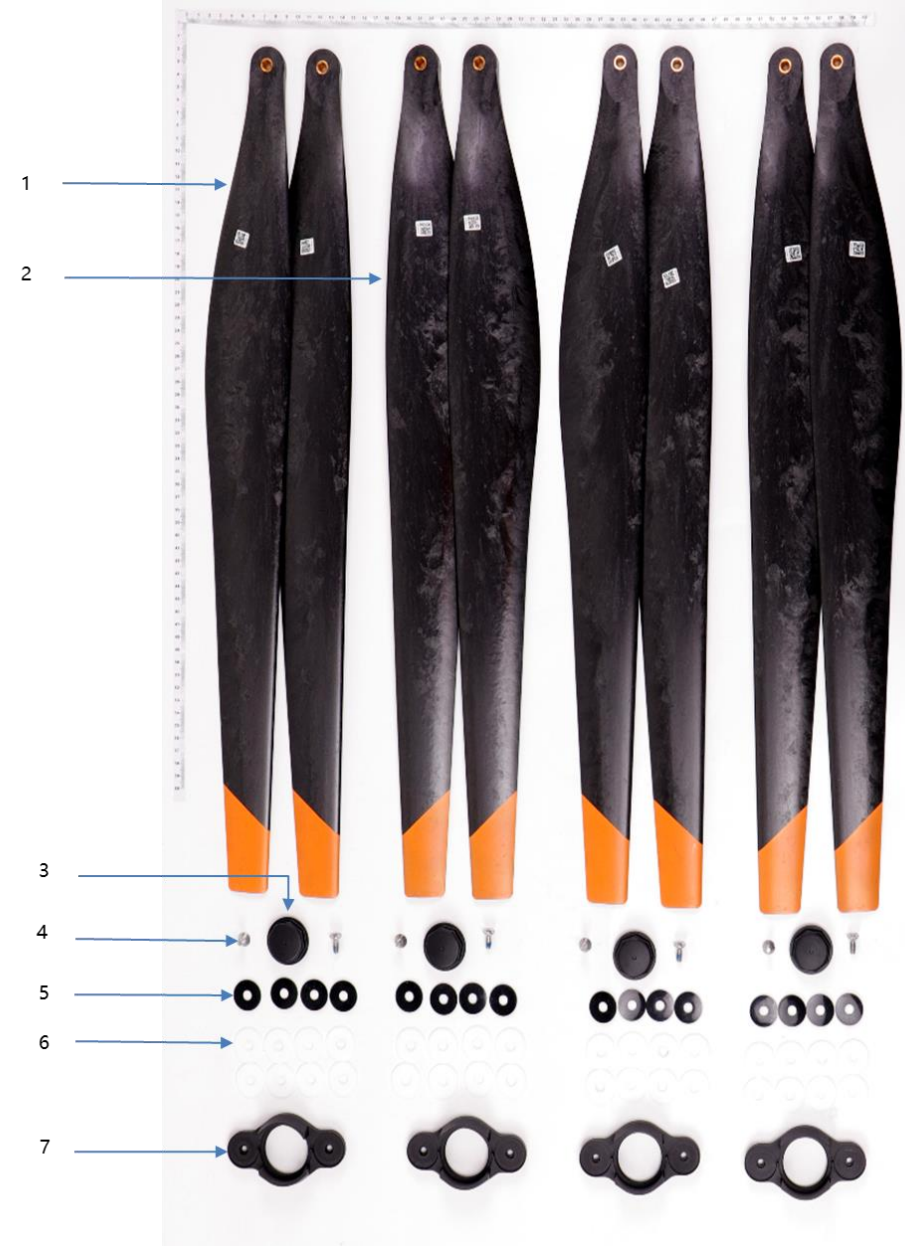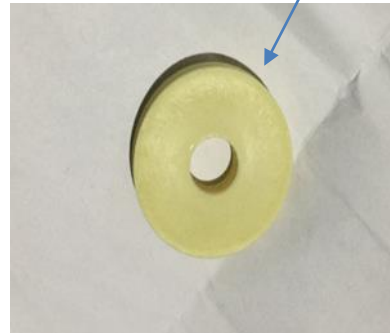


Lower Propellers

No.	Material Number	Material Name
1	YC.JG.ZS001965	Lower Propeller (CCW)
2	YC.JG.ZS001966	Lower Propeller (CW)
3	YC.ST.LL000209	M50-HF01430102-116041-0003-Y
4	YC.JG.MQ001280	Rubber Pad
5	YC.JG.MQ001292	Teflon Pad
6	YC.JG.QX002177	Propeller Clamp
7	YC.JG.ZS003829	Propeller Gasket

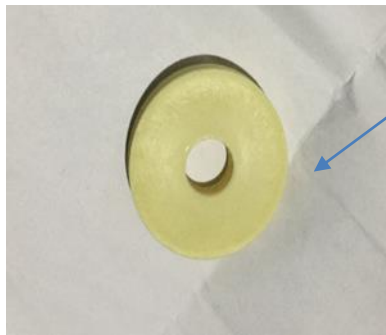

7

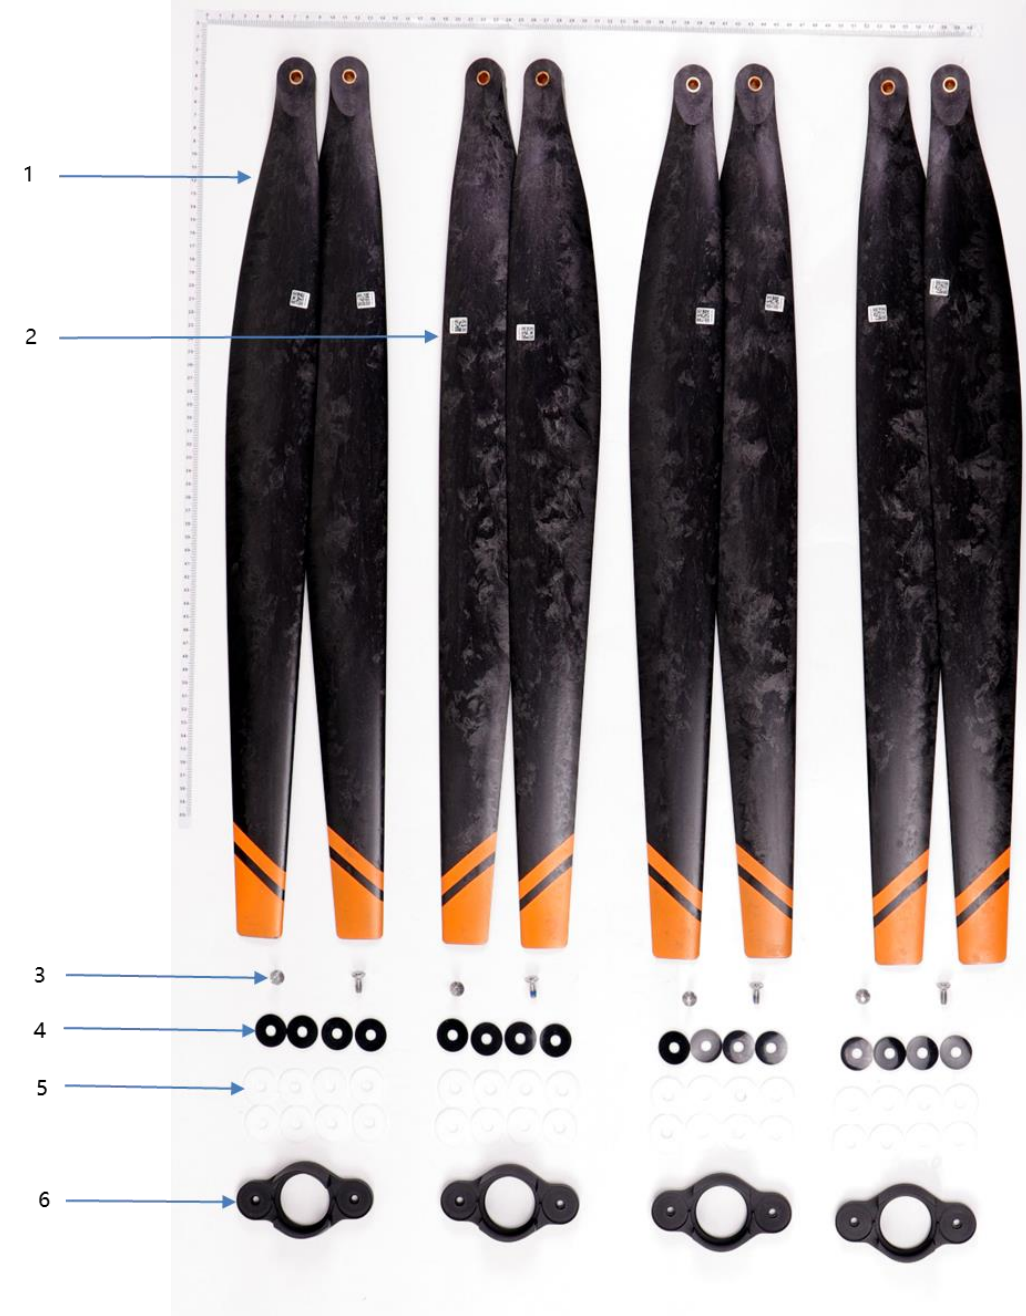

Cables

No.	Material Number	Material Name
1	YC.XC.DD000501	Front Aircraft Arm ESC Power Adapter Cable
2	YC.XC.XX000840	Signal Cable
3	YC.XC.TT000104	RTK Coaxial Cable
4	YC.XC.XX000845	Backward Vision Radar Signal Cable

- 1
- 2
- 3
- 4



Contact Support

Web

www.Rantizo.com

Email

Support@Rantizo.com

Phone

(319) 201-3020 (ext. 2)

LinkedIn

[@RantizoSprays](#)

Facebook

[@RantizoSprays](#)



Thank you.
