


HID SIPS Water Dispenser Filtration System Instructions

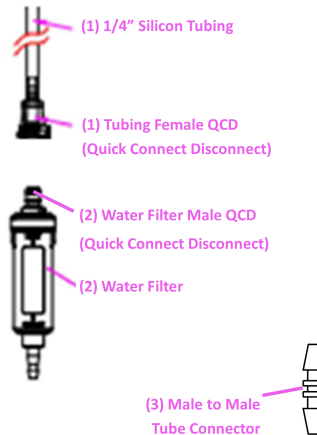

1. 1/4" Silicon Tubing with Female QCD (Quick Connect Disconnect)
 - a. Transports water to filter, from water source
 - b. Fits around (3) Male to Male Tube Connector
 - c. Holds water in while filter is not plugged in
 - d. Plugs into filter
2. Small housing Filter
 - a. Inserts into tube of your water dispenser
 - b. Good for up to 200 gallons
 - c. Replacements available on our website (www.hidsips.com)
3. Male to Male Tube Connector (*optional use*)
 - a. Connects additional 1/4" tubing to end of (1) Silicon Tubing

Directions for Use

Connecting System to Water Dispenser

1. Standard Configuration
 - a. Connect female QCD of (1) silicon tubing to male QCD of (2) water filter
 - b. Insert pointed end of (2) water filter into tubing of your water dispenser
 - c. Insert non-connected end of (1) silicon tubing into water source of your choice
2. Additional Tubing Length Configuration
 - a. At the non-connected end of (1) silicon tubing, insert one end of (3) Male to Male Tube Connector
 - b. Insert the other end of the (3) Male to Male Tube Connector into your additional tubing length

- i. *Additional/Extra ¼” Tubing Length not provided but available for purchase at www.hidsips.com*
- ii. *NOTE: If you are using additional tubing from the tubing that comes with your water dispenser, be sure to leave enough tubing for the pointed end of the water filter to insert into*

Water Filter Replacement

**** Note: It is important to replace your filter every 200 gallons ****

1. Remove non-connected end of (1) silicon tubing from water source
2. Press button of (1) silicon tubing female QCD and pull (1) silicon tubing and female QCD away from (2) filter
3. Gently pull tubing of your water dispenser off of the pointed end of your (2) water filter
4. With new filter (available on www.hidsips.com)