

FREESPIRIT

RECREATION



HIGH COUNTRY V2 KING AND MINI

INSTRUCTION MANUAL

DEAR FREESPIRIT FAMILY,

As a family owned and operated business, it is our hope that as you get out there and use the Freespirit products, you feel like a part of our extended family and feel like we are all out there exploring this great planet *together.*

Our goal at Freespirit Recreation has always been to re-invent the roof top tent from the ground up. We work hard to create the best designs using the best products that allow for a fast and easy set-up. We want you spending more time *exploring and enjoying life.*

At FSR, our goal is to listen to you-our customers. Thank you for your feedback and insight as we developed the High Country V2 King and Mini! We are excited for you to experience the all new V2!

You have asked us to be innovative, to provide the best quality, to provide great customer service, and to keep creating products that *Elevate Your Adventure* so stay in touch with us!

Follow us on social media and on our website, www.gofsr.com.
Have questions for us?
Reach out, we are here to help!
sales@gofsr.com

Oh, and because we have to put this in here...
PLEASE REVIEW THIS INSTRUCTION MANUAL BEFORE USING
YOUR HIGH COUNTRY V2 KING AND MINI.

From our Freespirit family to you, ***THANK YOU*** for your purchase.
We hope that it really will *Elevate Your Adventure!*



Tanner Tewes, Co-President
Ben Tewes, Co-President
Kristine Sewell, Chief Project Officer/Wholesale Director
Renee Tewes, Board of Directors

TABLE OF CONTENTS:

PRODUCT OVERVIEW (PAGE 4-5)

PRODUCT SPECIFICATIONS (PAGES 6-7)

RECEIVING YOUR ROOFTOP TENT (PAGE 8)

INSTALLING YOUR HIGH COUNTRY V2 ROOFTOP TENT (PAGES 8-11)

OPENING YOUR HIGH COUNTRY V2 (PAGES 12-15)

CLOSING YOUR HIGH COUNTRY V2 (PAGES 15-18)

LED LIGHT CONTROLS, GENERAL MAINTENANCE, STORING YOUR ROOFTOP TENT, AND IMPORTANT NOTES (PAGES 19-20)

CONTACT INFORMATION (PAGE 20)

PRODUCT OVERVIEW:

The longest standing model in the FSR rooftop tent lineup has been enhanced and updated.... introducing the High Country V2 King and Mini!

So, what has changed? The High Country V2 boasts an entire new take on the traditional softshell tent by using a hybrid design. That means you get all the benefits of a traditional soft-shell tent like 90" inches of sleeping length, a smaller footprint on your vehicle when closed, reduced overall height and weight, plus now you have the ability to transport extra gear on top of the tent with the addition of our High Country V2 crossbars.

We designed this tent to be a true four-season addition to your adventures. The tent includes our Tri-Layer Technology on the interior roof, windows, and doors. We have also included nocium bug mesh screens, PVC windows, and 5" round hose connects for those cold winter nights or hot summer days (heat/AC). This tent was designed for all your adventures across all four seasons.

The High Country V2 is available in two sizes: Mini and King.

Exterior Tent Features: The High Country V2 boasts several exterior features that are new for 2023-2024. Starting with a hybrid exterior shell design that allows you to always keep your cover on. It has a fiberglass honeycomb top and bottom shell which allows for crossbars to be added on the top of the frame which allows you to store gear. Now onto the tent skin starting with a zip on/off full coverage rain fly with PVC exterior windows. The unique feature about our full coverage rain fly is that it is not connected to the tent body. Why is that important? The rain fly creates a void between the tent body and the tent fly that allows the air to circulate around the tent and creates a natural insulation layer. That benefits you in the heat and colder temperatures by not allowing the elements to heat up your interior tent body, hence regulating temperature with no direct contact to the interior tent space.

Interior Tent Features: Once you are fully set up and get the chance to climb inside the new High Country V2 you will get the feeling that space is abundant. That is one of the best features of the hybrid foldout design. In our mini version, you are getting 50" of mattress width and a whopping 90" of sleeping length. In the King you are getting 77" of mattress width and the same 90" of sleeping length, that is larger than a king size bed. The features don't stop with an abundance of space, we have included our four-season Tri-Layer fabric on the ceiling of the tent, the windows, and the doors accompanied by our 300D tech fabric for the body.

As with every FSR tent our dimmable LED feature comes standard with the tent as well as four strategically located gear pockets on the interior.

Note: If you want to take your comfort to another level you can upgrade to our Air Core mattress which will allow you to store bedding inside or our new cloud topper mattress cover. (Note: Bedding stored inside is recommended with the air core mattress not with foam mattress).

Big Thanks:

To all of you who spoke to us at shows, emailed, and communicated with FSR about enhancements we could make to the High Country Series, we want to say *THANK YOU!*

You are the reason we do this and we couldn't have done it without you.

Cheers to the High Country V2 Mini and King! Happy Camping!



PRODUCT SPECIFICATIONS FOR THE HIGH COUNTRY V2 MINI AND KING:

Fly: Patented LW-Tech Fabric PU Coated 5000-9000mm

Tent Body: 300D poly oxford PU Coated Body

Roof, Window, Doors: Tri-layer 150D+Poly+150D

Floor: 210D Polyoxford PU Coated 3000mm

Frame: Aluminum, Telescopic aluminum ladder

Base Frame: Fiberglass Honeycomb plate top and bottom

Mattress: 2.25" foam mattress with Tri-layer protective cover

Air Core mattress optional upgrade allows you to store bedding inside. (Upgrade)

Mini Specs:

48.5" Wide X 58" Long X 10.5" Tall

Weight: 119lbs without ladder, 131lbs with ladder.

Interior: 50" wide, 90" long, 40" peak interior height.

King Specs:

48.5" Wide x 85" Long x 10.5 Tall

Weight: 154lbs without ladder, 166lbs with ladder

Interior: 77" wide, 90" Long, 42" peak interior height.

Dimensions and Specifications Chart for Size Comparison:

Exterior Closed Dimensions King / Mini	10.5"h X 48.5"w X 85"L / 10.5H * 48.5"w * 58"L
Interior Open Dimension King / Mini	42"h * 85"w * 97"L / 40"h * 58"w x 97"L
Interior Mattress Dimensions King / Mini	77"w * 90"L x 2.25" / 50"w * 90"L x 2.25" thick
Mounting Rails (center to center)	29" both
Mounting Rails Length King / Mini	82.5" Rail Length / 56" Rail length
Mounting Rails Width	1.8" / 1.8"
Top Crossbar Rail Length King / Mini	69" / 44"
Front Door Dimensions	36"w x 24"h
Back / Side Window Dimensions	32" x 24" back / 42" x 24" sides
Shoe Bags	2 shoe bags
Interior Pockets	{2} 10x12 / {2} 10x6.5 same king/mini
Room Inside for Gear	4" inches with Air-Core Mattress upgrade
Weight	154 lbs king / 119lbs mini
Weight Capacity	750 lbs
Tri Layer Materials	3 Layers of 150D Poly-Oxford with 90g/M2 Poly-fil
Mounting Bracket Size	1.2"w X 7"l X .75" deep (Fits up to 3" bar)
Mounting Bolt Length	M8 - 1.25mm X 2"l
Carrying Capacity when Closed	225 lbs
Carrying Capacity when Open	Not applicable on foldout. Remove gear.
Max ladder Height Open	90.5"
Ladder Height Collapsed	30"
Ladder Width / Weight	19" / 12lbs
Mounting Bracket Size	1.2"w * 7.1"L * .75' deep (Fits up too 3" bar)
Mounting Bolt Length	M8 1.25mm * 2"L

RECEIVING YOUR ROOFTOP TENT:

Your High Country V2 Mini or King will arrive via a freight company to your door. Our shipping team will send tracking information with delivery instructions after the order is placed.



Your rooftop tent will arrive on a pallet.

There will be protective packaging on and around your rooftop tent, please be careful when removing this so you don't scratch or dent the tent.




INSTALLING YOUR HIGH COUNTRY V2 MINI OR KING ON YOUR ROOF RACK:

IMPORTANT NOTE:

When installing your new rooftop tent, please make sure your rack has the required dynamic load to support the tent. For the High Country Mini, your rack should support up to 132lbs of dynamic load and the King requires 166lbs of dynamic load.

Approved by FSR for roof racks: Leitner Designs, Xtrusion Overland, CBI/Prinsu, Sherpa Racks, Front Runner, Kuat Racks, Uptop Overland, Billie Bars, Yakima Aero Bars, Rhino Rack Vortex Bars, Rhino Rack Platforms, if you have any questions on racks, please contact our sales team for more information.

HARDWARE KIT IS INSIDE THE SHOE BAG IN THE ROOFTOP TENT:

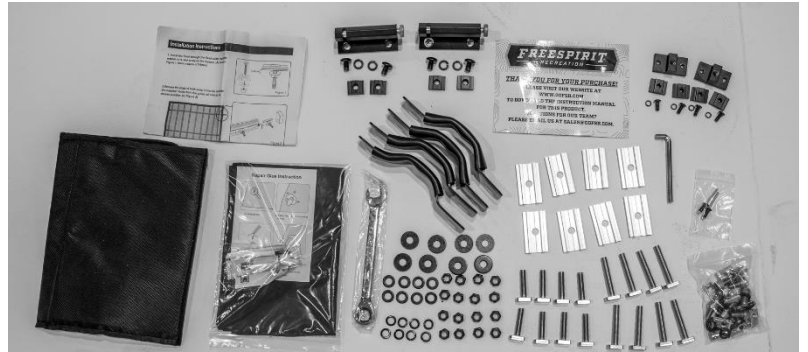

INSTALLATION STEPS:

1. Install your roof rack per the manufacturer's instructions and in the load bearing position on the vehicle. With two or more people, lift the High Country V2 Mini or King Rooftop Tent upward, beside the vehicle and put it on top of the roof rack. Adjust the tent to the roof rack's center. If your vehicle has a rear door that opens vertically, please ensure the door can open and close with the High Country V2 Rooftop Tent on top of your vehicle.
2. Slide the M8x50 hexagc bolts into the rails from both sides ensuring you have positioned 8 of them. Lastly, fix the u-shape stator.




3. Ladder Installation: The ladder on the High Country V2 is removable by a quick release mechanism. It is not meant to be stored on the tent during travel but inside your car or inside the tent. The ladder is an essential piece of equipment, and you want to take precautions to take care of it. The cycles of moisture can run havoc on a telescoping ladder especially during freeze and thaw cycles.



4. To install the ladder, you will need to identify the two quick release plates and install them as shown in the diagram below using a lock washer and bolt. This should be centered on the top rails of the tent to ensure proper use of the tent. The ladder should be mounted on the opposite track without the rubber guard that is present on the opposite side.



5. Support Pole Installation: Each High Country V2 comes with two threaded support poles. At this point in the installation we are going to find the two threaded plates and install them 2"-4" from the end of the top rails. To do this you will need 4 plates to slid into the track, 4 bolts, and lock washers to attach firmly. Once you flip the tent open, these will face the ground and give additional support to the fold outside of the tent.

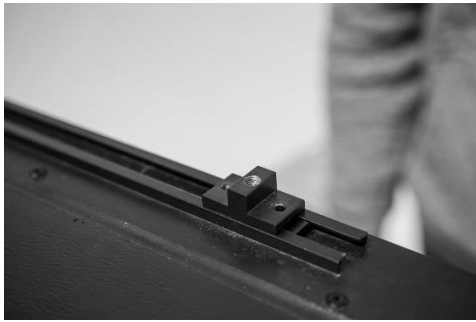

OPENING YOUR HIGH COUNTRY V2:

1. Attach ladder to ladder mounts on top of the High Country V2.



2. Extend the ladder.



3. Release all straps and pull up the cover.



4. Use the ladder as leverage to open the High Country V2.



5. Set the ladder at the correct height for position.



6. Thread in the support poles on either side (Found inside the front of your tent.)



7. Climb up the ladder and sit on the edge of the tent.
8. Pull the U-Bar over your head and use the stretcher pole to extend the rainfly.



9. Setup is complete.

CLOSING YOUR HIGH COUNTRY V2:

1. Remove the stretcher poles and store away.



2. Raise the tent using the ladder and fold Ubar.



3. Tuck in fabric.



4. Release the ladder from the ladder mount and remove ladder from the top of the tent, store in vehicle.



5. Pull down and secure the straps.



6. Closing is complete.

LED LIGHT CONTROLS:

1. Requires USB adapter, Battery pack required.
2. Press button to power on.
3. Press up or down to dim the lights.



GENERAL MAINTENANCE:

1. Before you pack up the tent, please make sure the fabric is dry.
A microfiber towel works great with FSR Tent Cleaning products.
2. Make sure all your fabric is tucked away properly and free from any snags.
3. Double check that your latches are closed before traveling.
4. Always check your hand tight nobs on your mounting hardware before traveling.

STORING YOUR ROOFTOP TENT:

1. If you choose to leave your rooftop tent on top of your car for long periods of time and especially during times of extreme weather conditions, please make sure to take care of your equipment with the FSR rooftop tent cleaning kit.
2. If you choose to remove your rooftop tent for the winter season, please use the protective cover provided when it was shipped to you to add a little more protection to the outside of your tent. We recommend that you store your tent on a flat surface just like it came out of your car.

IMPORTANT NOTES:

1. When taking down your tent, please make sure there are no other objects left in the tent.
2. Please don't put extremely heavy objects on the tent when it is closed.
3. The cover for the mattress is hand washable. When cleaning the tent, please use a wet rag to clean and wipe it.
4. Please check all the connecting points of the tent to the roof rack and vehicle to make sure all points are locked.
5. Please don't jump inside the tent because it can cause damage from uneven force.
6. Always keep the tent in the closed position when driving your vehicle.
7. Please use your best judgment in extremely windy conditions on whether to use your tent or not.
8. If you hear abnormal noise when setting up or taking down your tent, please check the rail and all connection points right away to make sure the tent is on the roof rack and vehicle correctly.



FREESPIRIT
RECREATION

**120 Capital Drive
Golden, CO 80401**

GOFSR.COM

Have Questions? Please reach out to sales@gofsr.com.

#gofsr