


KYK Generation II - Filter Replacement

When to change the filters

The LCD screen displays the amount of liters filtered by Filter 1 and Filter 2 and when the counter reaches 70 on either filter, a message will tell you to change that filter. If you do not change that filter before the counter reaches 0, the KYK product will stop functioning until you change it.

※ **Warning!** If your water ever smells bad or the flow rate is severely reduced, you will need to change the filters even though the display shows remaining filter life. This will happen in the case of overly contaminated or hard water. If your supply water is really bad, you'll need to install pre-filters.

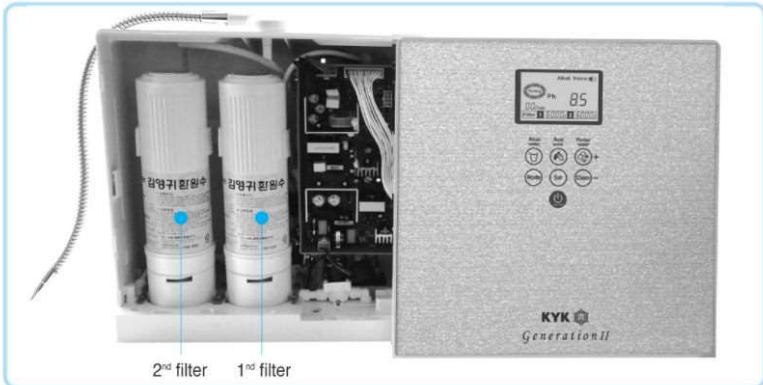

- 1 Take out the power supply cord of the product.
- 2 Once raise up the front cover pushing the circular hook of the both sides central part simultaneously in front of the product, the front cover is opened. Raise up the front cover to the 1/3 extent of the product then take it out.



3 After placing the front cover on the right side, grab the filter to be exchanged (1st filter(right), 2nd filter(left)) and pull it forward then separate the filter sensing sensor cable.

(Filter sensing sensor chip is attached on the filter upper part and it is taken out when raise up after pressing the chip front part.)

4 Grab the filter middle part by hands, turn it to the right direction(OPEN) and pull upward then take out.(New filter should remove the passing sticker attached on the below lower entry exit tube without fail.)

5 After adjusting well the position of the new filter lower part on which filter is to be mounted to the filter socket part of the product, turn toward the left direction(CLOSE) marked on the new filter upper part to the last then mount exactly.

⚠ Caution : Be careful not make the rubber o-ring of the connecting part between filter and main body secede. If ever rubber o-ring is seceded or filter is not matched well with the main body, water may be leaking. Thus be cautious.

6 Insert the filter sensing sensor cable into the exchanged filter then push backward.

7 Insert cover up getting down the front cover of the product from the topside.

8 Plug a power supply cord again and connect then touch the activating sensor.

Once wash for about 20 seconds then it is in a stand-by state, touch the alkaline water sensor and get water flowed for about 2~3 minutes extent then drink.