

INSTRUCTIONS FOR INSTALLING YOUR WESLOCK PRODUCT



Lexington/ Colonial 1400 Series Active - Entry Handle

PARTS INCLUDED


Do not insert key, or unlock handle before installation. Doing so may result in removal of the cylinder assembly.

Exterior Grip Assembly
Exterior handle & thumb piece.




Interior Lever/ Knob Assembly
Reversible


Interior knob /lever, rosette & spindle




Interior Mounting Plate

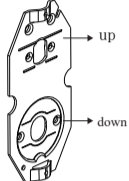


Exterior Deadbolt Assembly



Deadbolt Latch
Engages strike with door closed.



Thumb Press Latch
Engages strike with door closed.



Foot Screw Cap Assembly




* Only use one (1-2/5" OR 1-4/5") screw based on thickness of door.


Entry Keys (x2)
For unlocking the deadbolt.




Faceplates (x4)
For covering a mortise latch.



Strikes (x 10)
Install on door frame.

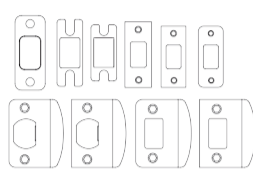

Wood Screws (x8)
For mounting strikes & faceplates.



Metal Screws (x8)
For mounting strikes & faceplates.



Interior Escutchen Screw (X2)



For mounting interior deadbolt assembly.

Assembly Screws (x4)


Pre-installed on Exterior Grip Assembly for mounting interior knob / lever assembly. (1-2/5" OR 2")




For mounting interior deadbolt assembly. (1-2/5" OR 2")

REQUIRED TOOLS


Measuring Tape
Or other measuring tool

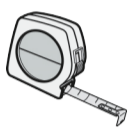

Screwdriver
Phillips and flat blade




Wood Chisel
*Only if prepping a new door



Allen Wrench



Writing Utensil
*Only if prepping a new door



DOOR PREP INSTRUCTIONS 2 WESLOCK.COM

GLOSSARY OF TERMS

Technical language used in this document

MORTISE

CROSS BORE

THUMB PRESS LATCH


EDGE BORE

DEADBOLT LATCH


DETERMINE THE BACKSET OF YOUR DEADBOLT LATCH AND THUMBPRESS LATCH

The length of your latch assembly will be determined by your backset measurement.

MEASURE THE DOOR

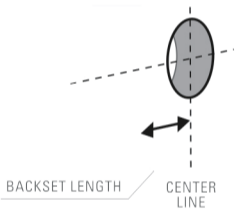


Measure distance between center of crossbore and edge of door.

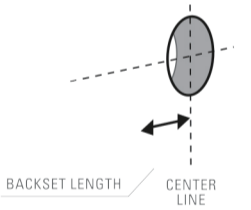


Measure distance between center of crossbore and edge of door.

IF MEASUREMENT = 2 3/8"

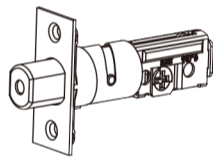

KEEP ADJUSTMENT PIN IN PLACE


Latch leaves the factory with this setting. No adjustment is necessary.

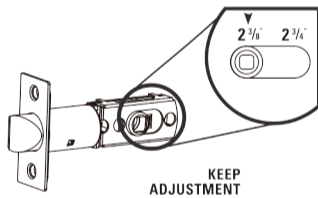

KEEP ADJUSTMENT PIN IN PLACE


IF MEASUREMENT = 2 3/4"

1 GRASP ADJUSTMENT PIN ON BOTH SIDES

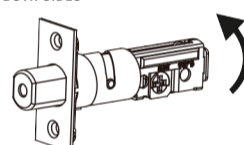

LIFT UP AND SLIDE BACK TO 2-3/4" SLOT

Slide adjustment pin back to 2 3/4" slot.

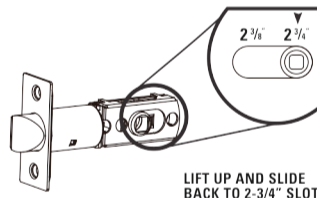

LIFT UP AND SLIDE BACK TO 2-3/4" SLOT


No adjustment is necessary. Leave extension attached to latch assembly.

INSTALLATION

Deadbolt latch must be extended prior to installation.

7A. Insert Mortise Latches


MORTISE

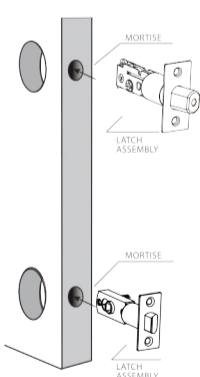

7B. Install Exterior Deadbolt and Grip Assemblies


A. Insert deadbolt tailpiece into cam in deadbolt latch.

B. Align exterior square spindle and spindle posts into proper holes (2-3/8" or 2-3/4") on latch. Slide on. At same time, align and insert foot screw through pre-drilled hole.

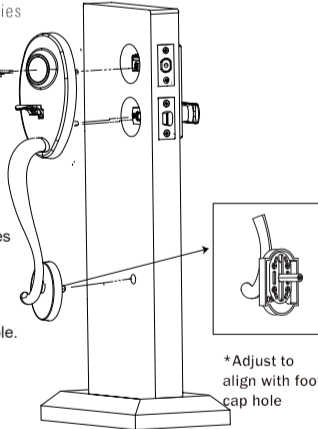


*Adjust to align with foot cap hole

7C. Install interior Mounting Plate with the 4 mounting screws and then install interior plate with the 2 escutcheon screws provided.
* Note make sure the deadbolt is in the locked position with thumb turn pointing to the edge of the door for the lock to function properly.

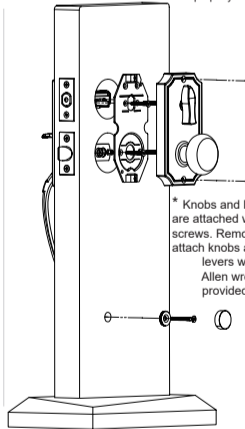

* Knobs and Levers are attached with set screws. Remove and attach knobs and levers with the Allen wrench provided.

7D. Install Strikes

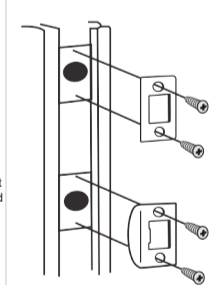

THANKS FOR CHOOSING US. WE HOPE YOU ENJOY YOUR NEW WESLOCK DOOR HANDLE.

WESLOCK WARRANTY INFORMATION

WESLOCK warrants to the purchaser that the products shall be free from defects in material workmanship for the LIFETIME of the product. Provided the product was purchased from an authorized WESLOCK dealer, Weslock's sole obligation under this warranty shall be to repair or replace product which WESLOCK determines to be defective. After such product is returned to WESLOCK by the purchaser with proof of purchase and with shipping charges prepaid, will this warranty be honored. Homeowner - if the product was installed as original equipment on a new home, you must provide the name of the builder, the date the home was built and your move-in date. If a mechanical defect has occurred, it is your right by this warranty to contact Customer Service in Tulsa, Oklahoma at (800) 575-2658 to arrange the return of the lock. This warranty DOES NOT cover products which malfunction due to improper installation or misuse. **Please register your product at Weslock.com.**

WARRANTY TERMS

FINISH

MECHANICAL

Elegance Collection

Limited Lifetime

Limited Lifetime

ADDITIONAL CUSTOMER RESOURCES

Online

WEBSITE

For our full product catalog, and video instructions, go to:
www.weslock.com

TWITTER

To learn about promotions, and other news, follow us at:
twitter.com/Weslock1

YOUTUBE

Browse our video library, or leave us comments at:
youtube.com/WeslockDoorHardware

FACEBOOK

See what we're up to, or ask us a question at:
facebook.com/WeslockDoorHardware

Direct

PHONE NUMBER

1-800-575-2658
BOLT

FAX NUMBER

1-918-294-3869

EMAIL

customerservice@weslock.com
or
warranty@weslock.com

TEMPLATE

