

SeeDevil

www.SeeDevil.com




LED BALLOON LIGHT

300 WATT

500 WATT

700 WATT

OWNER'S MANUAL

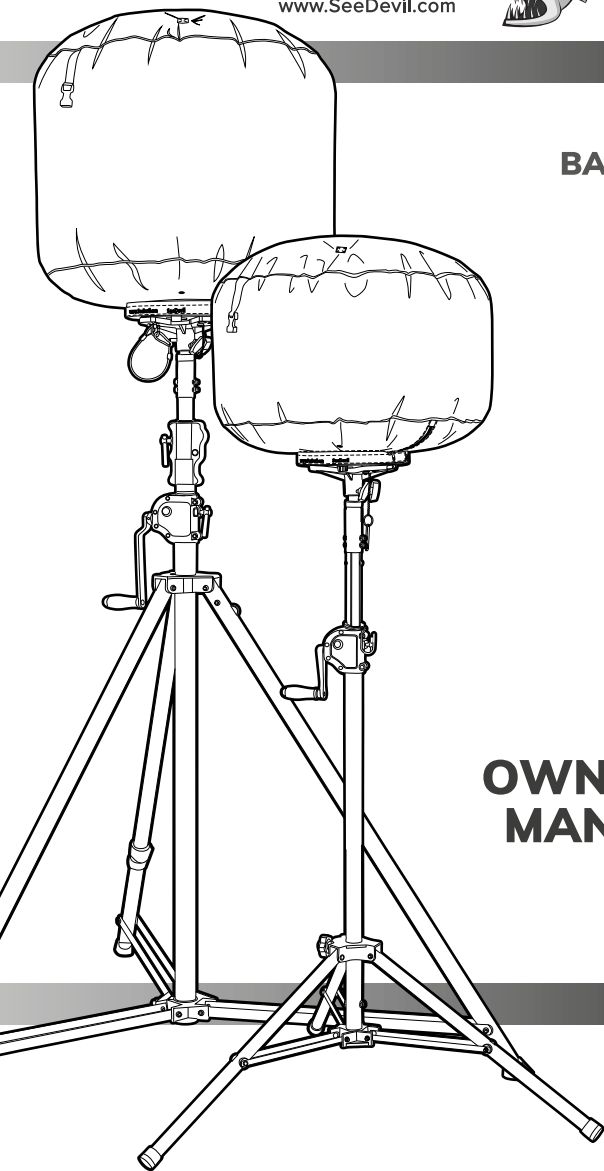



CALIFORNIA PROPOSITION 65 WARNING



This product may contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

For more information: www.P65Warnings.ca.gov

Read this manual carefully before operating this machine. The SeeDevil Owner's Manual should stay with the machine if it is sold.

DO NOT THROW AWAY OWNER'S MANUAL.

SeeDevil Pro-Series Balloon Light Kits
Owner's Manual

© 2019 by Rezek Engineering
2nd Edition, July 2019

Any reprinting or unauthorized use without
the written permission of Rezek Engineering
is expressly prohibited.

Printed in U.S.A.







Part Number: SD-OM-JUL19-G1



Congratulations on your purchase of your
300/500/700 Watt SeeDevil LED Balloon Light.

This manual includes assembly and product use information. Please read the manual carefully before using to ensure proper use and safety while operating and transporting your SeeDevil LED Balloon Light.

IMPORTANT MANUAL INFORMATION

-  This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death. This symbol is also used to indicate a hazardous situation which, if not avoided, could result in serious injury or death.
-  **WARNING:** USING THIS PRODUCT FOR ANY OTHER PURPOSE OR IN ANY OTHER WAY THAN EXPLAINED IN THE OWNER'S MANUAL COULD LEAD TO DEATH OR SERIOUS INJURY.
-  **WARNING:** KEEP OUT OF REACH OF CHILDREN.
-  **WARNING:** CHILDREN CAN SUFFOCATE BY PLAYING INSIDE UNINFLATED LED BALLOON LIGHT DIFFUSER. TO AVOID RISK, PLEASE KEEP LED BALLOON LIGHT DIFFUSER AND ANY BAGS AWAY FROM CHILDREN & BABIES. DO NOT PUT ANY BODY PARTS INSIDE THE DIFFUSER OR CARRY BAGS.
-  **WARNING:** THIS PRODUCT CONTAINS SMALL PARTS THAT COULD CAUSE CHOKING. TO AVOID RISK, PLEASE KEEP AWAY FROM CHILDREN & BABIES.
-  **WARNING:** PLEASE READ AND UNDERSTAND THIS MANUAL COMPLETELY BEFORE OPERATING THE MACHINE.

For additional information, please contact a SeeDevil dealer, visit www.SeeDevil.com/contactus, or call 877-659-5476.

SeeDevil is constantly improving products and reserves the right to make product changes at any time without notice and with no obligation to any products designed or manufactured at any time. This manual contains the most current product information available at the time of printing, there may be minor discrepancies between your product and this manual. If there are any questions or concerns, please contact a SeeDevil dealer or visit www.SeeDevil.com/contactus. This manual should be considered a permanent part of this SeeDevil LED Balloon Light and should remain with this product when resold.

TABLE OF CONTENTS

1. Safety Information	4
1.1 Falling or Tipping Over	4
1.2 Electrical Shock	5
1.3 Operation in Weather Conditions	5
1.4 Fire/Explosion	5
1.5 High Temperature	5
1.6 Modification to Fixture	5
2. Product Description	6
3. Control Function	11
4. Preparation & Operation	14
4.1 Tripod Preparation	15
4.2 Tripod Operation	16
4.3 Lowering Tripod Telescoping Function	17
4.4 LED Balloon Light Fixture & Diffuser Preparation	18
5. Maintenance, Storage & Transport	22
6. Accessories	24
7. Consumer Information	32
8. Warranty Information	34
9. Warranty Statement	36

1. SAFETY INFORMATION

1.1 WARNING: FALLING OR TIPPING OVER

- Set up and place the tripod on a flat level surface. Ensure that all legs of the tripod are completely extended and the screw knob on the bracket connecting the legs to the tripod center at the base is firmly tightened. Do not use on unlevel surface.
- Never transport or move a fully assembled SeeDevil LED Balloon Light. Never move the LED Balloon Light while mounted on the tripod or while the tripod unit is extended. If the unit must be moved or transported, first turn power off, unplug, remove the fixture and close the tripod, then move.
- Before operation make sure the LED Balloon Light is properly fastened to the tripod. Firmly tighten the two screw knobs on the fixture before use.
- Before extending or retracting the telescoping function on the tripod, be sure that the two T-knobs are loosened. Retracting the unit without loosening the T-knobs could result in damage to the product and/or serious injury or death. ONLY TIGHTEN T-KNOBS FOR TRANSPORTATION. TIGHTEN SLIGHTLY – OVERCRANKING WILL DAMAGED THE TRIPOD WHICH COULD LEAD TO DAMAGE TO THE TRIPOD RESULTING IN EQUIPMENT MALFUNCTION, SERIOUS INJURY OR DEATH.
- Do not operate this unit in conditions with wind gusts at or over 25-30 MPH. Doing so may result in injury or death. To increase stability add sand bags or ground stakes.
- Whenever possible, anchor tripod to ground with anchor bolts.
- Only initiate tripod legs leveling when tripod unit is completely set up and before mounting the LED Balloon Light Fixture to the tripod. Be mindful of pinch points and be cautious not to pinch hands or any body parts before, during and after operation.

1.2 WARNING: ELECTRICAL SHOCK

- DO NOT operate this unit in areas exposed to water. Turn power OFF and unplug before handling the unit.

Failure to do so may result in electrical shock, serious injury or death.

- NEVER touch the machine with wet hands or electrical shock may occur.
- If your receptacle does not contain a ground prong, connect the ground lead of the machine to the ground terminal of the power source.
- Extension cords should be protected by a tough flexible rubber sheath (IEC245) or the equivalent to withstand mechanical stresses.

1.3 OPERATION IN WEATHER CONDITIONS

- DO NOT OPERATE IN WIND AT OR OVER 25-30 MPH. IF WIND EXCEEDS 15 MPH, USE STAKES TO ANCHOR THE TRIPOD IN THE TRIPOD FEET, OR ENOUGH SANDBAGS TO ADEQUATELY ANCHOR TRIPOD.
- DO NOT OPERATE IN EXTREME WEATHER CONDITIONS, FOR MORE INFORMATION, CONTACT SEEDEVIL CUSTOMER SERVICE.

1.4 CAUTION: FIRE/EXPLOSION

- Please use in a ventilated area.
- DO NOT USE IN CLOSE PROXIMITY TO COMBUSTIBLE GAS SUBSTANCES.

1.5 CAUTION: HIGH TEMPERATURE


- DO NOT touch LED unit when product is turned on. This may result in burns or other serious injury. Always wait at least 10 minutes to handle after turning power to the unit off, or until the unit is cool.

1.6 CAUTION: MODIFICATION TO UNIT

- DO NOT modify or remove any parts from the unit. Modifications and removal of parts may lead to serious harm or death. All parts are designed for intended use of this product. Any modification or removal of parts violates all warranties and agreements, and may lead to serious harm or death.

2. PRODUCT DESCRIPTION


1 LED Balloon
Light Diffuser

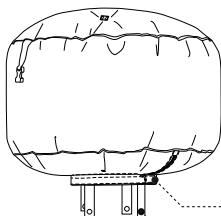

2 LED Balloon
Light Fixture




3 Tripod

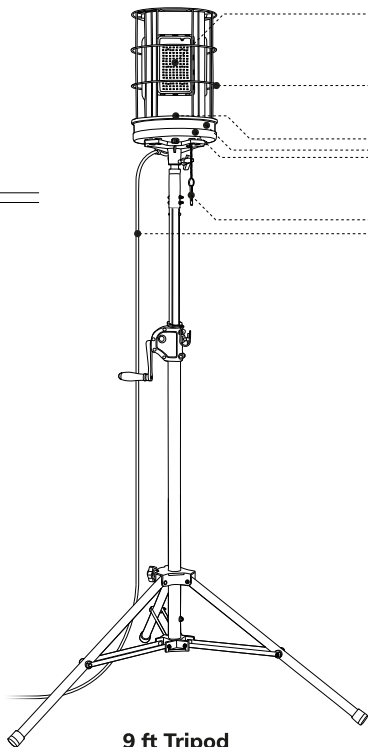


9 ft Tripod

300 W

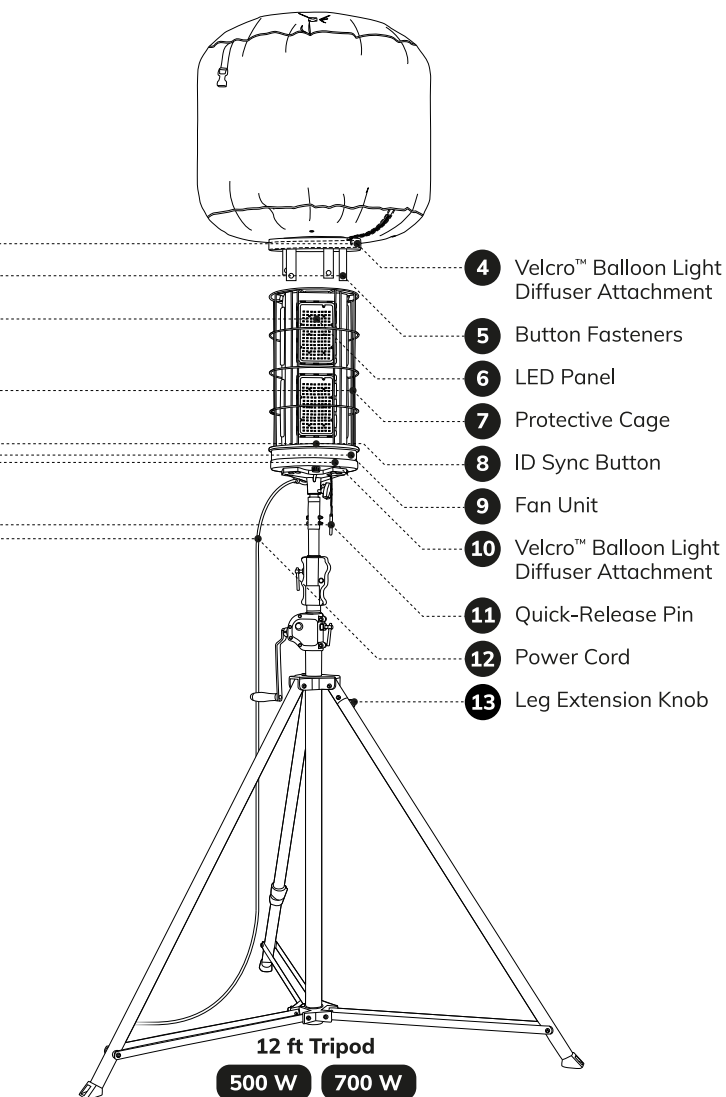


LED BALLOON LIGHT FIXTURE


BOTTOM VIEW

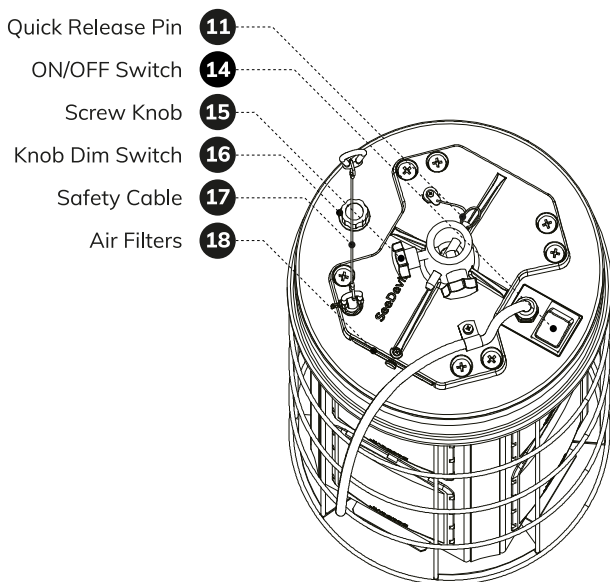

9 FEET TRIPOD

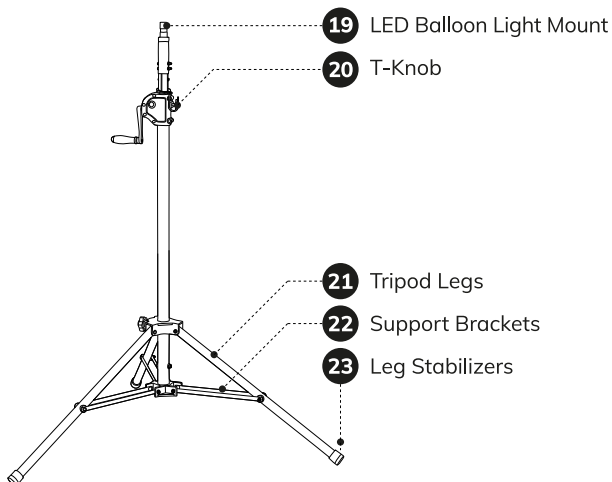

12 FEET TRIPOD

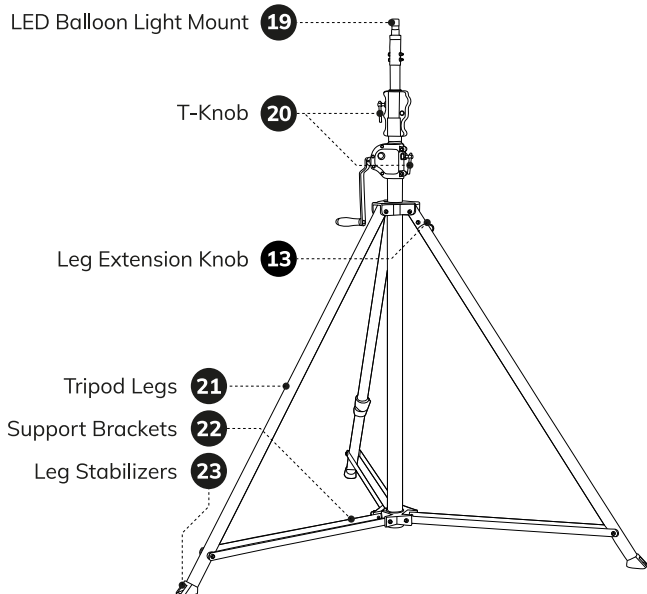

CARRYING CASE



LED Balloon Light Fixture Carrying Case

300 W

500 W

700 W




9 ft tripod carrying case



12 ft tripod carrying case


3. CONTROL FUNCTION

ON/OFF SWITCH:

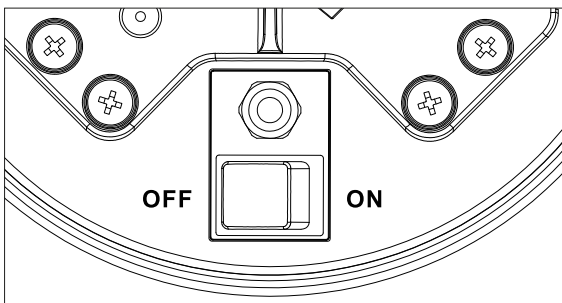


Use the ON/OFF Switch to power the LED Balloon Light ON and OFF. Always make sure the LED Balloon Light Diffuser is correctly mounted and fastened on the fixture when powering ON. Before unplugging the LED Balloon Light, turn the power switch to off. DO NOT touch the ON/OFF Switch or fixture while wet, electrical shock may occur. After turning off the LED Balloon Light, please wait at least 10 minutes before handling, the light may be hot which can cause burns or skin discomfort.

DIMMING SWITCH:

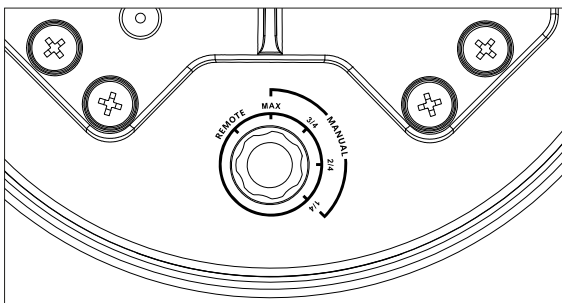

Using the Dimming Switch to choose between 4 maximum light levels: 1/4, 1/2, 3/4 and max power. To utilize 100% power, ensure the knob is turned to max. To use the Remote Control, switch the Dimming Switch to remote. Use the remote control to dim the LED Balloon Light to the desired light output level. Be advised, a 3 second delay occurs after selecting a brightness. Do not touch the Dimming Switch with wet hands or while wet, an electrical shock may occur.

REMOTE CONTROL DIMMING:

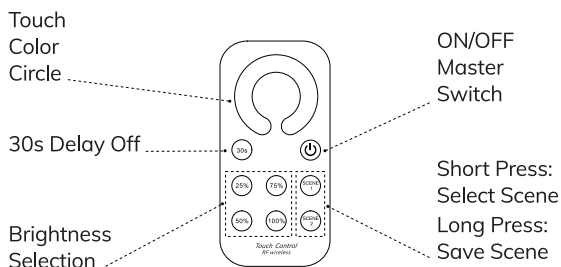

T SERIES WIRELESS REMOTE SPECS:

Working Voltage	3 V (CR2032)
Working Frequency	433.92 MHz
Remote Distance	40 m – 50 m
Working Temp	-20°C – 55°C
Dimensions	L 106 × W 56 × H 9 (mm)
Weight (N.W.)	40 g

- This T Series Wireless remote is dedicated to controlling SeeDevil LED Balloon Lights by radio frequency. Functions include on-off, save scene, brightness selection etc. It uses a working frequency of 433.92 MHz, which is strong and penetrating, not limited by direction or obstacles. With our 433.92 MHz frequency receiver, it is easy to control the dimming of lamps.

- The Remote Control has been synced to the receiver before leaving the factory. If deleted accidentally, you can sync the ID as follows:


On the LED Balloon Light Fixture, you must remove the rubber seal in the access hole marked *RC Link* to access the ID Sync Button, once the RC has been synced as described below, replace the rubber seal.

Sync ID: Press ID Sync Button on the receiver until the running light is on, then press any key on the remote control, once the running light flashes several times, it has been synced.

Cancel ID: Press and hold the ID Sync Button on the receiver for 5 seconds.


- Please note: The remote control will enter dormant status when not used after 30 seconds, please press any key to reactive it.

4. PREPARATION & OPERATION

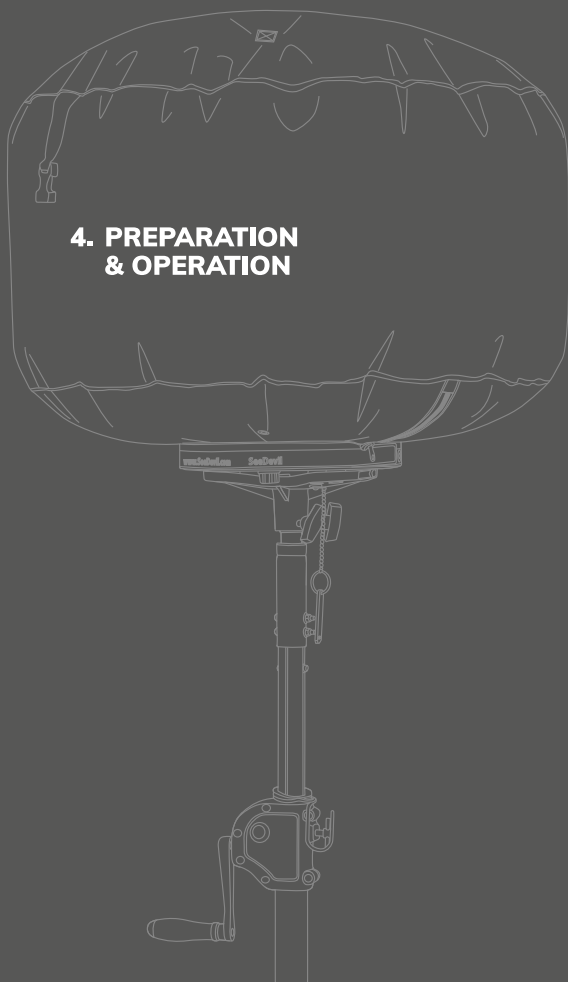

4.1 TRIPOD PREPARATION

- While setting up the tripod, always set up on level ground. Use a spirit level to find a level spot for the tripod. If on uneven ground, use the adjustable third leg to level out the tripod. Once the tripod is level, then continue with the tripod setup. **Never use the tripod on an uneven or unlevel surface, failure to do so could result in an unstable tripod, tipping or falling over of the tripod, which could result in serious injury or death.**
- Allow for a minimum of 5 × 5 feet for the tripod setup location.
- Remove tripod from carrying case.
- Carefully stand the tripod upright, with the three legs on the bottom and the hand crank telescoping unit on the top.
- Undo the Velcro™ strap at the base of the tripod which fastens the legs together for easy storage.
- Pull the legs apart spreading the 3 legs. Make sure legs are fully extended.
- When the legs are fully extended, the center leg stabilizers will reach their stopping point at the bottom of the center tube of the tripod, creating a 90 degree angle.
- Tighten the T-knob at the bottom of the center tube.
- Return to the top of the portion of the tripod and loosen the 2 T-knobs, this will allow the safe operation of the telescoping function.
- On uneven surface, use the leg adjustments to increase or decrease leg length. Never operate if there is a load on the tripod. Beware of pinch points
- **Never adjust the tripod leg while the tripod is under a load (with a LED Balloon Light or any hardware mounted on the tripod). Beware of pinch points when adjusting the tripod legs or any of the tripod features, pinch points may lead to serious injury.**

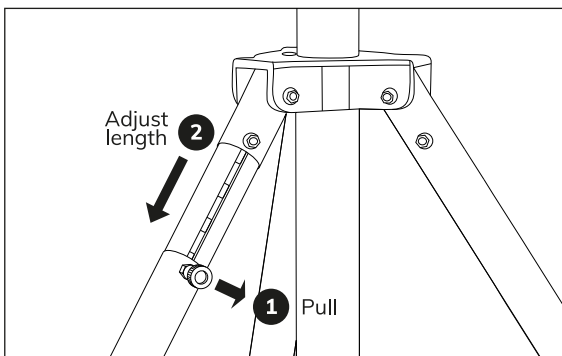

- To adjust the tripod leg, first pull the Leg Extension Knob locking the leg in place, then adjust to desired length and release the Leg Extension Knob into the hole, locking the tripod leg in place. Once set in desired position, continue with the set up process. Only mount hardware on the tripod once the tripod has been completely setup and is level.

4.2 TRIPOD OPERATION

- **NEVER** retract or extend tripod telescoping function without use of hand crank. Failure to do so will result in damage and disrepair to the tripod and may result in serious injury or death.
- **Turn ON** fixture before using tripod telescoping function.
- **ONLY** extend or retract tripod using hand crank.
- Confirm that the LED fixture is securely fastened to the tripod and the screw knob is tightened. Failure to do so may result in serious injury or death.
- Ensure that both T-Knobs near tripod telescoping handle are loosened.
- Crank handle raising the tripod telescoping function,

do not surpass indicator marked 3.6 m for the 12 ft tripod and 2.7 m for the 9 ft tripod. Extend tripod to desired height, keep both T-knobs on upper part of tripod loose, only to slightly tighten top two T-knobs for transportation.


4.3 LOWERING TRIPOD TELESCOPING FUNCTION

- **Before retracting the tripod telescoping function ensure that both T-knobs are loose. Retracting tripod with T-knobs tightened may result in damage to the product and/or serious injury or death.**
- Using hand crank, retract the tripod telescoping function until completely lowered and at the bottom resting position.
- Turn off the LED Balloon Light and unplug from power source. The fixture will be hot, allow fixture to cool off for at least 10 minutes before handling.
- Tighten both T-knobs to secure tripod telescoping function during transport.
- After fixture has cooled, loosen screw knob on fixture and remove fixture from the tripod. Place in case for safe storage.
- Loosen T-knob on the bottom of tripod.
- Carefully close tripod. **Avoid pinching or injuring hands and fingers.** Tighten T-knobs to ensure secure travel.
- Place tripod in carry bag for secure travel.


4.4 LED BALLOON LIGHT FIXTURE AND DIFFUSER **PREPARATION**

The illustrations may differ slightly according to the model.

- Remove the LED Balloon Light Diffuser from packaging.
- Unzip the zipper on the diffuser.
- Find the numbered button fasteners inside the LED Balloon Light Diffuser.


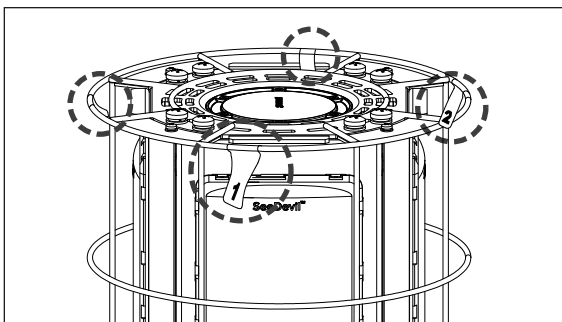


- Match the numbered button fasteners to the numbered tags on the fixture and button the fasteners around the metal support cage to the corresponding number.

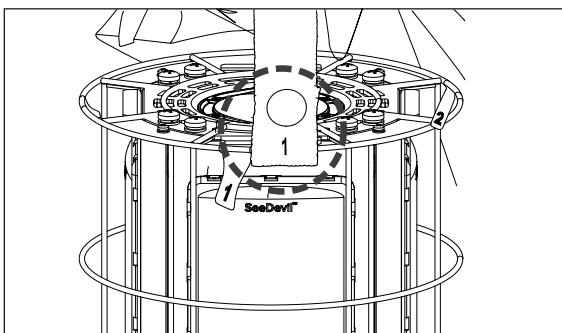


- Loosen the black screw knob on the bottom of the fixture's mounting tube.

- Slide the fixture into the tripod and securely tighten the black screw knob to safely mount the fixture.
- Some SeeDevil mounts and accessories have a quick-release pin, which adds an additional level of security to mounting a SeeDevil LED Balloon Light to a specific accessory (tripod, adapter screw, clamp system, etc.). **The quick-release pin must be used in conjunction with the screw knobs when mounting a SeeDevil LED Balloon Light to an accessory that can use the quick-release pin. Always use the screw knobs when fastening/mounting a balloon light.**

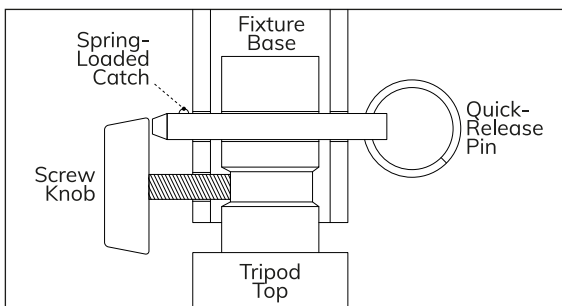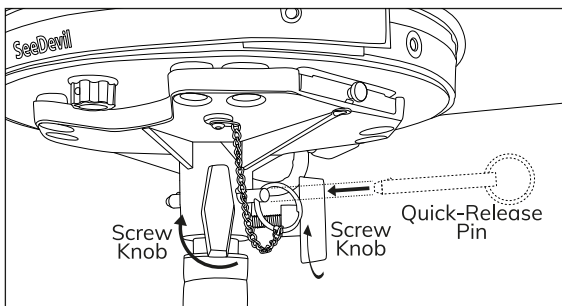


Cross Section

- To use the quick-release pin, simply push it in the hole until the pin is completely through the hole showing the pin and spring loaded catch.

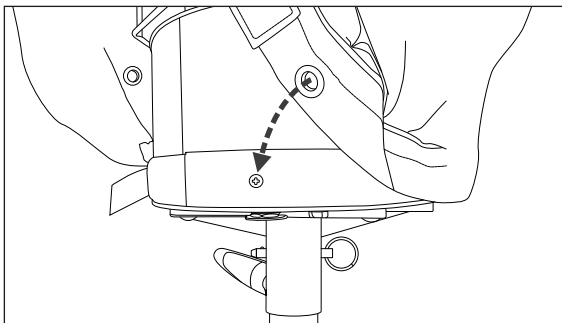

- Line up the metal circle in at the base of the LED Balloon Light Diffuser's Velcro™ with the screw on the Velcro™ of the fixture.

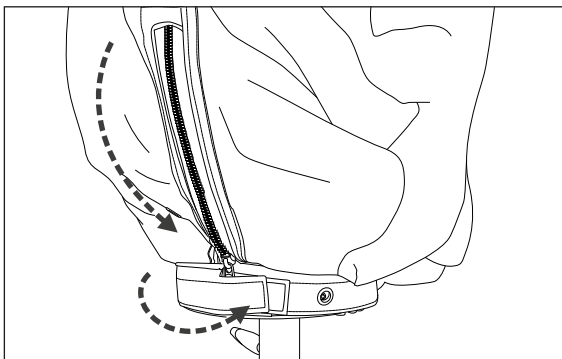

- Firmly and evenly fasten the Velcro™ around the fixture.
- Zip the zipper closed.
- Plug the electrical cord in to the power source.
- Use the ON/OFF switch to turn on the fixture.
- The safety cable is an added layer of security when mounting a balloon light. Using the safety cable and attached carabiner, clip the carabiner to a stable second-

any source of mounting or back to the safety cable itself. Always use the safety cable when applicable. **The safety cable is not a mounting or suspending accessory, tool or method. Do not suspend the LED Balloon Light or any SeeDevil products from the Safety Cable, it is simply meant as a security feature in the event a LED Balloon Light falls from its mount or accessory.**

Top Light 30 W LED:


- The 30 watt high-power LED top light, allows for full top-down lighting of the LED Balloon Light Diffuser when suspended upside-down using the clamp system, adapter screws or custom mounts. When using with event tents, scaffolding, theatre scaffolding and top-down applications, light is disbursed evenly along the ground due to a completely illuminated LED Balloon Light Diffuser. SeeDevil does not support nor warrant any custom mounting or installations of SeeDevil products. Any products modified or used in ways not intended by SeeDevil immediately VOID all warrants, terms and conditions put forth by SeeDevil which may be found at:

www.SeeDevil.com/warranty

or by calling SeeDevil at:

877-659-5476.

5. MAINTENANCE, STORAGE & TRANSPORT

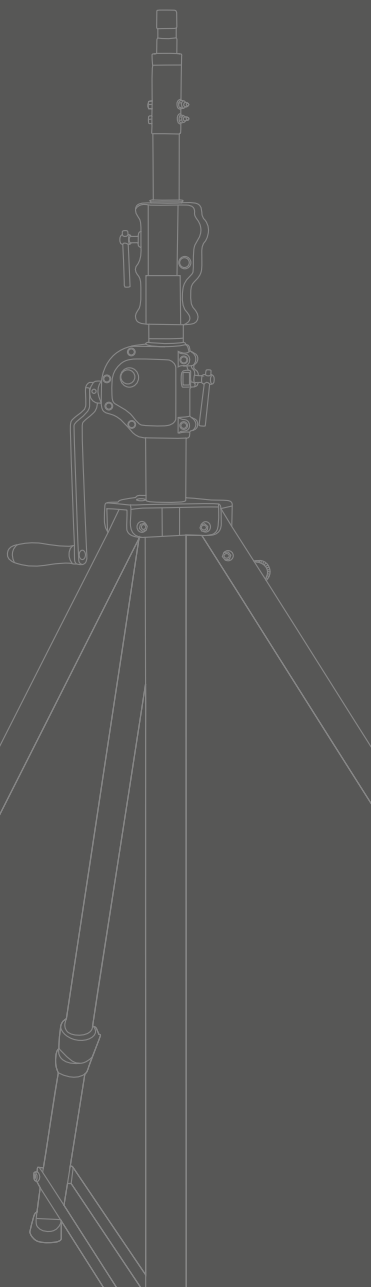

MAINTENANCE

- We recommend cleaning the fixture after every use.
- Before performing maintenance, make sure the fixture is turned off and unplugged from any power source.
- Remove the LED Balloon Light Diffuser. The outside of the diffuser may be cleaned with warm water, wet wipes and/or a light soap solution. The inside of the bag must only be cleaned with warm water.
- Please clean the filter regularly. First remove the filter set screw holding the filter in place. Then remove the filter and begin cleaning using lightly compressed air or a damp cloth to wipe away any dirt or foreign objects. Replace the cleaned filter and reinstall the screw holding the filter in place. If a replacement sponge filter is needed please visit our website or www.SeeDevil.com/contactus for more information.
- To clean the fixture hardware, use compressed air and gently blow out the interior and exterior of the fixture.
- We recommend changing the air filter after every use. For more information visit www.SeeDevil.com.
- To maintain the tripod, simply wipe down with a cloth and warm water. A light soap solution may be used. Make sure to dry the fixture after wetting.
- We recommend servicing the tripod after every use to ensure long lifetime.

STORAGE & TRANSPORT


- After operation, remove LED Balloon Light Diffuser, fold and store in protected area.
- Always store the fixture and tripod in their carry bags to ensure additional protection during transport and storage.
- Store the Balloon Light cover in a clean and dry place.
- If the products are used in weather elements, always clean and dry the products entirely before storage or transport.

6. ACCESSORIES


(Not included)



CLAMP SYSTEM (2" OR 4")

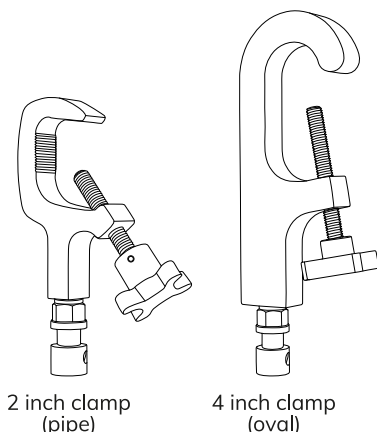


- The clamp system comes in two different sizes, a 2" pipe clamp and 4" oval clamp. The 2 inch clamp is meant for circular objects no larger than 2 inches in diameter. The 4 inch oval clamp is meant for oval tent poles no larger than 4 inches in diameter. When using the SeeDevil clamp system, first make sure the pole, pipe or mounting location suitable for the chosen clamp is strong enough to mount or suspend any objects from them. Only mount the clamp system to locations meant for installing, hanging, clamping or mounting heavy objects to them, such as theatre scaffolding. Install the clamp onto the LED Balloon Light by simply sliding the clamp adapter piece into the LED Balloon Light Fixture mount. Then firmly fasten the screw knobs locking the clamp in place and, if applicable, insert the quick-release pin.
- Then place the clamp on the mounting location with the opening of the clamp completely engulfing the mounting location. Confirm the position while holding the balloon light in place and firmly tighten the clamp down on the mounting location.

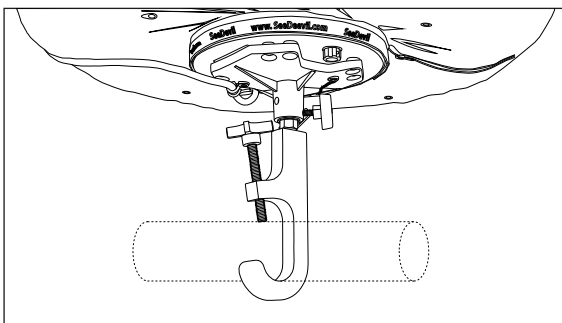


- For added security and safety, use two people while mounting. **Beware of pinch points when tightening the clamp, pinch points may lead to serious injury. Warning, failure to mount to a strong enough destination, improper tightening of the clamp system, improper mounting of the clamp system, can lead to falling objects, unsafe installed equipment and serious injury or death. Please use an expert to install the clamp system.**

Finally, using the provided safety cable, loop it around the pole the clamp is on, and hook it back onto itself.


TRUCK HITCH MOUNT

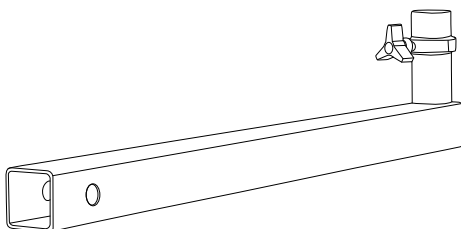

- The Truck Hitch Mount allows for the adaption of SeeDevil lighting products to be used in conjunction with a 2 inch hitch receiver on a vehicle. The Truck Hitch Mount puts your light up to 6ft above the hitch and with enough room to open the tailgate on most standard vehicles. Bring your glare-free SeeDevil LED Balloon Light to tailgate parties, the jobsite, the ranch and more.
- While setting up the trailer hitch mount, **never insert the mount into hitch receiver with a load or a hardware mounted.**
- First, appropriately align the trailer hitch mount with the hitch receiver. Then insert the mount to the receiver. **Beware of pinch points when inserting the mount, pinch points may lead to serious injury.** Once the hole on the receiver is aligned with the hole on the mount, place your standard trailer hitch pin in the hole to secure the mount into the receiver. **Do not drive or move the vehicle while the Truck Hitch Mount and LED Balloon Light are mounted. Failure to do so may result in serious injury or death.**
- Once the mount is inserted and secured, place your extension pole in the provided slip fitter. **Beware of pinch points when inserting the pole to the slip fitter, pinch points may lead to serious injury.** When the pole is placed in the slip fitter and tightened down with the twist knob, mount the light to its adapter and secure the light by tightening all knobs.

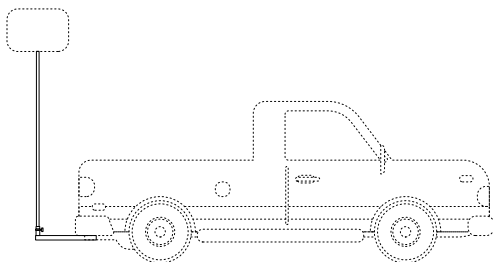


REFLECTIVE DIFFUSER

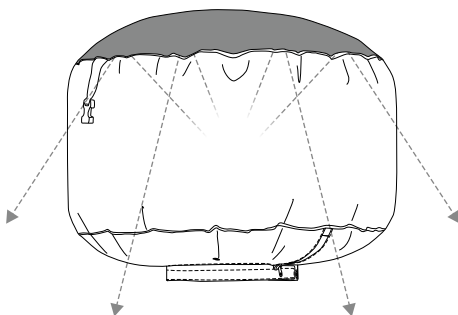

- The reflective cover directs and disperses more light downwards which offers an increase in immediate area luminosity and blocks top-light pollution (good for when working in urban environments).
- **Caution: This is a suffocation/choking hazard. Keep out of reach of children**
- When changing your LED Balloon Light Diffuser, **always make sure the unit is off, unplugged and has had at least 10 minutes to cool down from use.** For easiest installation, place LED Balloon Light Fixture on the tripod and secure the fixture. First start by taking off the Velcro™ at the base of the fixture. Lift the bag up and over the fixture to expose the clips. Undo clips and remove bag.
- **Beware of pinch points when inserting and removing clips, pinch points may lead to serious injury.** Take Reflective Diffuser and start by aligning the clips to the proper number labeled on the fixture. Once all clips are latched in the appropriate position, pull the bag down towards the base of the fixture. Once pulled down, align the grommet hole in the bag with the screw located on the Velcro™. Then fasten the Velcro™ together leaving no gaps, and zip the zipper.

MAGNETIC MOUNT

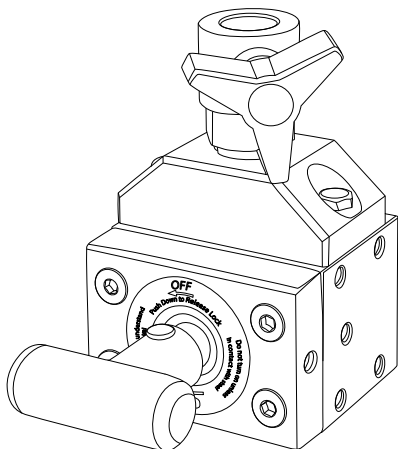

Specifications

P/N: 810106 - MAGSWITCH MagSquare 600

Max Breakaway*: 600 lb / 272 kg

Full Saturation Thickness: 3/8 in / 10 mm

2:1 Shear Working Load*: 61 lb / 27 kg

Net Weight: 3.0 lb / 1.36 kg

Overall Height: 4.17 in / 106 mm

Magnetic Pole Footprint: 2.95 × 2.02 in / 75 × 51.5 mm

*Max Breakaway determined in laboratory environment on 2" thick SAE1018 Steel with surface roughness 63 micro inches. Many factors contribute to the actual breakaway force in each application. Always test the magswitch in each application before deployment. Refer to the magswitch information booklet for more information.

- The magnetic mounts allows SeeDevil products to be mounted to steel using a magnetic base. Equip squad cars, tractors, scaffolding and more with the magnetic mount. Magnetic mounts hold 600 lb max breakaway and 60 lb shear work load.
- **Never try to attach the magnetic mount with the switch in the ON position. Beware of pinch points when attaching the magnet to the surface, pinch points may lead to serious injury. Keep out of reach of children. Make sure all body parts are clear of magnet, do not put any objects between the magnet and the mounting surface.** When the magnet is placed in the desired position and turn the switch to the on position. Once activated, place your light in the adapter and fasten the knob until it is secure. **Never hang upside down, always store magnet in the off position and keep clear of any electronics.**


SANDBAG

- Add to tripod stability with the SeeDevil Sandbags. Fit up to 20 lbs in each sandbag, adding an extra layer of stability to the SeeDevil Tripods.
- When using SeeDevil Sandbags **beware of pinch points when using zipper or hook, pinch points may lead to discomfort or injury.** When using the sandbags, place them over the feet of the tripod or place on the support braces connecting the legs to the center tube. Always use carabiner when applicable.
- **Caution: This does not fully secure the tripod, serious wind or movement may tip the tripod.** Sandbags only help in stabilizing the unit. **When placing sandbags on feet of tripod, beware as this may be a tripping hazard.**

PADDED CARRY BAG

- SeeDevil Carry Bags. Whether you are replacing a damaged bag or opting to protect an investment, SeeDevil Carry Bags are a must. Make it easy to transport SeeDevil lighting components with the heavy duty padded carry bags with shoulder strap and handles. **Caution: Beware of pinch points when using zipper, pinch points may lead to discomfort or injury.**

7. CONSUMER INFORMATION

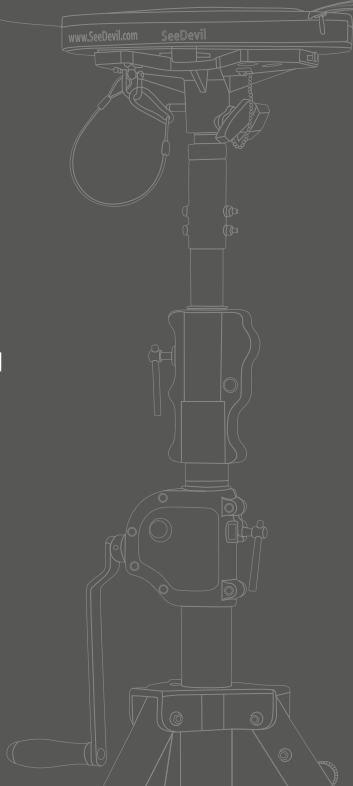

CONSUMER INFORMATION

- The Part Number and Serial Number can be found on the specifications sticker located on the side of the LED Balloon Light Fixture. These are your products identification numbers. Please keep record of these numbers as well as the purchase date.
- Keep these ID numbers in a separate place in case your product is stolen.
- Use the Part Number and Serial Number when ordering parts from a SeeDevil dealer or registering your warranty.



A white line drawing on a dark gray background. The drawing depicts the upper portion of a boat's hull, showing the transom and the mounting area for an outboard motor. A small rectangular hatch is visible on the upper part of the hull. The outboard motor is shown in profile, with the lower unit and propeller assembly visible. The text 'www.SeeDevil.com' and 'SeeDevil' are printed on the side of the motor's upper cowling.

8. WARRANTY INFORMATION

www.SeeDevil.com

SeeDevil



WARRANTY INFORMATION

For detailed warranty information, please visit:
www.SeeDevil.com/warranty

PRODUCT:	SeeDevil LED Balloon Light
PART NUMBER:	
SERIAL NUMBER:	

Please hold onto your SeeDevil Balloon Light purchase invoice in order to claim your 3-Year limited warranty free from defects. For more information, visit:
www.SeeDevil.com/warranty

For general inquiries, please visit:
www.SeeDevil.com/contactus

Or call:
1-877-659-5476



LED BALLOON LIGHT SERIES 3-YEAR LIMITED WARRANTY

SeeDevil™ hereby warrants that new SeeDevil™ LED Balloon Lights purchased from authorized SeeDevil™ dealers in the United States will be free from defects in material and workmanship for the period of the time stated herein, subject to certain stated limitations. In order to claim warranty, products must be registered via www.SeeDevil.com. SeeDevil™ voids its obligations to warranty on any and all products that are not registered within 90 days of purchase. Please keep purchase order/invoice for registration purposes, failure to do so may result in the inability to register SeeDevil™ products. For warranty assistance please call 1-877-659-5476 or email info@SeeDevil.com

THE PERIOD OF WARRANTY: any new SeeDevil™ LED Balloon Light purchased from an authorized SeeDevil™ dealer or SeeDevil™ in the United States will be warranted against defects in material and workmanship for a period of three (3) years from the date of purchase for pleasure or non-commercial use/applications, subject to exclusions noted herein. SeeDevil™ LED Balloon Lights purchased for commercial or rental use/applications from an authorized SeeDevil™ dealer or SeeDevil™ in the United States will be warranted against defects in materials or workmanship for a period of one (1) year from date of purchase subject to exclusions noted herein.

DURING THE PERIOD OF WARRANTY: any authorized SeeDevil™ dealer will, free of charge, repair or replace, at SeeDevil's option, any part judged defective by SeeDevil™ due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. Failures other than those resulting from defects in material workmanship which arise solely as a result of owner abuse, use and/or lack of proper maintenance are not covered by this warranty. All parts replaced under warranty become the property of SeeDevil™.

GENERAL EXCLUSIONS from this warranty shall include any failures caused by:

- a. Installation of parts or accessories that are not qualitatively equivalent to genuine SeeDevil™ parts.
- b. Abnormal strain, neglect, or abuse.
- c. Wear and tear – wearing down of parts due to product use.
- d. Lack of proper maintenance.
- e. Accident or collision damage or any act of God.

- f. Product modification

SPECIFIC EXCLUSION from this warranty shall include parts replaced due to normal wear or routine maintenance.

1. Shall include parts replaced due to normal wear or routine maintenance.
2. Excluded from this warranty are any incidental or consequential damages, including loss of use.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to:

1. Operate and maintain the balloon light as specified in the appropriate Owner's Manual.
2. Give notice to an authorized SeeDevil™ dealer of any and all apparent defects within ten (10) days after discovery, and make the machine available at the time for inspection and repairs at such dealer's place of business. You may locate your nearest authorized SeeDevil™ dealer online at www.SeeDevil.com.

Three (3) years of private, non-commercial use

One (1) year for commercial or rental use/applications.

Questions concerning this warranty? Contact SeeDevil™ at:

SeeDevil™
970 Reece St.
San Bernardino, CA, 92411
1-877-659-5476
info@SeeDevil.com

WARRANTY TRANSFER: to transfer any remaining warranty from the original purchaser to any subsequent purchaser, it is imperative that the unit be inspected and registered for warranty by an authorized SeeDevil™ dealer. In order for this warranty to remain in effect, this inspection and registration must take place within ten (10) days after transfer. A reasonable dealer imposed fee may be charged for the inspection.

SeeDevil™ makes no other warranty of any kind, express or implied. Implied warranties of merchantability and fitness for a particular purpose which exceed the obligations and time limits stated in the warranty are hereby disclaimed by SeeDevil™ and excluded from this warranty.



Website

www.SeeDevil.com



Toll Free Number

877-659-5476



Email

info@SeeDevil.com

SeeDevil Pro-Series Balloon Light Kits
Owner's Manual

© 2019 by Rezek Engineering
2nd Edition, July 2019

Any reprinting or unauthorized use without the
written permission of Rezek Engineering is expressly prohibited.
Printed in U.S.A.

Part Number: SD-OM-JUL19-G1

