

USER MANUAL

Smart Touchless Dispenser AA Batter








INSIDE BOX:

1. Dispenser


Please read user manual carefully before using this product.


Product Introduction

Thank you for purchasing our product! In order to control the spreading of bacteria, protect oneself, and truly care for others, we have launched touchless dispenser, a smart & elegant energy-saving table top dispenser. This product is made after carefully experimenting the technology and examining ergonomical designs with a hope to bring forth a pleasant user-experience.

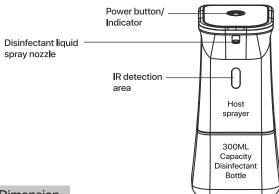


Unit Dimension







-1-

How to add liquid

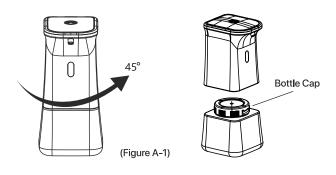




2. Lift the fuselage

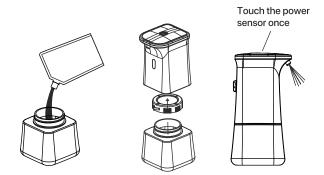

- 3. Fill disinfectant liquid.
- 4. Fix the bottle body again by rotating the clockwise.

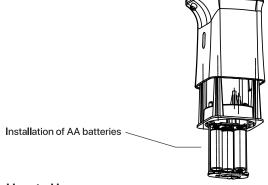

How to Use

- $\begin{tabular}{lll} Step & 1 & : Connect the B type Cable to charge first time 2 hrs before using as shown in Above Figure. \\ \end{tabular}$
- Step 2 : Add appropriate liquid as instructed (Figure A-1)
- Step 3 : Switch ON the machine by tapping on the button. A white light will appear and it will enter into Normal Mode for 1ml dispensing.
- Step 4 : Move your palm towards to the black sensing area of the sprayer, the white indicator light turns on, spraying disinfectant.
- Step 5 : Tap the Button again and it will enter into Active mode and aqua light will appear. This dispenses 2ml liquid.
- Step 6 : Move your palm towards to the black sensing area of the sprayer, the aqua indicator light turns on, spraying disinfectant.
- Step 7 : Move the other palm towards the black sensing area of the sprayer, the white indicator light turns on, spraying disinfectant.

Tip: when the sprayer in not on working, it will enter the standby mode automatically, and it does not need to be turned off manually.

Status	Indicator status	
Turn On	Tap on the power switch, the white light will appear about 0.15 sec.	
Turn Off	Tap on the power switch, the purple light will appear about 0.3 sec.	
Normal Mode Spraying	White light will appear	
Active Mode Spraying	Aqua light will appear	
Low battery	Red light keeps flashing	

Note: Charge for two hours before using first time.

Product Parameter

Product name : Ventis Battery Spec : AA

Bottle Capacity : 300 ML Product size : 100*95*200mm Operating Voltage : DC 3.8V to 4.5V Working humidity : 0%-85% RH

Non warranty regulations:

The product will be under non-warranty regulations concerning the following conditions:

- 1. Unauthorized repair, misuse, collision, negligence, overuse, liquid intake, accident, modification, incorrect use of non product accessories, or tear, alter label, anti-counterfeiting mark
- 2. Beyond the warranty period
- 3. Damage caused by force majeure
- 4. Failure is not the performance failure listed in the performance failure table
- 5. Failure listed in the failure table of products caused by misuse or vandalism

-4-

- 10. In case of water pouring, inversion and inclination, make sure that the battery compartment is filled with liquid in time. If necessary, take out the battery and wipe it dry before continuing to use.
- 11. Due to individual differences, a very small number of people may have allergies during the process. If there are allergies, please stop using, and if necessary, consult a doctor & health expert.
- 12. Please avoid exposing the sensing area of the machine to sunlight or strong light, it will cause sensing error in the spray disinfectant.

Function failure list

Fault phenomenon	Fault cause	Resolution
Can not turn on or off	Battery Discharge	Charge the Battery Again
No indicator	battery Discharge	Recharge the battery
Can not spray	Run out off the disinfection /low or no power	Refill the bottle with disinfectant liquid / Recharge the battery
IR Sensor Not Working	Black sensing area - blacked	Turn off device and clean up the IR area and remove the blockage, restart the device
Automatic spray disinfection	Sensing area is mistakenly induced by strong light	Avoid places exposed to sunlight

Precautions

- 1. Don't put the product into the water or wash the device with water, to avoid electrical short.
- 2. When installing or replacing the disinfectant, do not use the non special disinfectant as an alternative.so as to avoid machine failure.
- 3. Do not block the nozzle with hands or foreign matters, and do not lay down the device body, so as to avoid damage caused by liquid pouring into the machine body.
- 4. If you haven't used the product for a long time, please use clear water to pump and wash it for many times, so as to avoid blockage in the pipeline.
- 5. When the product runs out of power or will not be used for a long time, Kindly remove batteries (AA).
- 6. Please keep the battery out of the reach of children. When the indicator light is on for low battery, the battery needs to be replaced. Please follow the manual to change the battery.
- 7. Do not use product in sun light/low temperature, fire and other harsh environment.
- 8. Do not disassemble or repair the product by yourself.
- 9. Do not tilt the bottle when installing or replacing hand disinfection. If a small amount of liquid outflow is normal, it can still be used normally after wiping.
- 10. If bottle will be move around the opposite side, the Internal electrical parts will be faulty.

-5-

Liquid use:

The Ventis model is available in 3 different model-Gel, Spray & foam. Failure to use the correct liquid will lead to malfunctioning.

For foaming soap:

Please use a standard foaming solution.

For Spray sanitizer:

Use sanitizer liquid for the spray. Make sure the solution is thin liquid hand sanitizer.

For gel sanitizer/liquid handwash:

Use liquid handwash or gel sanitizer only.