


Removing the Panel on the Edge (to check connections or replace the circuit board)

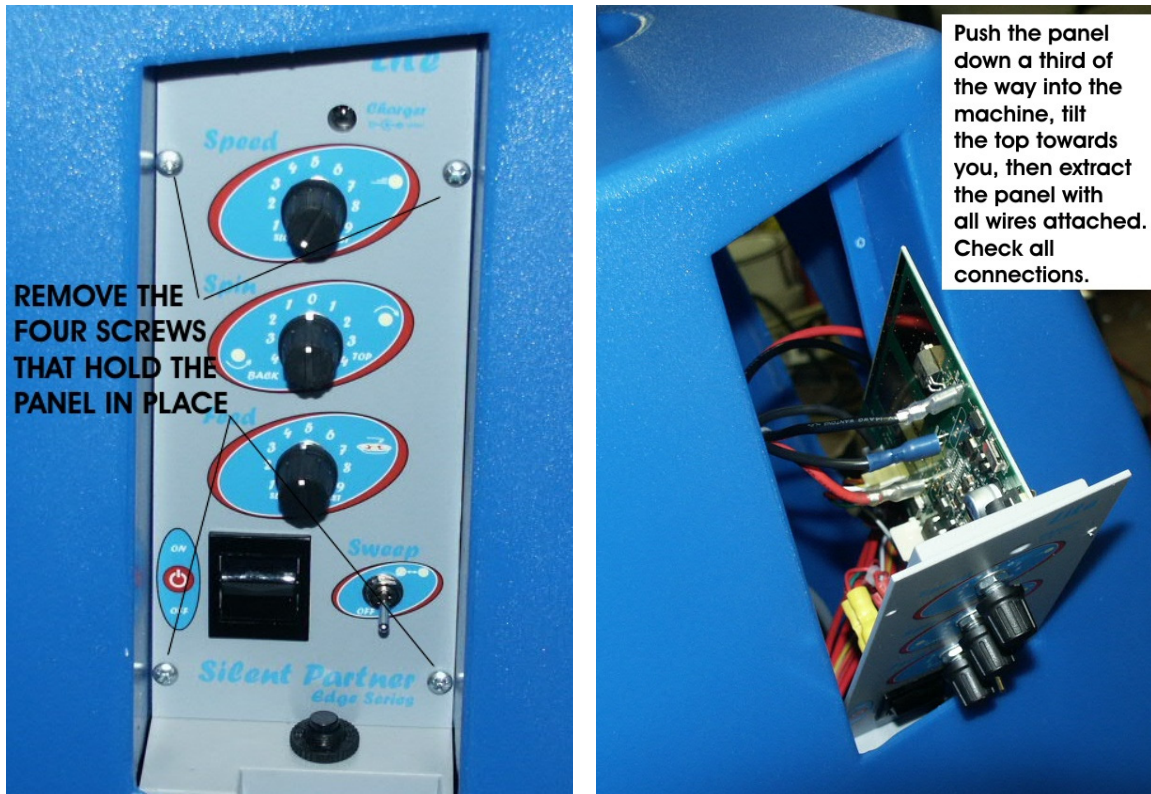

Depending on what you need to do, you can either verify that all connections at the panel are secure, or you can proceed to replace the circuit board.

The circuit board is held on the panel by the four nuts that are nestled below the Speed, Spin and Feed knobs. Remove the knobs and then the nuts.

If you are replacing the circuit board, transfer all wires and connectors one by one to the new board before removing the old board from the panel. Be careful not to misplace wires on the new board. You do not need to remove the wires from the power switch or the circuit breaker.