



RV ELECTRONICS
MANUFACTURER OF RECREATIONAL VEHICLE ACCESSORIES



CARAVAN
CAMPER TRAILER
4WD'S
RV'S
TRADIES

PROGRAMMABLE LED WATER LEVEL INDICATOR

TRIPLE TANK - FITTING INSTRUCTIONS

FOR USE WITH RV ELECTRONICS PROGRAMMABLE SENDER PROBES ONLY. SUITABLE FOR PLASTIC AND METAL TANKS.

STEP 1: Triple gauge tank 1 example: Drain the water out of the tanks that you wish to calibrate and using a small flat blade screwdriver, insert it into the slots on either side of the gauge and gently lift the front cover off. Once removed you will see a 6 position DIP switch and a set button on the back of the gauge board.

STEP 2: To set tank 1 (display left readout) We need to make sure the sender is connected to the top plug. DIP position 1 is used to set empty and DIP position 2 to set full.


STEP 3: To set left display empty, slide the DIP switch in position 1 to on, press and hold **both** front TEST button **and** the rear SET button at the same time until the 2 bottom LEDs on the left gauge flash. (Make sure you return the DIP switch to off when done.)

STEP 4: To set left display full, fill the water tank to full, slide the DIP switch in position 2 to on, press and hold **both** front TEST button **and** the rear SET button at the same time until the top full LED on the left gauge flashes. (Make sure you return the DIP switch to off when done.)

STEP 5: Repeat the process for the display centre gauge by connecting a sender to the centre plug and using DIP position 3 for tank 2 empty and DIP position 4 for tank 2 full. Once this is done repeat the process for the display right gauge by connecting a sender to the bottom plug and using DIP position 5 for tank 3 empty and DIP position 6 for tank 3 full.

If you make a mistake or want to reset a tank to the factory settings, simply slide both the empty and full DIP switches to on for the tank you wish to reset. (Tank 1=1+2, Tank 2 = 3+4 and Tank 3 = 5+6).

Press and hold the TEST and SET buttons for 5 - 10 seconds until all the gauge LEDs flash on and off. Do this for **ONE** tank at a time. If you want to do a full factory reset of all tanks use this procedure with **ALL** DIP positions turned to on. (Make sure you return all DIP switches to off when done.)

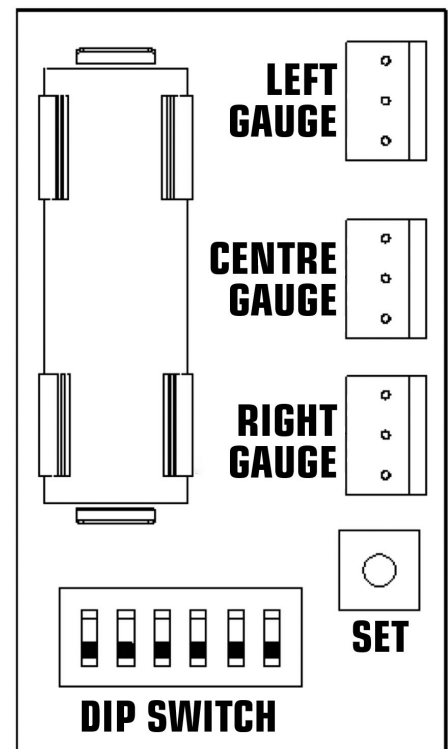

Use this outline as your cutting template

WARNING

DO NOT UNDER ANY CIRCUMSTANCES USE THIS WATER LEVEL INDICATOR IN FLAMMABLE LIQUIDS. THIS PRODUCT IS FOR USE IN WATER ONLY.

MADE IN AUSTRALIA BY
RV ELECTRONICS PTY LTD

1 ARDTORNISH STREET, HOLDEN HILL, SA 5088
(08) 8261 3500 | info@rvelectronics.com.au | rvelectronics.com.au